HONDA

BLADE

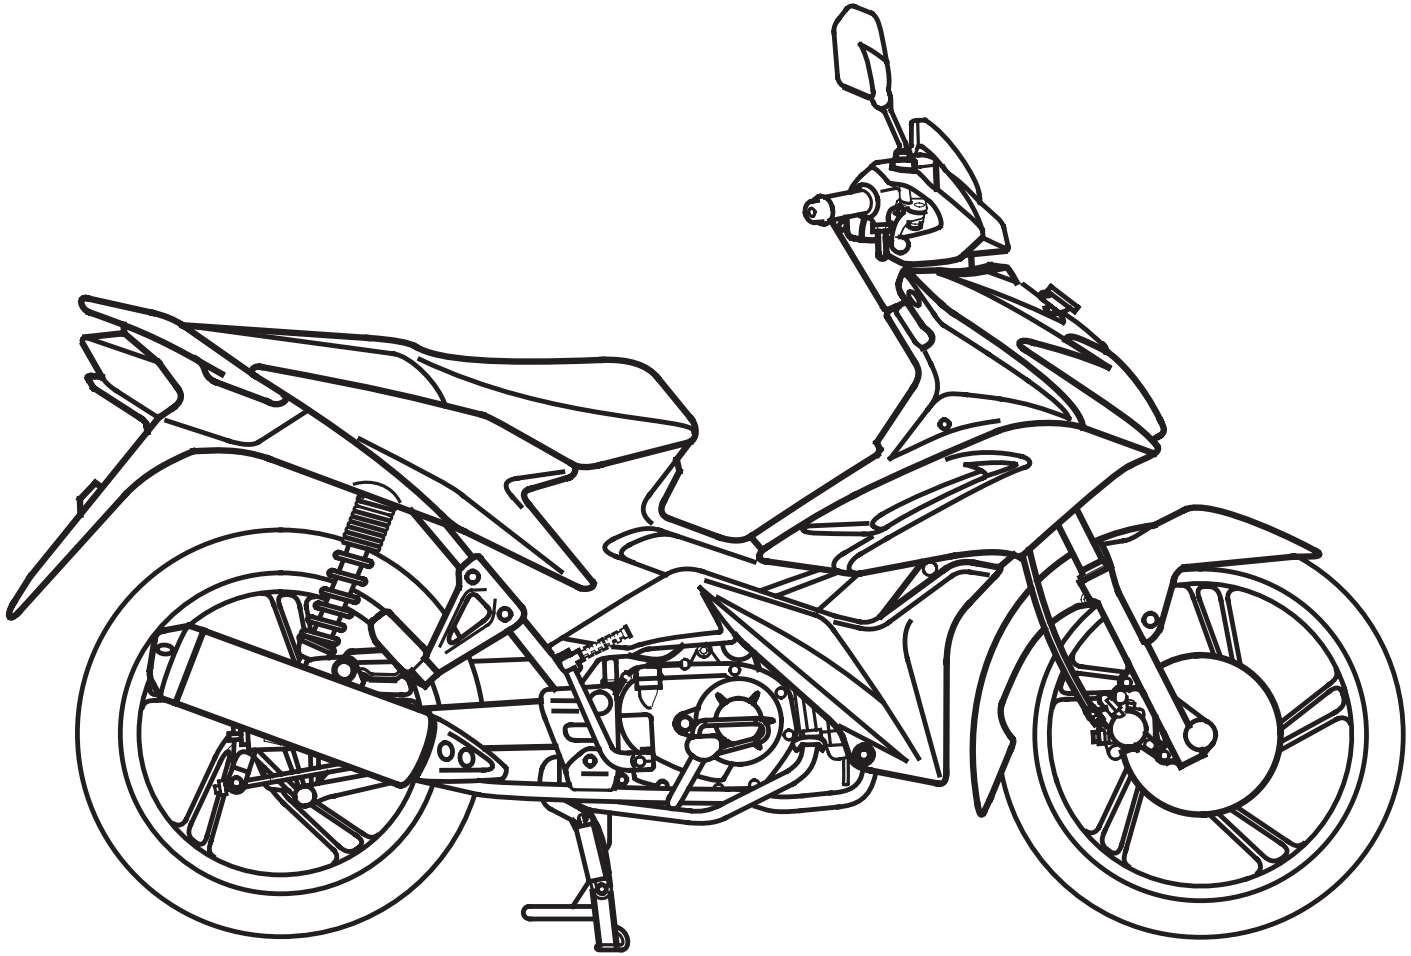

PARTS CATALOG

EDISI 1

TST 08 PC 004

PT Astra Honda Motor

DAFTAR ISI

PETUNJUK PEMAKAIAN 1

KELOMPOK MESIN 2

KELOMPOK RANGKA 3

INDEKS PART NUMBER 4

INDEKS DESCRIPTION 5

PETUNJUK PEMAKAIAN PARTS CATALOG

Parts catalog ini digunakan untuk memesan/mencari parts pengganti; di dalamnya terdapat semua parts dan waktu kerja standard (F.R.T.) untuk tipe sepeda motor **HONDA BLADE**

I. CARA MEMESAN PARTS

1. Informasi yang diperlukan

Pemesan parts pengganti sebaiknya mencantumkan Part Number dan Nomor seri seperti diterangkan dibawah. Hal ini diperlukan oleh karena setiap perubahan dan modifikasi pada parts telah didaftarkan di HONDA berikut nomor part dan Nomor seri yang bersangkutan.

Nomor-nomor yang dibutuhkan :

(a) Parts mesin : Part Number dan Nomor seri mesin

(b) Parts rangka : Part Number dan Nomor seri rangka

(c) Parts karburator : Part Number dan Nomor identifkasi karburator

2. Perubahan-perubahan

Perubahan-perubahan pada parts catalog ini akan dimuat dalam Parts Bulletin yang diterbitkan sebagai pelengkap dari pada parts catalog ini. Bila jumlah perubahan-perubahan cukup banyak, pada suatu waktu dapat diterbitkan edisi baru yang disesuaikan daripada parts catalog ini, dan masing-masing edisi akan diberikan nomor urut pada sampulnya. Kami menganjurkan agar Sdr. selalu menyimpan parts bulletin bersama parts catalog ini, agar informasi parts Sdr. selalu lengkap dan up-to-date.

II. CARA MEMBACA PARTS CATALOG

1. Susunan nomor part

(contoh) Parts umum (General parts)

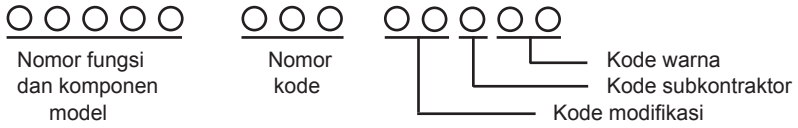

(contoh) Baut-baut, mur-mur dan standar parts lain.

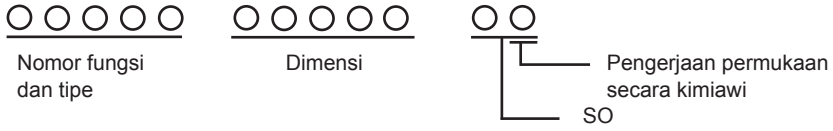

2. Kode warna

Kode warna pada bagian belakang nomor part menunjukkan warna part tersebut. Kode-kode ZA, ZB, ZC dan seterusnya tidak secara langsung menunjukkan warna part, melainkan warna dapat dilihat dari kode HONDA pada kolom "Part Number" di sebelahnya nomor part yang bersangkutan.

Kode warna pabrik seperti FMB, PFW, ABM dsbnya secara langsung menunjukkan warna part seperti ditunjukkan pada tabel berikut :

Kode Warna		Warna
Kode pabrik	Kode HONDA	
FMB	NH-1	Black
FMK	R-201	Magna Red
FMI	RP-140M	Vortex Purple Metalic
FMH	NH-131M	Starlight Silver Metalic

3. Singkatan-singkatan

Dibawah ini adalah daftar singkatan-singkatan yang digunakan di dalam parts catalog, sebagai berikut :

ASSY..... Assembly
COMP ..... Complete.
R..... Right
L. ..... Left
STD ..... Standard
MM ..... Milimeter
G ..... Gram
T(22)..... Tooth (22Teeth)
A..... Ampere
V..... Volt
W..... Watt
WL..... With labelling
WOL. ..... Without labelling
KPH..... Kilometers per hour
L.E.D ..... Light emitting diode
MPH ..... Miles per hour
L (100L)..... Link(100 Links)
A.C ..... Alternating current
D.C ..... Direct current
IN ..... Inlet
EX. ..... Exhaust
FR ..... Front
RR ..... Rear
Hex..... Hexagonal
A.M..... Attaching mark
T.M ..... Transcript mark
C.D.I ..... Capacitive Discharge Ignition

4. Dimensi-dimensi

Semua ukuran diberikan dalam satuan milimeter (mm) kecuali untuk peluru baja (steel balls), ban luar (tires) dan ban dalam (tire tubes).

Part	Contoh	Pengertian
Bolt (Screw)	6x12	diameter 6mm, panjang 12mm
Pin	8x14	diameter 8mm, panjang 14mm
O-Ring	9.5x1.6	diameter 9,5mm, tebal 1,6mm
Oil seal	14x24x5	diameter dalam 14 mm, diameter luar 24 mm, tebal 5mm
Tube	5x130	diameter dalam 5mm, panjang 130mm

5. Parts yang digantikan oleh part lain

Nomor part yang diletakkan dibawah nama part pada kolom "Description" menunjukkan bahwa nomor part disebelahnya telah diganti dengan nomor part tersebut. Pergantian parts sedemikian (supersedence) dapat dilakukan oleh HONDA tanpa pemberitahuan apapun.

6. Part yang dipersatukan (Assemblies)

Part pada gambar yang dikelilingi dengan garis terputus-putus tersedia sebagai parts yang dipersatukan. Masing-masing komponen daripada susunan parts itu dapat juga diperoleh secara terpisah.

7. Jumlah yang diperlukan

Angka didalam kolom "Q'ty" menunjukkan jumlah part tersebut yang dipakai di dalam bagian yang bersangkutan.

8. Illustrasi

Gambar-gambar parts yang dimuat di dalam part catalog ini disediakan untuk mempermudah pengenalan part dan mungkin berbeda daripada bentuk part sebenarnya.

9. Nama part

Nama part tidak diterjemahkan kedalam bahasa Indonesia, melainkan tetap menggunakan istilah resminya didalam bahasa Inggris, agar seragam dengan istilah internasional yang dipakai di seluruh dunia oleh Honda Motor Co.,Ltd.

10. Model dan nomor seri yang berlaku

Model-model, kode daerah pemasaran dan nomor seri yang berlaku didalam parts catalog ini dapat diidentifikasi sebagai berikut dibawah ini.

Model	Kode daerah pemasaran	Tipe	No. Seri Mesin yang berlaku mulai	No. Seri Rangka yang berlaku mulai	No. Identifikasi Karburator yang berlaku
ANF110	2IN	Indonesia	JBB*E*******	MH1JBB****K******	PB7UA A

* Dari nomor identifikasi karburator, hanya dipakai bagian yang digaris bawahi didalam contoh dibawah

PB7UA A A KC

11. Lokasi nomor seri pada sepeda motor

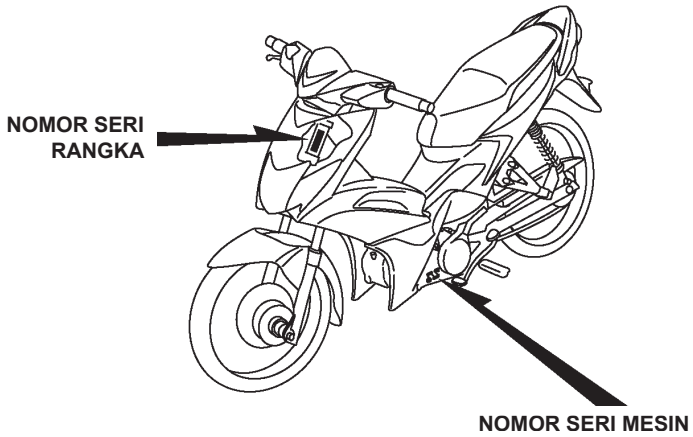

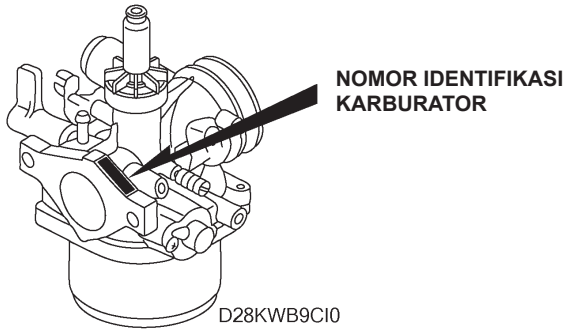

III. CARA MEMAKAI FLAT RATE TIME (F.R.T.)

F.R.T. (Flate Rate Time) yang terletak di halaman paling akhir buku ini dipakai untuk menentukan waktu kerja standard yang diperbolehkan untuk penggantian parts.

F.R.T untuk parts yang tidak tercantum didalam buku ini harus ditentukan dari jenis pekerjaan yang erat hubungannya dengan penggantian parts tersebut.

1. F.R.T. didasarkan atas kondisi servis sebagai berikut :

a. Disamping waktu servis yang sebenarnya ditambahkan lagi waktu ekstra.

b. Waktu standard yang ditentukan didasarkan atas persyaratan bahwa alat-alat servis yang diperlukan seperti terdaftar didalam buku pedoman reparasi sudah siap tersedia, dan pekerjaan dilakukan oleh seorang mekanik dengan ketrampilan normal.

c Waktu yang dibutuhkan untuk pemeriksaan dan percobaan pemakaian setelah diservis, dimasukkan juga kedalam F.R.T.

2. Metode perhitungan

Waktu pekerjaan ditulis dalam sepersepuluh jam untuk mempermudahkan perhitungan.
(contoh) 0.3 = 18 menit
5.6 = 5 jam dan 36 menit

DAFTAR KONVERSI			
Jam	**Menit**	**Jam**	**Menit**
0.1	6	0.6	36
0.2	12	0.7	42
0.3	18	0.8	48
0.4	24	0.9	54
0.5	30	1.0	60

3. Menghitung F.R.T.

Jika beberapa pekerjaan dilakukan sekaligus, hitunglah sebagai berikut :

a. Pekerjaan yang tidak berhubungan
F.R.T. untuk pekerjaan diperoleh dengan menjumlahkan F.R.T. untuk setiap part yang diganti
(contoh) Penggantian cylinder dan clutch spring

Service item/Bagian yang diservis	**F.R.T.**
Cylinder	1.4
Clutch spring	0.7

F.R.T. untuk pekerjaan ini adalah : 1.4 + 0.7 = 2.1

b. Pekerjaan yang terulang

Ambillah F.R.T. untuk part terakhir yang akan diganti.

(contoh) Penggantian piston dan cylinder head gasket.

Service item/Bagian yang diservis	F.R.T.
Cylinder head gasket	1.0
Piston	1.5

F.R.T. untuk pekerjaan ini adalah : 1.5

c. Pekerjaan yang sebagian berhubungan

Jumlahkan F.R.T. untuk semua parts yang diganti dan kurangi dengan F.R.T untuk pekerjaan yang terulang.

(contoh) Penggantian gear shift drum dan crankshaft assembly.

Service item/Bagian yang diservis	F.R.T.
Gearshift drum	* 3.9
Crankshaft	* 4.1
Pembongkaran crankcase	* 3.7

F.R.T. untuk pekerjaan ini adalah : (3.9 + 4.1) - 3.7 = 4.3

Pekerjaan yang terulang adalah pembongkaran crankcase.

* F.R.T. dengan tanda (*) termasuk menurunkan dan memasang kembali mesin.

4. Pengerjaan lain disamping penggantian parts

a. Penurunan dan pemasangan

No.	Service item/Bagian yang diservis	F.R.T.
1.	Mesin	1.5
2.	Kepala silinder	1.1
3.	Karburator	0.4

No.	Service item/Bagian yang diservis	F.R.T.
1.	Pemeriksaan waktu pengapian	0.2
2.	Penyetelan dan pembersihan busi	0.1
3.	Penyetelan tappet	0.3
4.	Penyetelan stasioner karburator	0.1
5.	Pemeriksaan oli mesin (tidak termasuk penggantian oli mesin)	0.1
6.	Penyetelan kopling	0.1
7.	Pembersihan elemen saringan udara	0.3
8.	Pengukuran tekanan kompressi	0.1
9.	Pemeriksaan cairan baterai dan berat jenisnya	0.2
10.	Pengukuran tinggi pelampung karburator	0.6
11.	Pembersihan saringan oli mesin	0.6
12.	Penyetelan gas tangan	0.1

Rangka

No.	Service item/Bagian yang diservis	F.R.T.
1.	Penyetelan rem depan	0.1
2.	Penyetelan rem belakang	0.1
3.	Pemeriksaan cara kerja rem	0.1
4.	Penyetelan arah lampu depan	0.1
5.	Rantai roda (termasuk penyetelan tegangan rantai tetapi tidak termasuk penggantian sprocket)	0.1

b. Pembongkaran

No.	Service item/Bagian yang diservis	F.R.T.
1.	Karburator	0.7

ENGINE GROUP

E-1 CYLINDER HEAD COVER

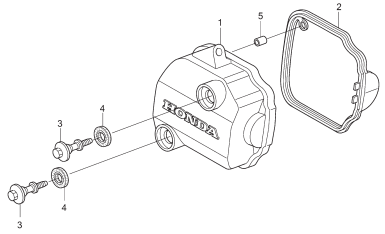

E-2 CYLINDER HEAD

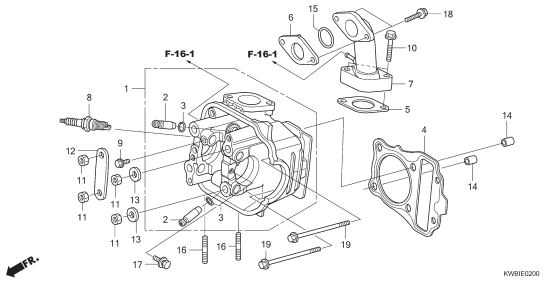

E-3 CAMSHAFT/VALVE

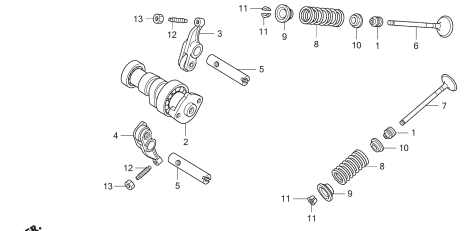

E-4 CAM CHAIN/TENSIONER

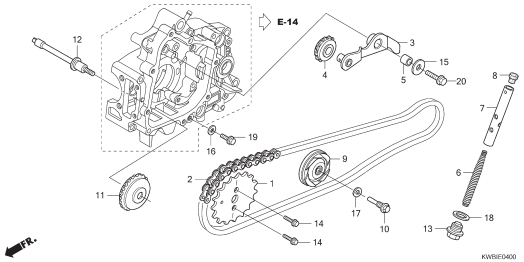

E-5 CYLINDER

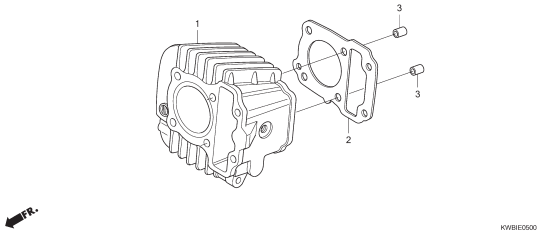

E-6 RIGHT CRANKCASE COVER

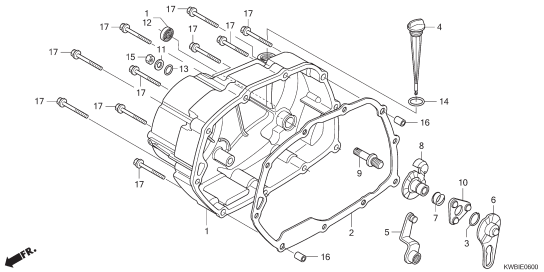

E-7 ONE WAY CLUTCH

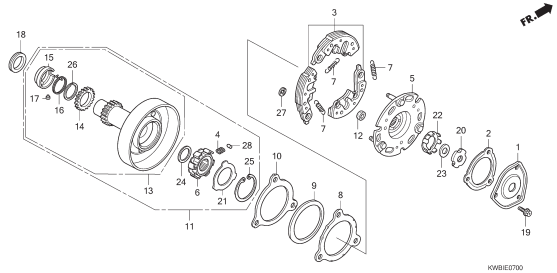

E-8 CLUTCH

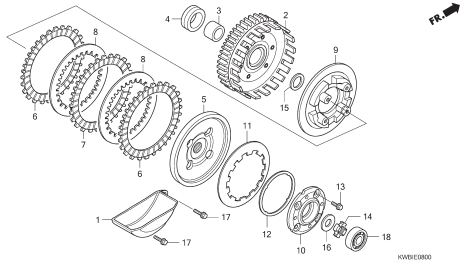

E-9 OIL PUMP

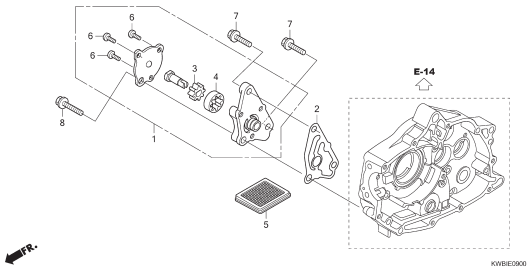

2

ENGINE GROUP

E-10 LEFT CRANKCASE COVER

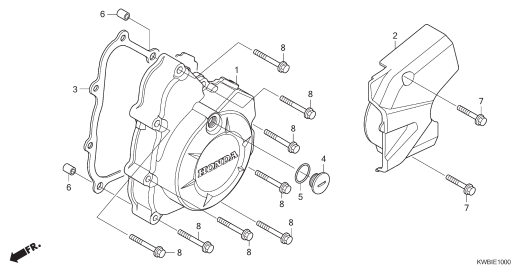

E-11 GENERATOR

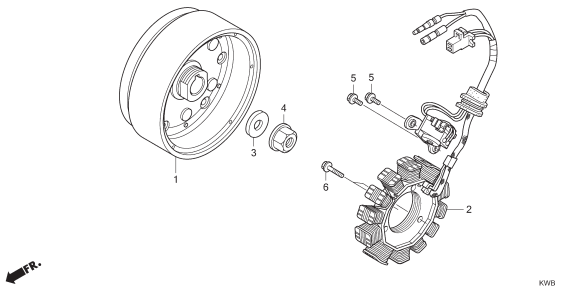

E-12 STARTING CLUTCH

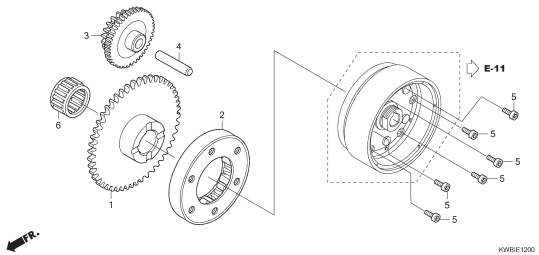

E-13 STARTING MOTOR

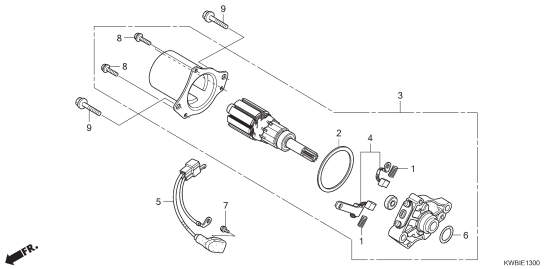

E-14 CRANKCASE

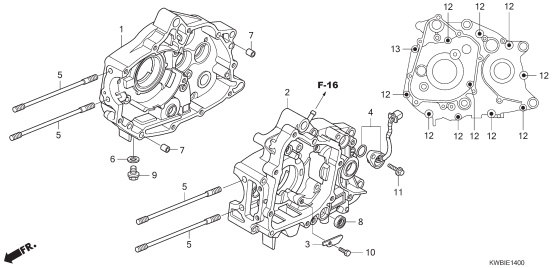

E-15 CRANKSHAFT/PISTON

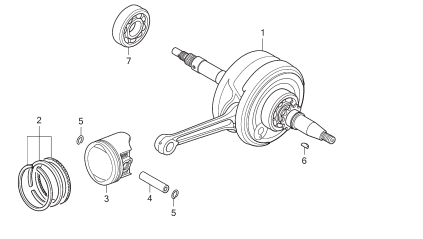

E-16 TRANSMISSION

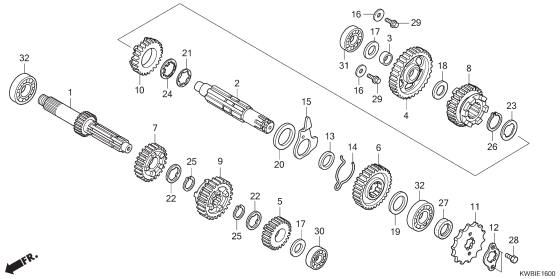

E-17 GEARSHIFT DRUM

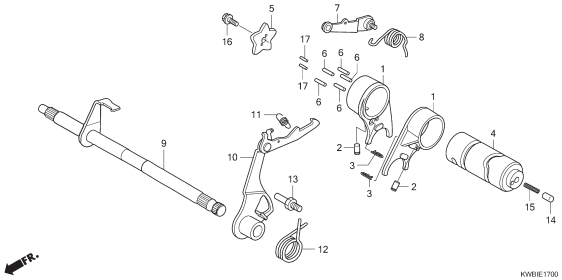

E-18 KICK STARTER SPINDLE

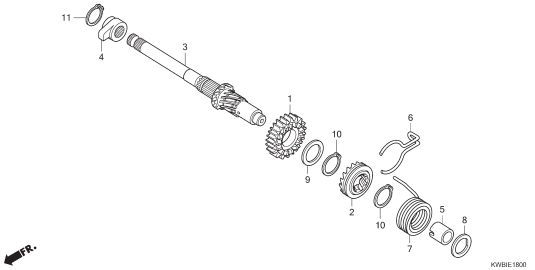

E-19 **CARBURETOR**

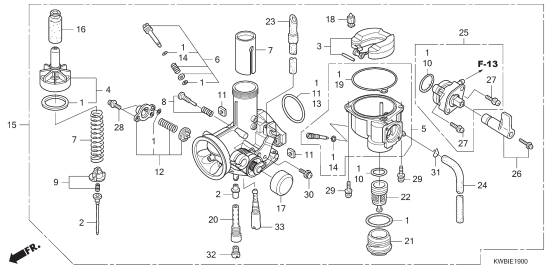

FRAME GROUP

F-1 HEADLIGHT

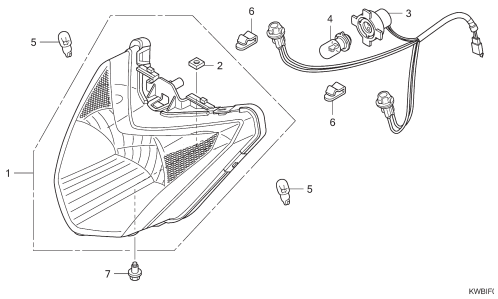

F-2 METER

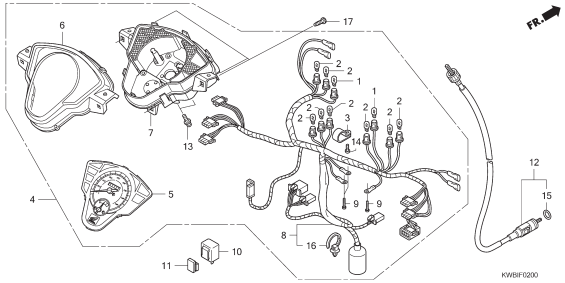

F-3 SWITCH / CABLE

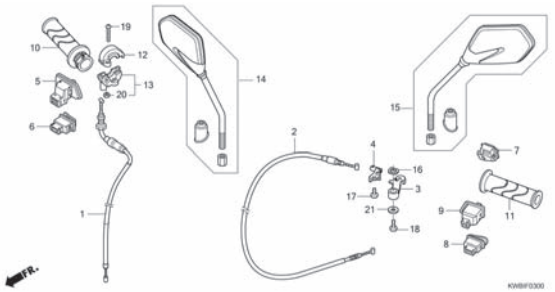

F-4 FR. BRAKE MASTER CYLINDER

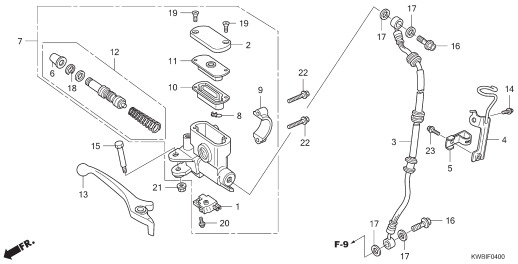

F-5 HANDLE PIPE/ HANDLE COVER

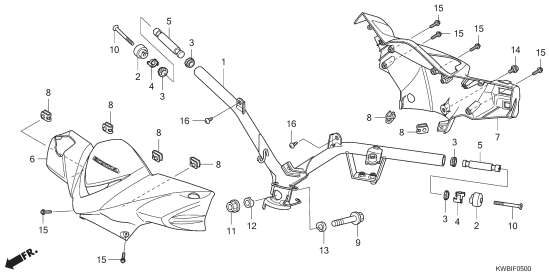

F-6 STEERING STEM

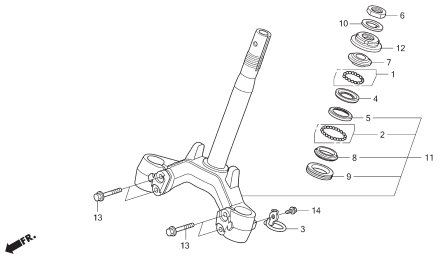

F-7 FRONT FENDER

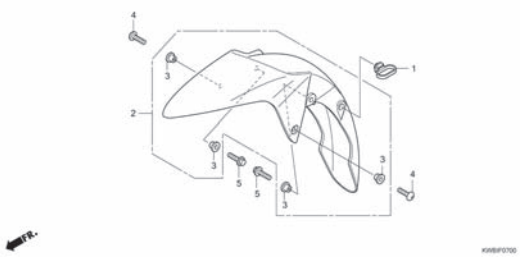

F-8 FRONT FORK

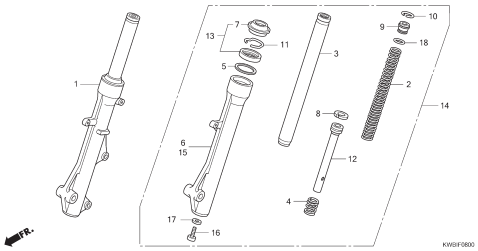

F-9 FRONT BRAKE CALIPER

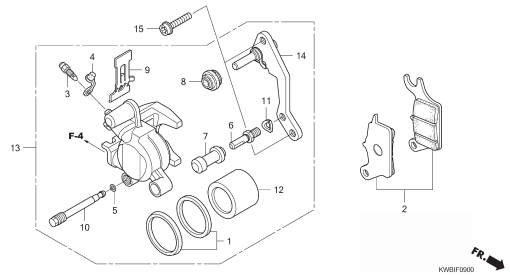

3

FRAME GROUP

F-10 FRONT WHEEL

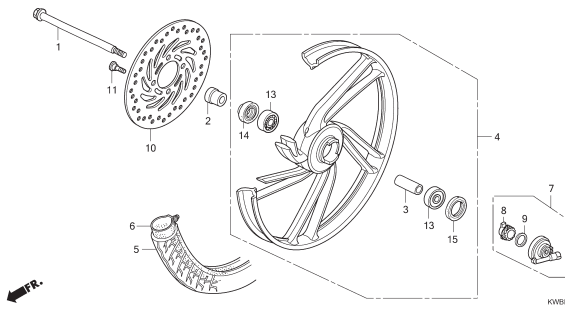

F-11 REAR BRAKE PANEL

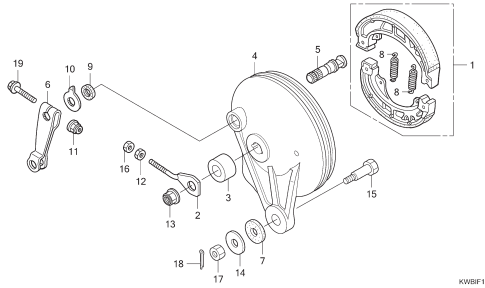

F-12 REAR WHEEL

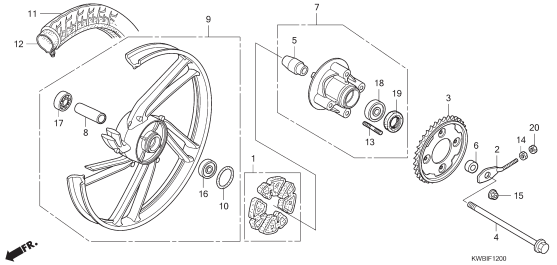

F-13 FUEL TANK

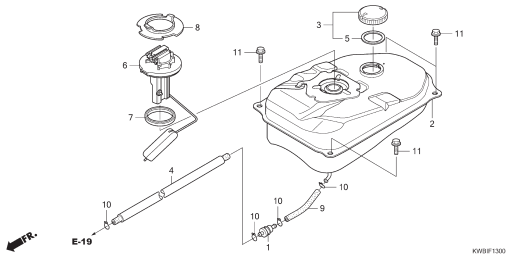

F-14 SEAT / BATTERY

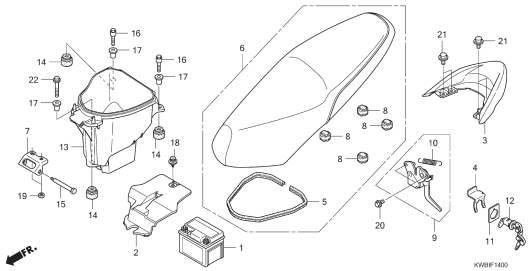

F-15 BODY COVER

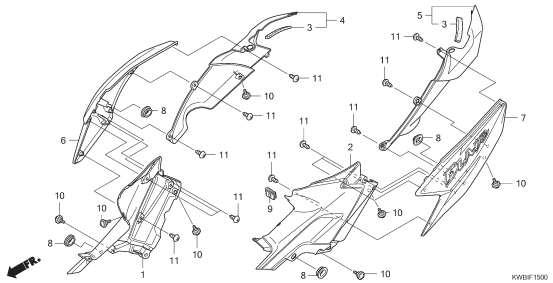

F-16 AIR CLEANER

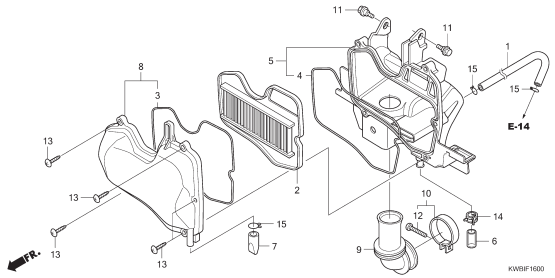

F-16-1 AIR SUCTION VALVE

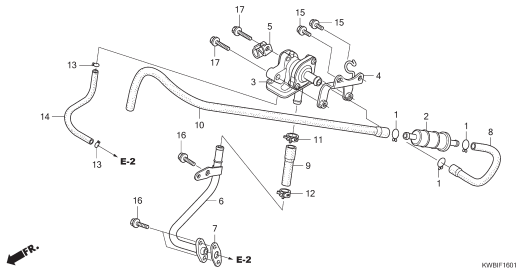

F-17 EXHAUST MUFFLER

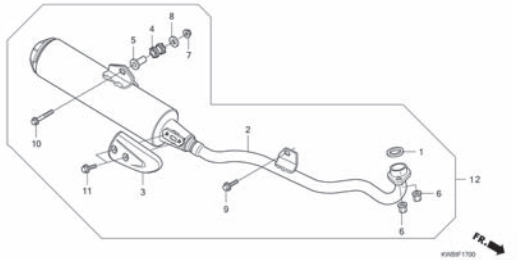

3

FRAME GROUP

F-18 PEDAL/KICK STARTER ARM

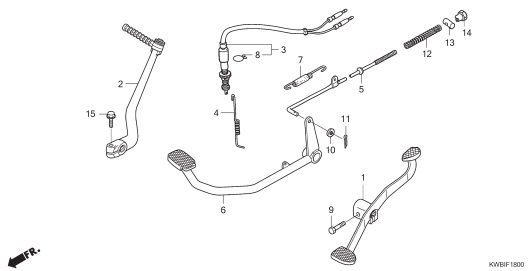

F-19 STEP

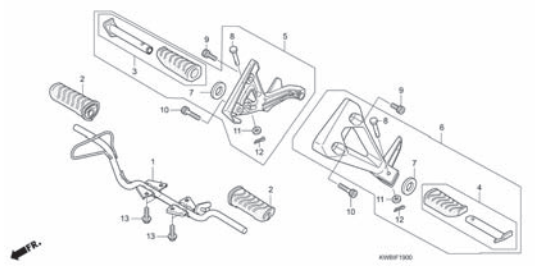

F-20 STAND

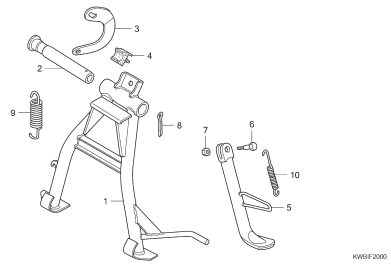

F-21 SWINGARM

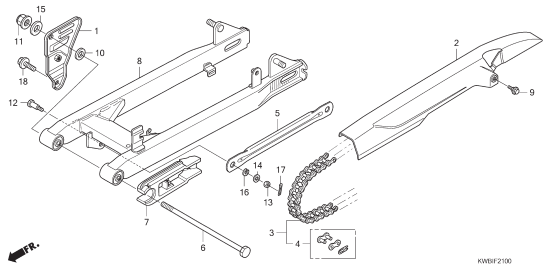

F-22 REAR CUSHION

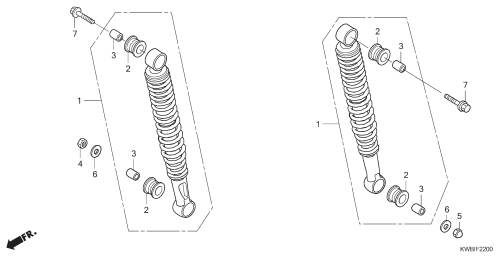

F-23 REAR FENDER

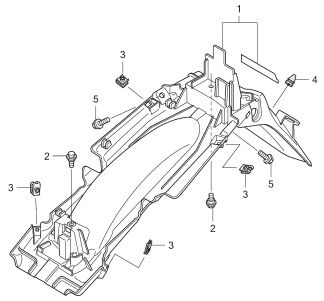

F-24 FRONT WINKER

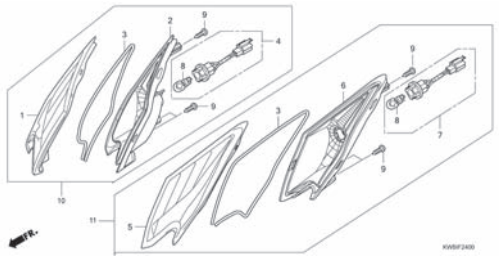

F-25 REAR COMBINATION LIGHT

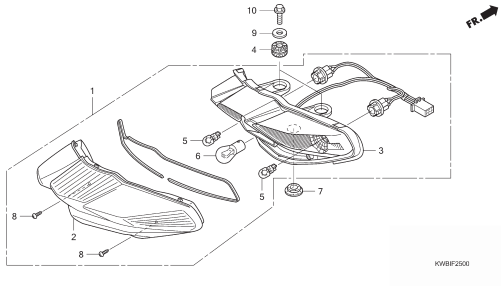

F-26 WIRE HARNESS

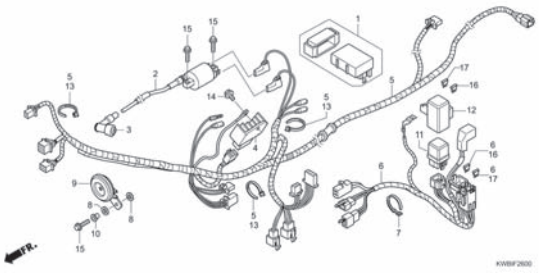

3

FRAME GROUP

F-27 **FRAME BODY**

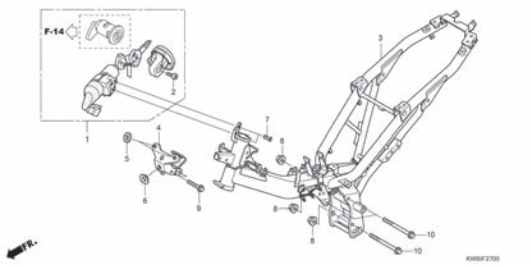

F-28 **FRONT COVER**

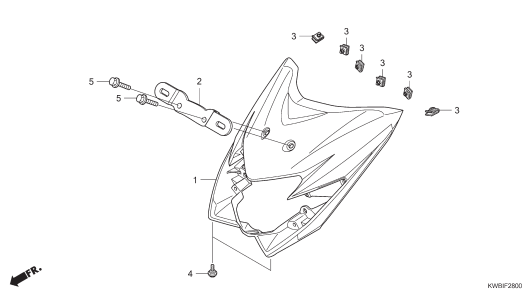

F-29 **MAIN PIPE COVER**

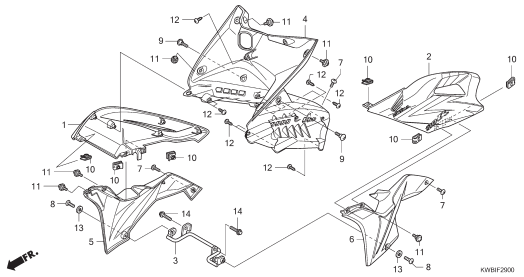

F-30 **CAUTION LABEL**

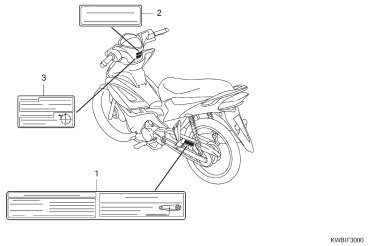

F-31 **MARK/ STRIPE**

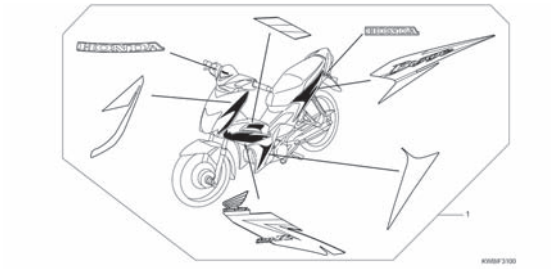

F-32 **TOOLS**

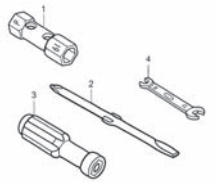

3

E - 1

Cylinder Head Cover

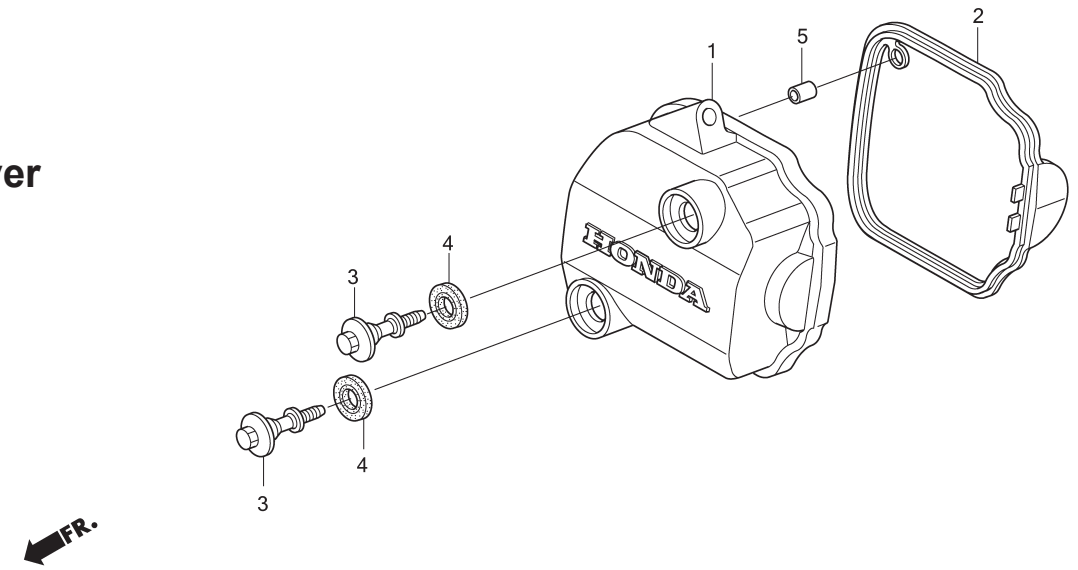

KWBIE0100

	Service item	F.R.T.
1	COVER, CYLINDER HEAD.....	0.1
2	GASKET, CYLINDER HEAD COVER..	0.1

No.	Part Number	Description	QTY	Notes
1	12310-KWB-600	COVER COMP., CYLINDER HEAD	1	
2	12391-KWB-600	GASKET, HEAD COVER	1	
3	90017-GCC-000	BOLT, HEAD COVER	2	
4	90543-MV9-670	RUBBER, MOUNTING	2	
5	90701-KFM-900	DOWEL PIN, SPECIAL, 8X14	1	

E - 2

Cylinder Head

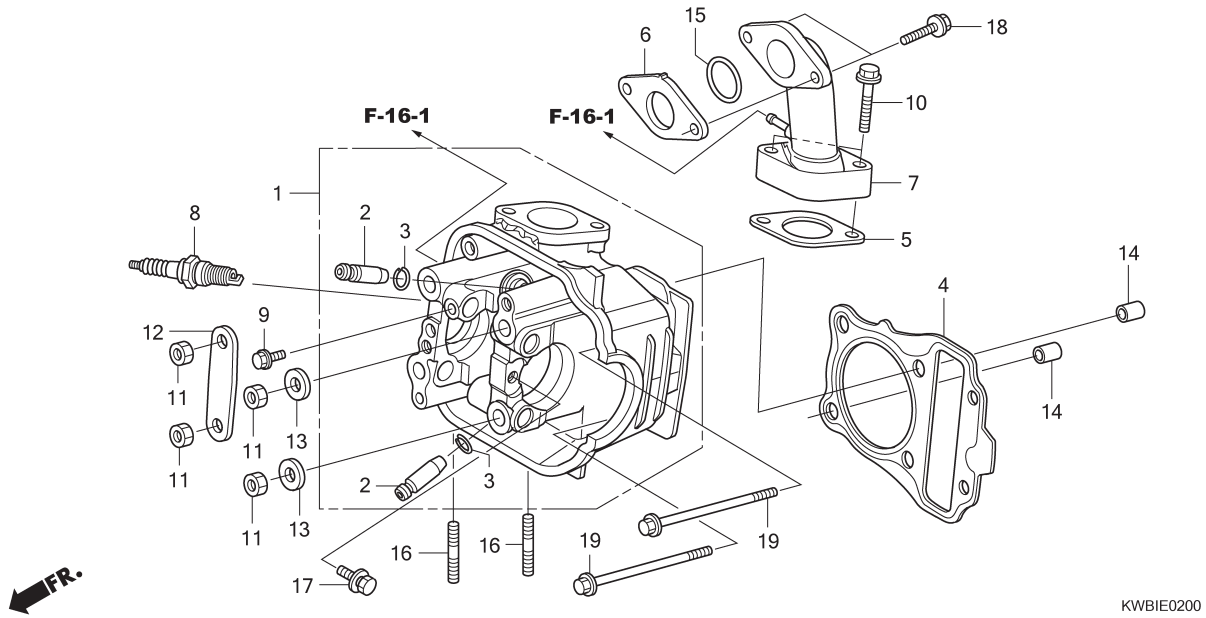

	Service item	F.R.T.
1	HEAD, CYLINDER	1.7
	.INCLUDES: Valve adjust and reface.	
2	GUIDE, INTAKE VALVE(ONE)	1.7
	.INCLUDES: Reaming	
	.INCLUDES: Valve adjust and reface.	
	GUIDE, EXHAUST VALVE(ONE)	1.7
	.INCLUDES: Reaming	
	.INCLUDES: Valve adjust and reface.	
	GUIDE, VALVE :FOR 1 VEHICLE	2
	.INCLUDES: Reaming	
	.INCLUDES: Valve adjust and reface.	
4	GASKET, CYLINDER HEAD	0.8
6	INSULATOR, THROTTLE BODY/ CARBURETOR	0.2
7	MANIFOLD, INTAKE	0.3
8	PLUG, SPARK	0.1

No.	Part Number	Description	QTY	Notes
1	12200-KWB-921	HEAD COMP., CYLINDER	1	
2	12204-KVY-900	GUIDE, VALVE	2	
3	12206-KPL-900	CLIP, VALVE GUIDE	2	
4	12251-KWB-601	GASKET, CYLINDER HEAD	1	
5	16201-KWB-921	GASKET, CARBURETOR INSULATOR	1	
6	16211-KPH-900	INSULATOR, CARBURETOR	1	
7	17110-KWB-921	PIPE COMP., INLET	1	
8	31916-KWB-601	PLUG, SPARK (CPR6EA-9S)	1	
	31926-KWB-601	PLUG, SPARK (U20EPR9S)	(1)	
9	90002-KWB-600	BOLT, FLANGE, 5X12	1	
10	90004-GHB-690	BOLT, FLANGE, 6X32	2	
11	90201-GCC-000	NUT, HEX., 7MM	4	
12	90401-KVY-900	PLATE, PLUNGER	1	
13	90402-KWB-600	WASHER, 7.2X16X2.5	2	
14	90701-KFM-900	DOWEL PIN, SPECIAL, 8X14	2	
15	91304-GB1-900	O-RING, 25X2.4	1	
16	92900-08032-0E	BOLT, STUD, 8X32	2	
17	93404-06012-00	BOLT-WASHER, 6X12	1	
18	96001-06022-00	BOLT, FLANGE, 6X22	2	
19	96001-06100-00	BOLT, FLANGE, 6X100	2	

E - 3

Camshaft / Valve

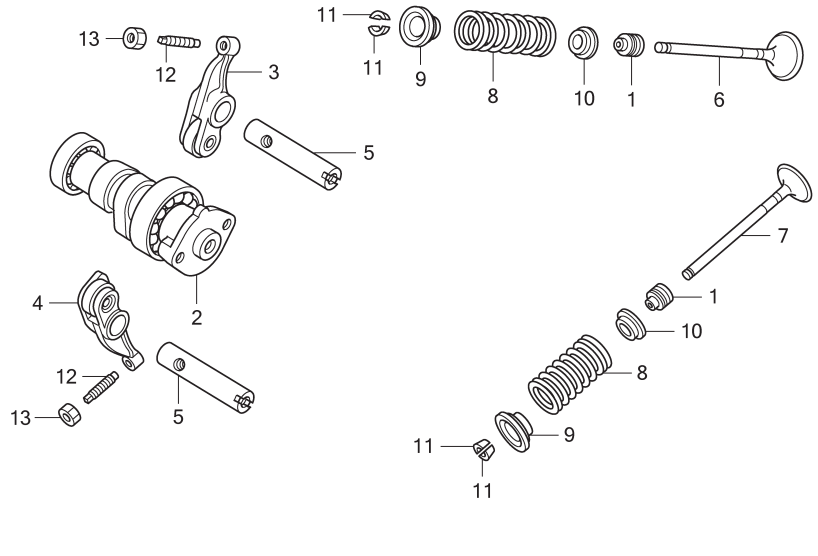

KWBIE0300

	Service item	F.R.T.
2	CAMSHAFT	1
	.INCLUDES: Valve adjustment	
3	ARM, INTAKE VALVE ROCKER(ONE)	1
	.INCLUDES: Valve adjustment	
4	ARM, EXHAUST VALVE ROCKER (ONE).....	1
	.INCLUDES: Valve adjustment	
	ARM, VALVE ROCKER :FOR 1 VEHICLE.....	1
	.INCLUDES: Valve adjustment	
6	VALVE, INTAKE(ONE).....	1.3
	.INCLUDES: Refacing	
7	VALVE, EXHAUST(ONE).....	1.3
	.INCLUDES: Refacing	
	VALVE :FOR 1 VEHICLE.....	1.5
	.INCLUDES: Refacing	
8	(1,9,10,11) SPRING AND/OR STEM SEAL, INTAKE VALVE(ONE).....	1.1
	SPRING AND/OR STEM SEAL, EXHAUST VALVE(ONE).....	1.1
	SPRING AND/OR STEM SEAL, VALVE :FOR 1 VEHICLE.....	1.2

No.	Part Number	Description	QTY	Notes
1	12209-GB4-682	SEAL, VALVE STEM	2	
2	14100-KWB-920	CAMSHAFT COMP.	1	
3	14430-KVY-900	ARM COMP., IN. VALVE ROCKER	1	
4	14440-KVY-900	ARM COMP., EX. VALVE ROCKER	1	
5	14451-KWB-600	SHAFT, ROCKER ARM	2	
6	14711-KWB-600	VALVE, IN.	1	
7	14721-KVY-900	VALVE, EX.	1	
8	14751-KWB-600	SPRING, VALVE	2	
9	14771-GB4-680	RETAINER, VALVE SPRING	2	
10	14775-KVY-900	SEAT, VALVE SPRING	2	
11	14781-MA6-000	COTTER, VALVE	4	
12	90012-KWB-600	SCREW, TAPPET ADJUSTING	2	
13	90206-001-000	NUT, TAPPET ADJUSTING	2	

E - 4

Cam Chain / Tensioner

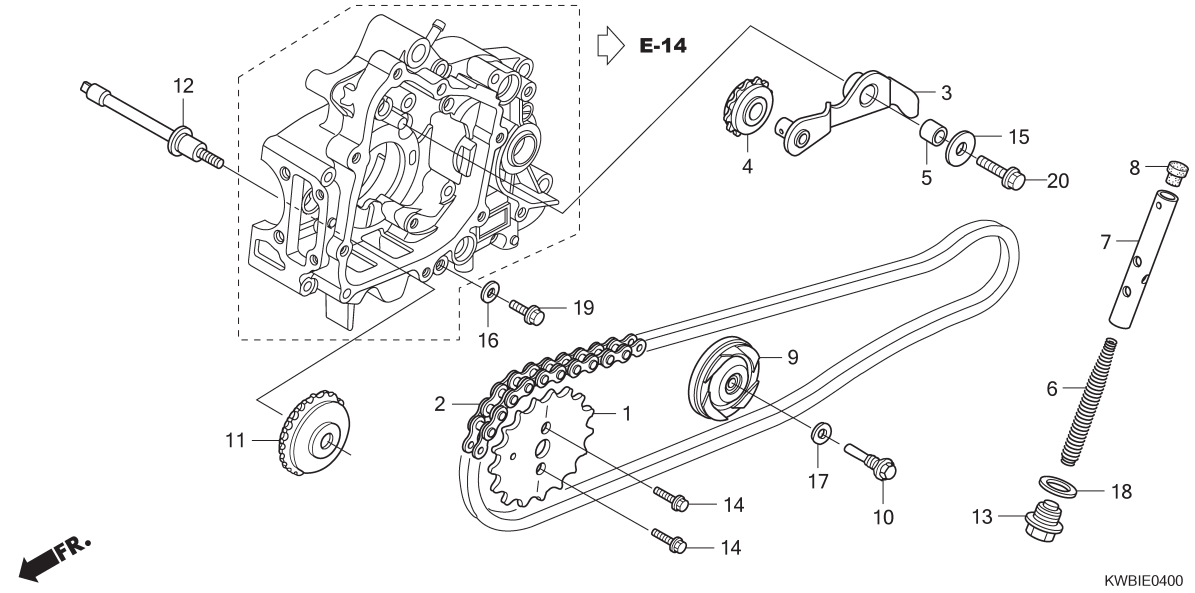

	Service item	F.R.T.
1	SPROCKET, CAM	0.4
2	CHAIN, CAM	1.6
3	ARM, CAM CHAIN TENSIONER	0.6
4	ROLLER(S), CAM CHAIN TENSIONER	0.6
7	(6,8) ROD, CAM CHAIN TENSIONER PUSH	0.3
9	ROLLER, CAM CHAIN GUIDE	0.9
11	SPROCKET, CAM CHAIN GUIDE .INCLUDES: Engine removal and installation	2.7
12	BOLT, CAM CHAIN GUIDE ROLLER.. .INCLUDES: Engine removal and installation	2.7

No.	Part Number	Description	QTY	Notes
1	14321-KWB-600	SPROCKET, CAM (32T)	1	
2	14401-KWB-920	CHAIN, CAM (90L)	1	
3	14500-KWB-600	ARM COMP., CAM CHAIN TENSIONER	1	
4	14502-086-000	ROLLER, CAM CHAIN TENSIONER	1	
5	14531-KWB-600	COLLAR, CAM CHAIN TENSIONER	1	
6	14541-GB4-681	SPRING, CAM CHAIN TENSIONER	1	
7	14550-GB0-911	ROD COMP., CAM CHAIN TENSIONER	1	
8	14566-086-030	HEAD, CAM CHAIN TENSIONER PUSH	1	
9	14610-KWB-600	ROLLER COMP., CAM CHAIN GUIDE	1	
10	14615-KFL-850	PIN, GUIDE ROLLER	1	
11	14670-KWB-600	SPROCKET COMP., CAM CHAIN	1	
12	14675-KWB-600	SPINDLE, CAM CHAIN GUIDE	1	
13	90081-035-000	BOLT, SEALING, 14MM	1	
14	90083-GB6-911	BOLT, KNOCK, 5MM	2	
15	90404-KWB-600	WASHER, 8.5X26X2.3	1	
16	90463-ML7-000	WASHER, SEALING, 6.5MM	1	
17	90475-KWB-600	WASHER, 8MM	1	
18	90544-KF0-000	WASHER, SEALING, 14MM	1	
19	95701-06018-00	BOLT, FLANGE, 6X18	1	
20	95701-08025-00	BOLT, FLANGE, 8X25	1	

E- 5

Cylinder

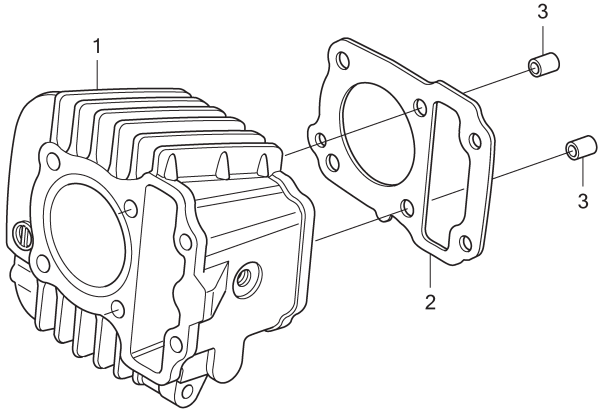

KWBIE0500

	Service item	F.R.T.
1	CYLINDER.....	1.1
2	GASKET, CYLINDER	1

No.	Part Number	Description	QTY	Notes
1	12100-KWB-921	CYLINDER COMP.	1	
2	12191-KWB-921	GASKET, CYLINDER	1	
3	90701-KFM-900	DOWEL PIN, SPECIAL, 8X14	2	

E - 6

Right Crankcase Cover

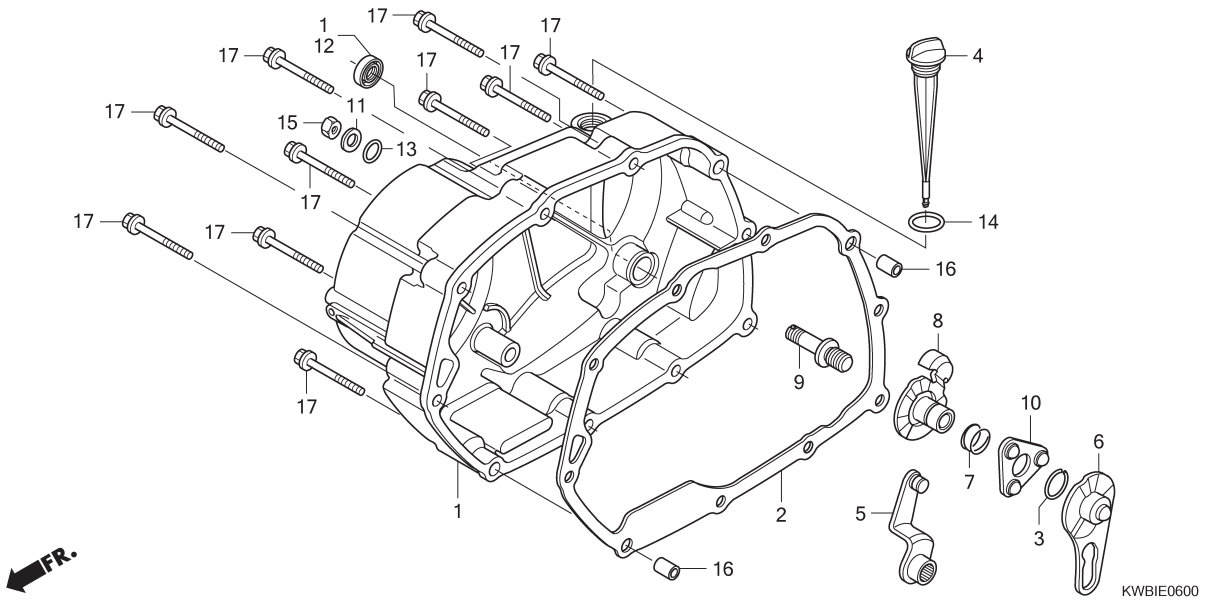

	Service item	F.R.T.
1	COVER, CRANKCASE :RIGHT	0.8
2	GASKET, CRANKCASE COVER : RIGHT.....	0.6
5	LEVER, CLUTCH	0.7
6	(7,10) PLATE, CLUTCH CAM.....	0.6
8	PLATE, CLUTCH CAM LIFTER.....	0.7
9	SCREW, CLUTCH ADJUSTING.....	0.7
12	OIL SEAL, KICK STARTER SPINDLE..	0.7

No.	Part Number	Description	QTY	Notes
1	11330-KWB-600	COVER COMP., R. CRANKCASE	1	
2	11394-KWB-920	GASKET, R. CRANKCASE COVER	1	
3	13115-GN5-910	CLIP, PISTON PIN, 13MM	1	
4	15651-KPH-900	GAUGE, OIL LEVEL	1	
5	22810-KTL-740	LEVER COMP., CLUTCH	1	
6	22823-KWB-600	PLATE, CLUTCH LIFTER CAM	1	
7	22825-KWB-600	SPRING, CAM PLATE SIDE	1	
8	22830-KWB-600	PLATE COMP., CLUTCH LIFTER	1	
9	22846-KPH-901	BOLT, CLUTCH ADJUSTING	1	
10	22860-KWB-600	RETAINER COMP., BALL	1	
11	90485-040-000	WASHER, 8MM	1	
12	91202-KRS-971	OIL SEAL, 13.8X24X5	1	
13	91303-001-000	O-RING, 8MM	1	
14	91307-035-000	O-RING, 18X3	1	
15	94030-08000	NUT, HEX., 8MM	1	
16	94301-08140	DOWEL PIN, 8X14	2	
17	96001-06040-00	BOLT, FLANGE, 6X40	10	

E - 7

One Way Clutch

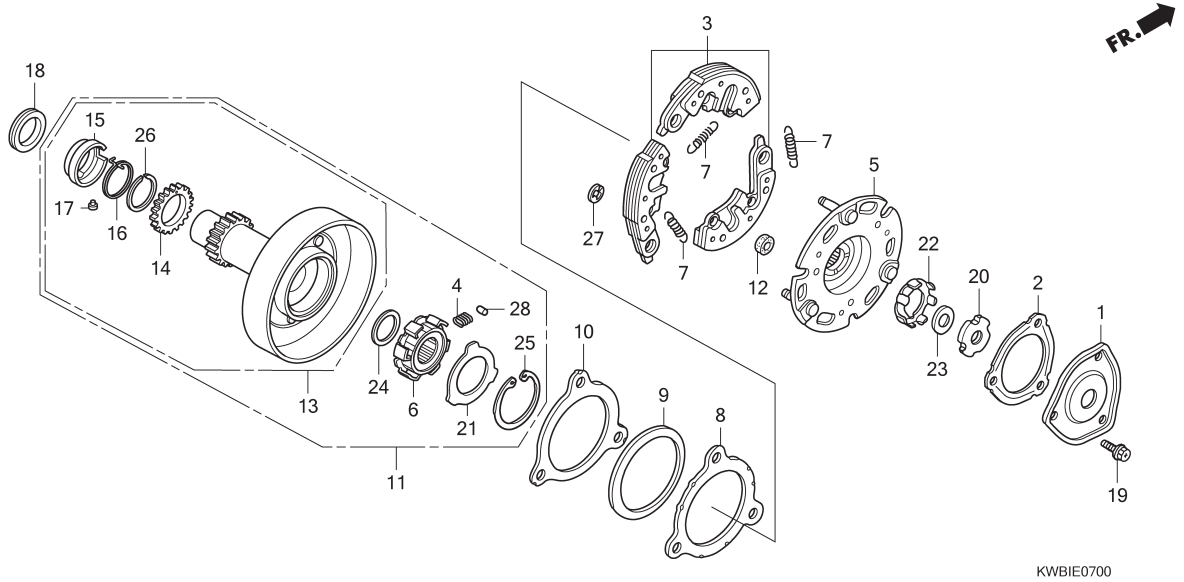

	Service item	F.R.T.
1	(2) COVER, OIL FILTER	0.6
3	(7,12,27) WEIGHT SET, CLUTCH	0.9
5	PLATE, CLUTCH DRIVE	0.9
6	(4,28) INNER, ONE-WAY CLUTCH	0.9
11	OUTER, PRIMARY CLUTCH	0.9
13	GEAR, PRIMARY DRIVE	1

No.	Part Number	Description	QTY	Notes
1	15431-HF7-010	COVER, OIL FILTER	1	
2	15439-KWB-920	GASKET, OIL FILTER	1	
3	22535-KWB-305	WEIGHT SET, PRIMARY CLUTCH	1	
4	22606-GN5-910	SPRING, ONE WAY RETAINER	6	
5	22610-KWB-600	PLATE COMP., PRIMARY DRIVE	1	
6	22630-KWB-600	INNER COMP., ONE-WAY CLUTCH	1	
7	22641-KWB-600	SPRING, PRIMARY CLUTCH	3	
8	22642-KFL-850	WASHER, CLUTCH SIDE	1	
9	22643-KFL-D00	SPRING, SIDE FRICTION	1	
10	22644-KFL-851	PLATE, CLUTCH SIDE	1	
11	22660-KWB-600	OUTER ASSY., PRIMARY CLUTCH	1	
12	22804-GB2-000	RUBBER, CLUTCH DAMPER	3	
13	23120-KTL-740	GEAR COMP., PRIMARY DRIVE	1	
14	23122-KTL-740	SUB GEAR (17T)	1	
15	23123-KFL-850	RETAINER, SPRING	1	
16	23124-GCE-900	SPRING, SUB GEAR	1	
17	23125-GN5-910	PIN	1	
18	23126-KWB-600	COLLAR, 19X28X4	1	
19	90083-KFL-850	BOLT, SPECIAL FLANGE, 5X8	3	
20	90231-087-010	NUT, LOCK, 14MM	1	

E - 7

One Way Clutch

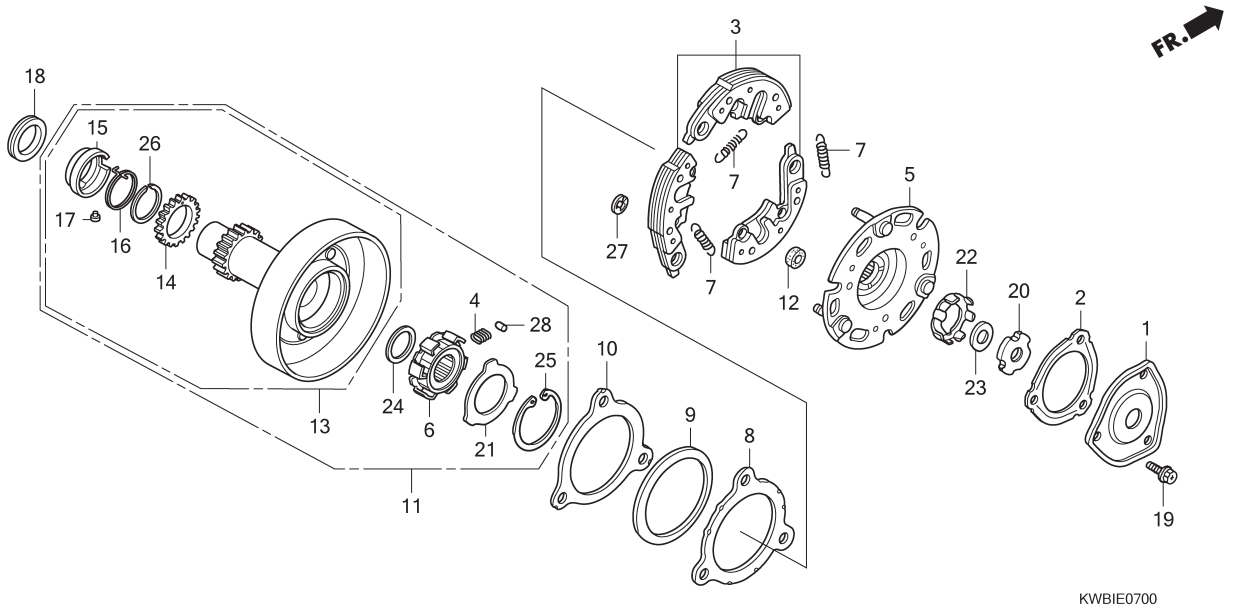

Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
		21	90401-GB2-000	WASHER, 30X45X0.8	1	
		22	90431-GN5-910	WASHER, LOCK	1	
		23	90432-086-000	WASHER B, LOCK	1	
		24	90433-KWB-600	WASHER, 17X23X1.5	1	
		25	90455-GB2-000	CIRCLIP, INTERNAL, 45MM	1	
		26	90603-P0X-000	SET RING, 23MM	1	
		27	90605-166-720	CIRCLIP, 7MM	3	
		28	91101-GB2-000	ROLLER, 5X8	6	

E - 8
Clutch

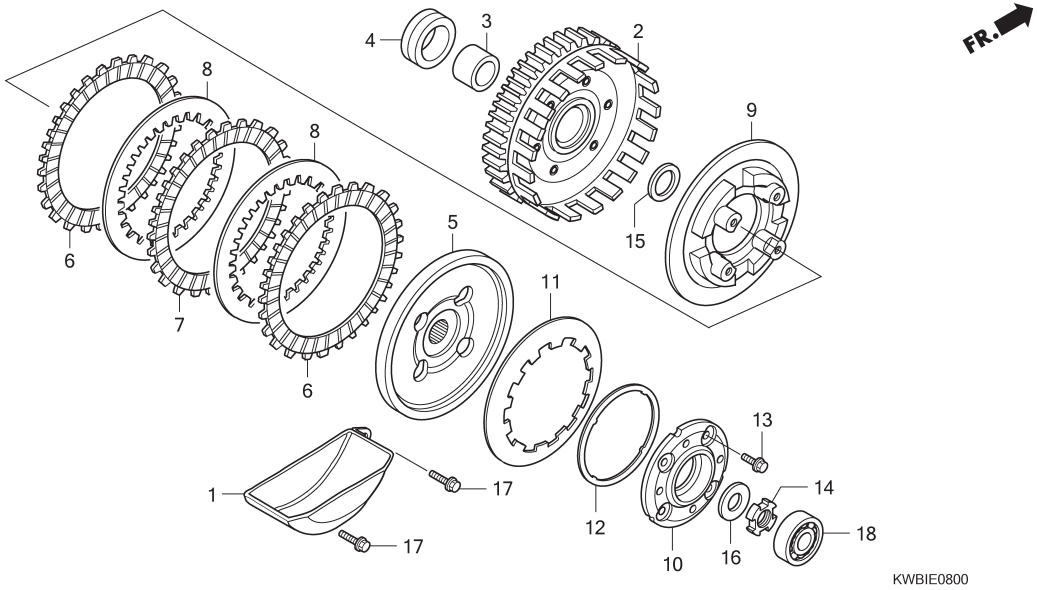

	Service item	F.R.T.
1	SEPARATOR, OIL.....	0.9
2	OUTER, CLUTCH.....	0.9
5	CENTER, CLUTCH	1.1
6	(7,8) DISC, CLUTCH FRICTION	1.1
	.NOTE: Same time for two units or more	
9	PLATE, CLUTCH PRESSURE	1.1
10	PLATE, CLUTCH LIFTER.....	0.9
11	SPRING, CLUTCH	0.9
18	BEARING, CLUTCH LIFTER.....	0.7

No.	Part Number	Description	QTY	Notes
1	15661-GN5-910	PLATE, OIL SEPARATOR	1	
2	22110-KWB-931	OUTER COMP., CLUTCH	1	
3	22115-KPH-900	GUIDE, CLUTCH OUTER	1	
4	22116-KWB-600	COLLAR, CLUTCH OUTER	1	
5	22121-KWB-600	CENTER, CLUTCH	1	
6	22201-KWB-600	DISK, CLUTCH FRICTION	2	
7	22204-KWB-600	DISK B, CLUTCH FRICTION	1	
8	22321-KWB-600	PLATE, CLUTCH	2	
9	22351-KWB-600	PLATE, CLUTCH PRESSURE	1	
10	22361-KWB-600	PLATE, CLUTCH LIFTER	1	
11	22401-KWB-600	SPRING, CLUTCH	1	
12	22402-KWB-600	SEAT, CLUTCH SPRING	1	
13	90050-KWB-600	BOLT, SPECIAL FLANGE, 6X16	4	
14	90231-198-000	NUT B, LOCK, 14MM	1	
15	90403-KPH-900	WASHER, THRUST, 17MM	1	
16	90501-GBL-730	WASHER, 14MM	1	
17	95701-06020-00	BOLT, FLANGE, 6X20	2	
18	96100-62000-00	BEARING, RADIAL BALL, 6200	1	

E - 9

Oil Pump

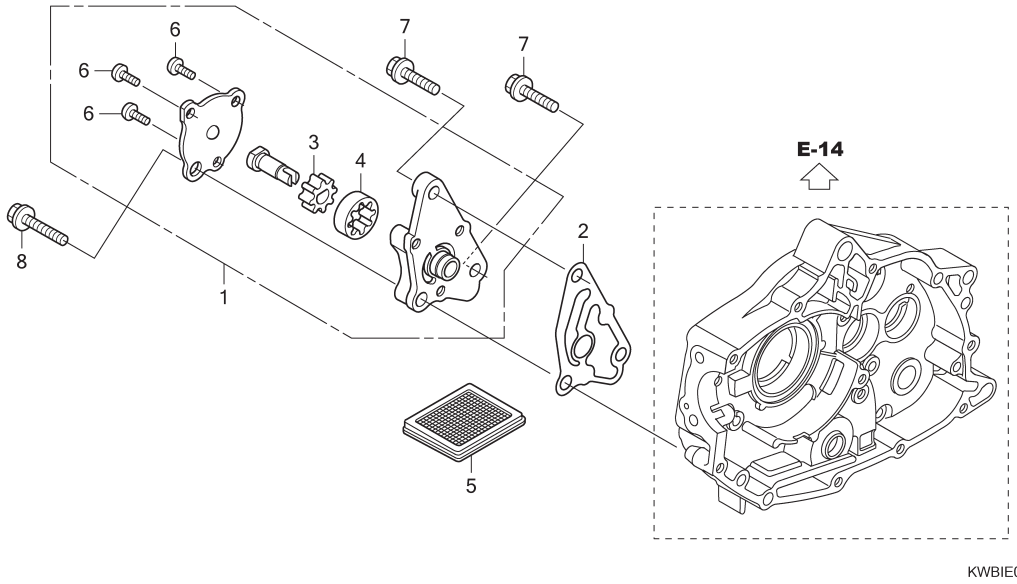

KWBIE0900

	Service item	F.R.T.
1	(2) PUMP ASSY., OIL	0.7
5	SCREEN, OIL FILTER.....	0.6

No.	Part Number	Description	QTY	Notes
1	15100-KWB-920	PUMP ASSY., OIL	1	
2	15119-KWB-600	GASKET, OIL PUMP BODY	1	
3	15331-GF6-000	ROTOR, OIL PUMP INNER	1	
4	15332-GF6-000	ROTOR, OIL PUMP OUTER	1	
5	15421-035-010	SCREEN, OIL FILTER	1	
6	93500-05010-0A	SCREW, PAN, 5X10	3	
7	96001-06016-00	BOLT, FLANGE, 6X16	2	
8	96001-06022-00	BOLT, FLANGE, 6X22	1	

E - 10

Left Crankcase Cover

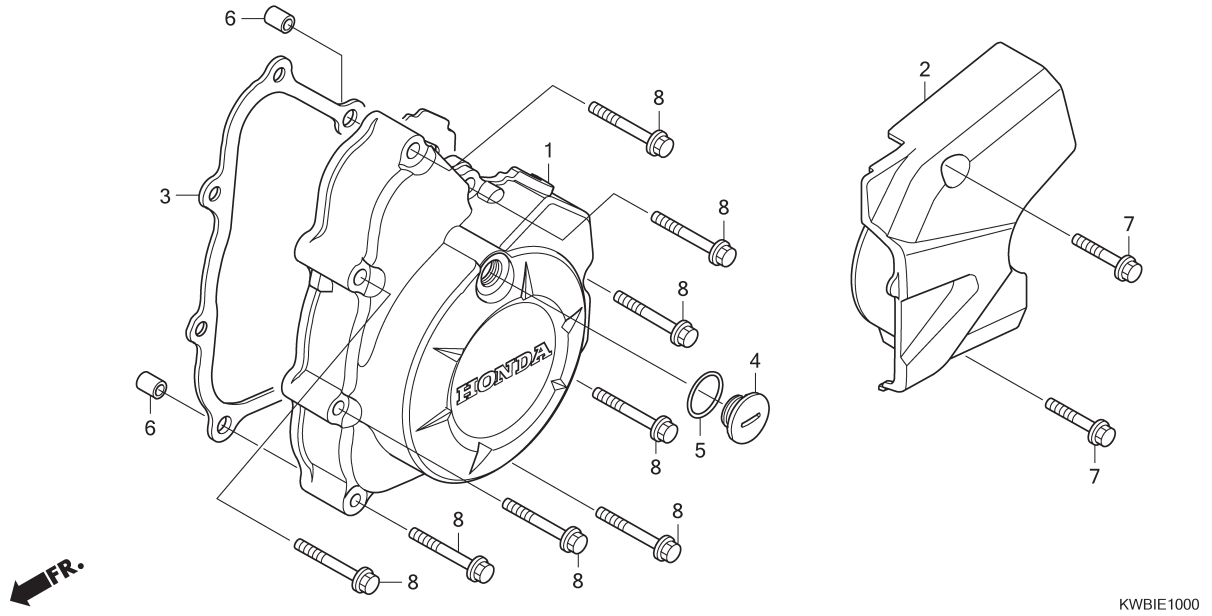

KWBIE1000

	Service item	F.R.T.
1	COVER, CRANKCASE :LEFT.....	0.4
2	COVER, CRANKCASE :LEFT REAR...	0.1
3	GASKET, CRANKCASE COVER : LEFT.....	0.3

No.	Part Number	Description	QTY	Notes
1	11341-KWB-600	COVER, L. CRANKCASE	1	
2	11360-KWB-921	COVER COMP., L. RR. CRANKCASE	1	
3	11395-KWB-920	GASKET, L. CRANKCASE COVER	1	
4	90084-GN5-640	CAP, A.C. GENERATOR	1	
5	91303-377-000	O-RING, 13.8X2.5	1	
6	94301-08140	DOWEL PIN, 8X14	2	
7	96001-06025-00	BOLT, FLANGE, 6X25	2	
8	96001-06035-00	BOLT, FLANGE, 6X35	8	

E - 11

Generator

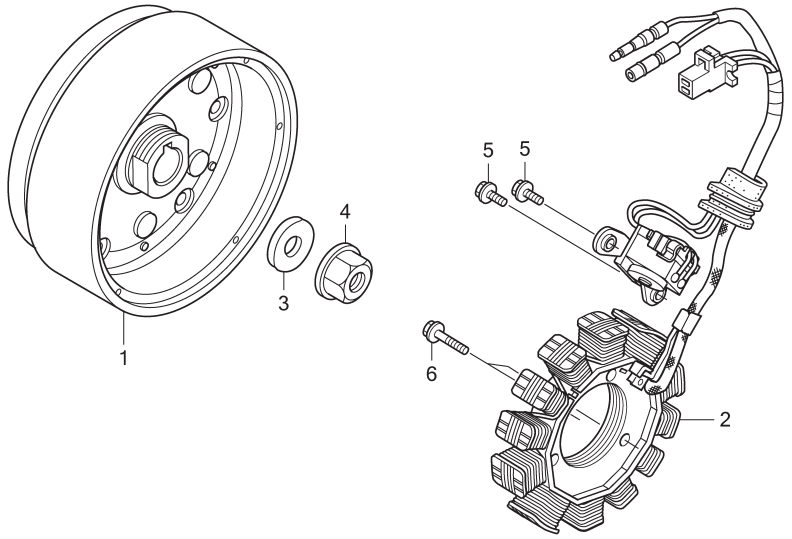

FR.

KWBIE1100

Service item	F.R.T.
1 ROTOR OR FLYWHEEL	0.5
2 STATOR	0.6

No.	Part Number	Description	QTY	Notes
1	31110-KWB-921	FLYWHEEL COMP.	1	
2	31120-KWB-921	STATOR COMP.	1	
3	90403-KM9-000	WASHER, 10X24	1	
4	94050-10000	NUT, FLANGE, 10MM	1	
5	96001-06016-00	BOLT, FLANGE, 6X16	2	
6	96001-06020-00	BOLT, FLANGE, 6X20	2	

E - 12

Starting Clutch

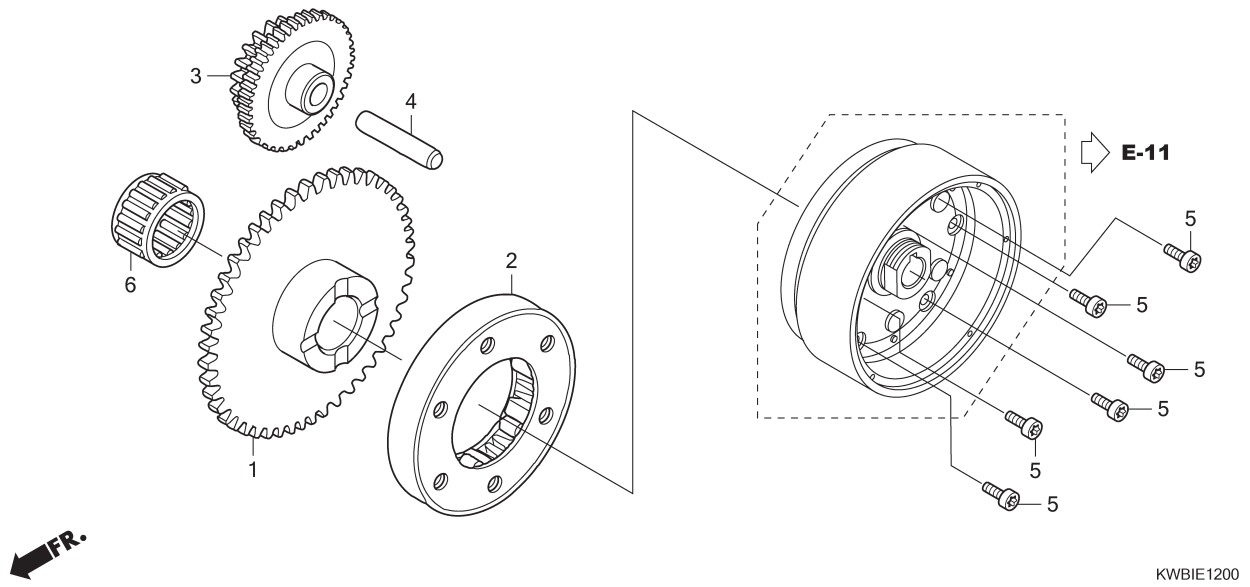

KWBIE1200

	Service item	F.R.T.
1	(6) GEAR, STARTER DRIVEN.....	0.4
2	CLUTCH, STARTING ONE WAY.....	0.5
3	(4) GEAR, STARTER REDUCTION.....	0.3

No.	Part Number	Description	QTY	Notes
1	28110-KWB-920	GEAR COMP., STARTER DRIVEN	1	
	28111-KWB-920	GEAR, STARTER DRIVEN (55T)	1	
2	28120-KPH-701	CLUTCH ASSY., ONE WAY	1	
	28120-KWB-921	CLUTCH ASSY., ONE WAY	1	
3	28130-KWB-920	GEAR COMP., STARTER REDUCTION	1	
4	28132-KPH-900	SHAFT, REDUCTION GEAR	1	
5	90085-KTC-920	BOLT, SOCKET, 6X14	6	
6	91005-KWB-921	BEARING, NEEDLE, 19X23X17	1	

E - 13

Starting Motor

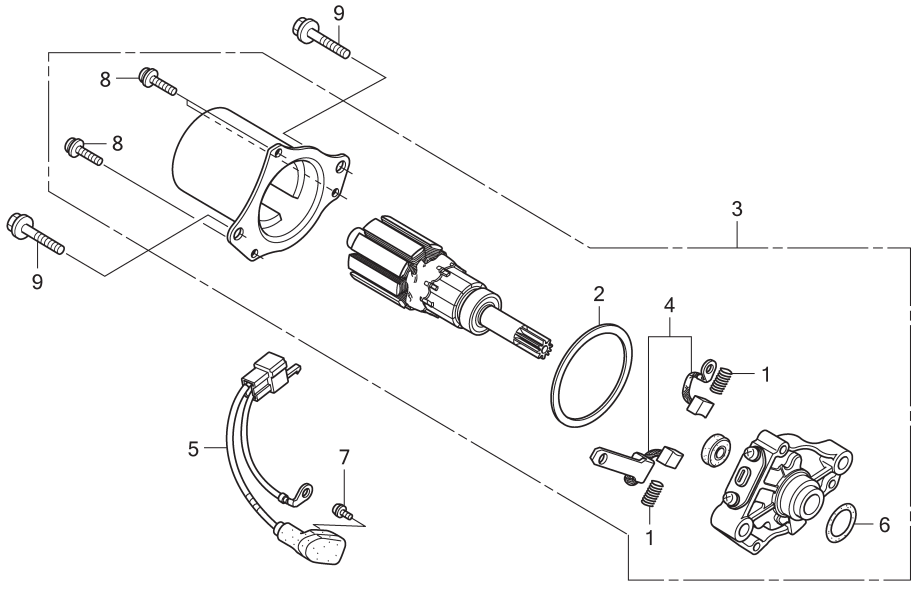

KWBIE1300

	Service item	F.R.T.
3	MOTOR, STARTING.....	0.4
4	(1) TERMINAL, BRUSH (STARTER)..	0.6

No.	Part Number	Description	QTY	Notes
1	31204-KG8-004	SPRING, CARBON BRUSH	2	
2	31206-GW3-004	PACKING	1	
3	31210-KWB-921	MOTOR UNIT, STARTER	1	
4	32101-GW3-780	BRUSH SET	1	
5	32105-KWB-921	SUB CORD, STARTER MOTOR	1	
6	91309-KEE-630	O-RING	1	
7	93892-04006-08	SCREW-WASHER, 4X6	1	
8	93892-05016-08	SCREW-WASHER, 5X16	3	
9	96001-06032-00	BOLT, FLANGE, 6X32	2	

E - 14

Crankcase

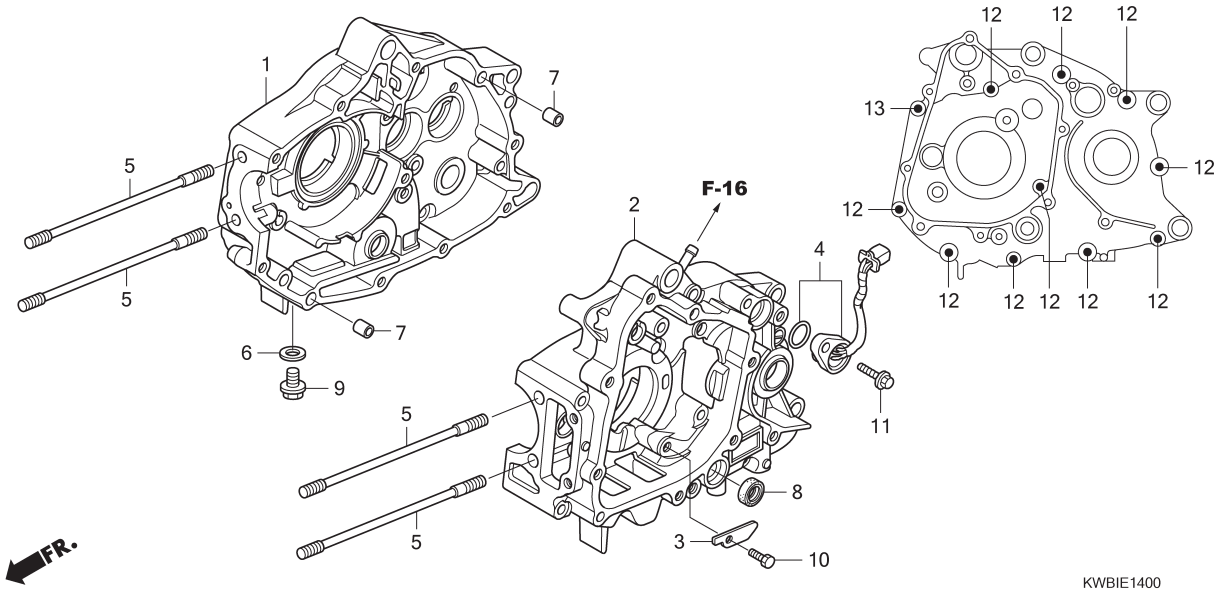

	Service item	F.R.T.
1	CRANKCASE :RIGHT.....	3.3
	.INCLUDES: Engine removal and installation	
	CRANKCASE :BOTH.....	3.6
	.INCLUDES: Engine removal and installation	
2	CRANKCASE :LEFT	2.9
	.INCLUDES: Engine removal and installation	
	CRANKCASE :BOTH.....	3.6
	.INCLUDES: Engine removal and installation	
4	SWITCH, GEAR CHANGE.....	0.2
8	OIL SEAL, GEARSHIFT SPINDLE.....	1.2

No.	Part Number	Description	QTY	Notes
1	11100-KWB-600	CRANKCASE COMP., R.	1	
2	11200-KWB-921	CRANKCASE COMP., L.	1	
3	11218-KWB-600	PLATE, OIL STOPPER	1	
4	35759-KWB-921	CONTACT ASSY., CHANGE SWITCH	1	
5	90031-KWB-600	BOLT, STUD, 7X180.5	4	
6	90407-259-000	PACKING, DRAIN COCK, 12.5X20	1	
7	90703-HC4-000	DOWEL PIN, 10X14	2	
8	91208-KWB-601	OIL SEAL, 11.6X22X7	1	
9	92800-12000	BOLT, DRAIN PLUG, 12MM	1	
10	93101-06014-0A	BOLT, HEX., 6X14	1	
11	95701-06018-00	BOLT, FLANGE, 6X18	1	
12	96001-06060-00	BOLT, FLANGE, 6X60	10	
13	96001-06075-00	BOLT, FLANGE, 6X75	1	

E - 15

Crankshaft / Piston

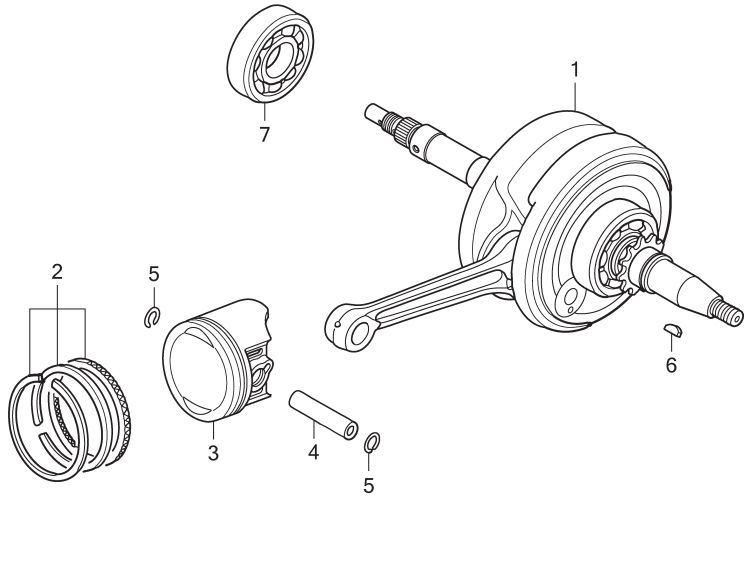

KWBIE1500

	Service item	F.R.T.
1	CRANKSHAFT.....	3.4
	.INCLUDES: Engine removal and installation	
3	(2,4,5) RING, PISTON AND/OR PISTON (ONE).....	1.2
7	BEARING, CRANKSHAFT :RIGHT.....	3.3
	.INCLUDES: Engine removal and installation	

No.	Part Number	Description	QTY	Notes
1	13000-KWB-600	CRANKSHAFT COMP.	1	
2	13011-KWB-305	RING SET, PISTON (STD.)	1	
	13021-KWB-305	RING SET, PISTON (0.25)	(1)	
	13031-KWB-305	RING SET, PISTON (0.50)	(1)	
	13041-KWB-305	RING SET, PISTON (0.75)	(1)	
	13051-KWB-305	RING SET, PISTON (1.00)	(1)	
3	13101-KWB-920	PISTON (STD.)	1	
	13102-KWB-306	PISTON (0.25)	(1)	
	13103-KWB-306	PISTON (0.50)	(1)	
	13104-KWB-306	PISTON (0.75)	(1)	
	13105-KWB-306	PISTON (1.00)	(1)	
4	13111-087-000	PIN, PISTON	1	
5	13115-GN5-910	CLIP, PISTON PIN, 13MM	2	
6	90741-003-010	KEY, WOODRUFF, 4MM	1	
7	91001-KPH-901	BEARING, RADIAL BALL, 63/22	1	
	91001-KWB-601	BEARING, RADIAL BALL, 63/22	1	

E - 16
Transmission

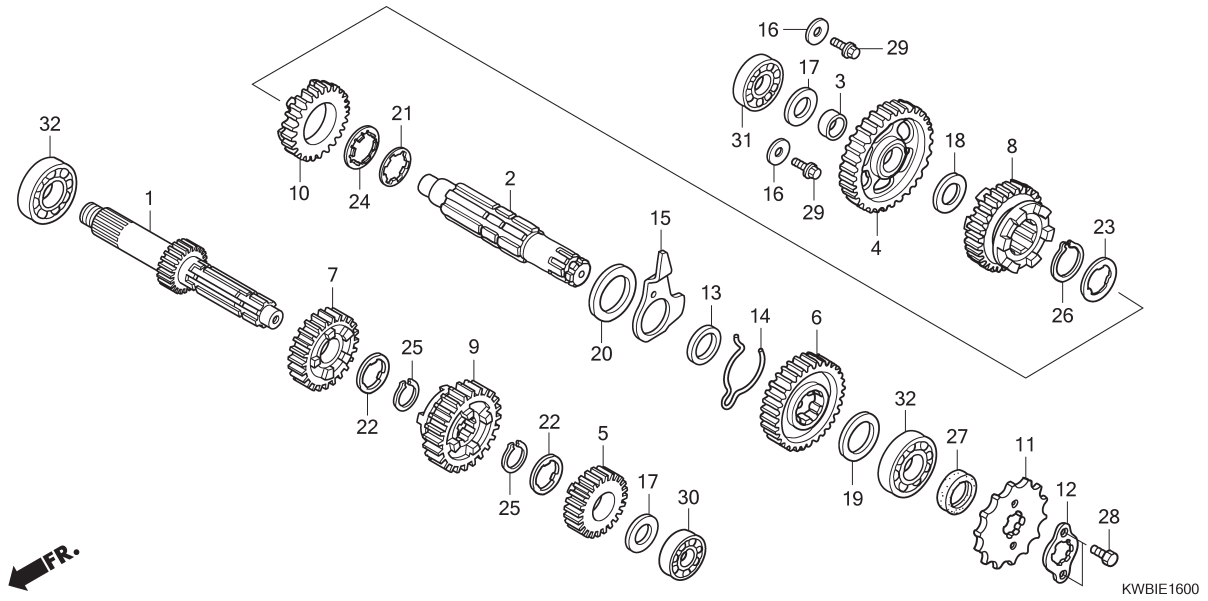

	Service item	F.R.T.
1	(5,7,9) MAINSHAFT, TRANSMISSION	2.8
	.INCLUDES: Engine removal and installation	
	.Replace countershaft add	0.2
2	(4,6,8,10) COUNTERSHAFT, TRANSMISSION	2.8
	.INCLUDES: Engine removal and installation	
	.Replace mainshaft add	0.2
11	SPROCKET, DRIVE.....	0.2
30	BEARING, MAINSHAFT :LEFT.....	2.8
	.INCLUDES: Engine removal and installation	
31	BEARING, COUNTERSHAFT :RIGHT	3.5
	.INCLUDES: Engine removal and installation	

No.	Part Number	Description	QTY	Notes
1	23211-KWB-600	MAINSHAFT (12T)	1	
2	23221-KWB-600	COUNTERSHAFT	1	
3	23415-KPH-900	BUSH, 15MM	2	
4	23421-KWB-600	GEAR, COUNTERSHAFT LOW (34T)	1	
5	23431-KWB-600	GEAR, MAINSHAFT SECOND (17T)	1	
6	90403-KWB-600	WASHER, 6X19X2.3	1	
7	23451-KWB-600	GEAR, MAINSHAFT THIRD (21T)	1	
8	23461-KWB-600	GEAR, COUNTERSHAFT THIRD (26T)	1	
9	23471-KWB-600	GEAR, MAINSHAFT FOURTH (24T)	1	
10	23481-KWB-600	GEAR, COUNTERSHAFT FOURTH	1	
11	23801-KWB-600	SPROCKET, DRIVE (14T)	1	
12	23802-GN5-910	PLATE, FIXING	1	
13	23911-KPH-900	COLLAR, LOCK PLATE	1	
14	24305-KWB-600	SPRING, CHANGE FRICTION	1	
15	24306-KWB-600	PLATE, DRUM LOCK	1	
16	90403-KWB-600	WASHER, 6X19X2.3	2	
17	90412-KPH-900	WASHER, SPECIAL, 12X23	2	
18	90412-187-000	WASHER, THRUST, 15MM	1	
19	90452-GB4-770	WASHER, THRUST, 17MM	1	
20	90452-413-000	WASHER, THRUST, 20MM	1	

E - 16
Transmission

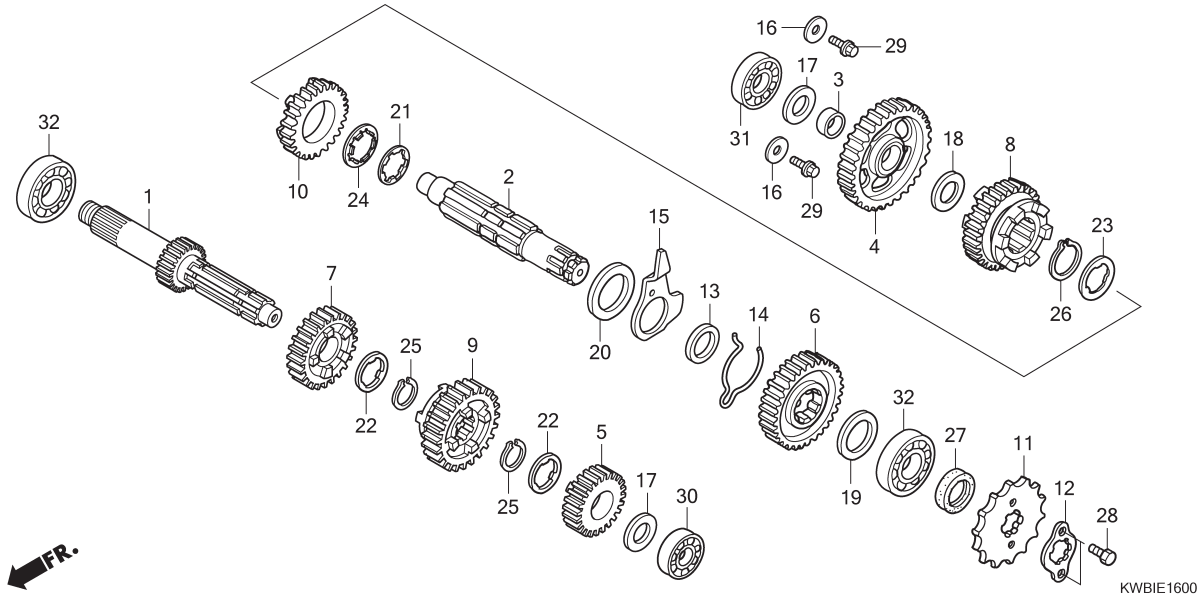

Service item	F.R.T.
32 BEARING, MAINSHAFT :RIGHT.....	3.5
.INCLUDES: Engine removal and installation	
BEARING, MAINSHAFT :BOTH.....	3.7
.INCLUDES: Engine removal and installation	
BEARING, COUNTERSHAFT :LEFT..	2.8
.INCLUDES: Engine removal and installation	
BEARING, COUNTERSHAFT :BOTH	3.7
.INCLUDES: Engine removal and installation	
BEARING, MAINSHAFT AND COUNTERSHAFT :ALL	3.9
.INCLUDES: Engine removal and installation	

No.	Part Number	Description	QTY	Notes
21	90461-KWB-600	WASHER, SPLINE, 20MM	1	
22	90461-035-000	WASHER, SPLINE, 17MM	2	
23	90461-459-010	WASHER, SPLINE, 20MM	1	
24	90465-KWB-600	WASHER, LOCK, 20MM	1	
25	90601-001-000	CIRCLIP, EXTERNAL, 17MM	2	
26	90601-459-000	CIRCLIP, 20MM	1	
27	91204-KWB-601	OIL SEAL, 17X29X5	1	
28	92101-06010-0A	BOLT, HEX., 6X10	2	
29	95701-06012-00	BOLT, FLANGE, 6X12	2	
30	96100-60010-00	BEARING, RADIAL BALL, 6001	1	
31	96100-62010-00	BEARING, RADIAL BALL, 6201	1	
32	96100-62030-00	BEARING, RADIAL BALL, 6203	2	

E - 17

Gearshift Drum

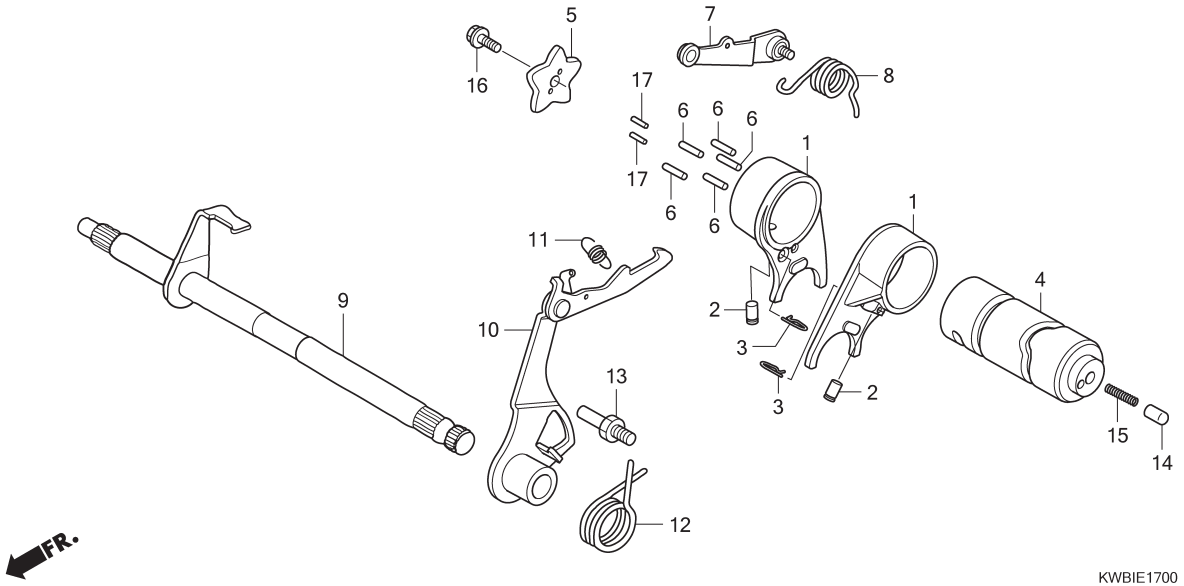

KWBIE1700

	Service item	F.R.T.
1	(2,3) FORK, GEARSHIFT	2.6
	.INCLUDES: Engine removal and installation	
	.NOTE: Same time for two units	
4	DRUM, GEARSHIFT	2.6
	.INCLUDES: Engine removal and installation	
5	PLATE, GEARSHIFT DRUM STOPPER	1
7	(8) STOPPER OR SPRING, SHIFT DRUM	1
9	SPINDLE, GEARSHIFT	1.1
10	(12) ARM, GEARSHIFT	1.1

No.	Part Number	Description	QTY	Notes
1	24211-KWB-600	FORK, GEARSHIFT	2	
2	24261-KWB-600	PIN, GEARSHIFT FORK GUIDE	2	
3	24263-028-000	CLIP, GEARSHIFT FORK GUIDE PIN	2	
4	24301-KWB-600	DRUM, GEARSHIFT	1	
5	24411-KWB-600	PLATE, GEARSHIFT DRUM STOPPER	1	
6	24421-200-000	PIN, GEARSHIFT DRUM	5	
7	24430-GB4-772	ARM COMP., SHIFT DRUM STOPPER	1	
8	24435-GB4-772	SPRING, GEARSHIFT DRUM STOPPER	1	
9	24610-KWB-600	SPINDLE COMP., GEARSHIFT	1	
10	24630-KWB-600	ARM COMP., GEARSHIFT	1	
11	24641-041-000	SPRING, GEARSHIFT ARM	1	
12	24651-041-000	SPRING, GEARSHIFT RETURN	1	
13	24652-KPH-900	PIN, SHIFT RETURN SPRING	1	
14	35751-KPH-900	CAP, CHANGE SWITCH CONTACT	1	
15	35752-KPH-900	SPRING, CHANGE SWITCH CONTACT	1	
16	90071-171-010	BOLT, KNOCK, 6MM	1	
17	96220-30100	ROLLER, 3X10	2	

E - 18

Kick Starter Spindle

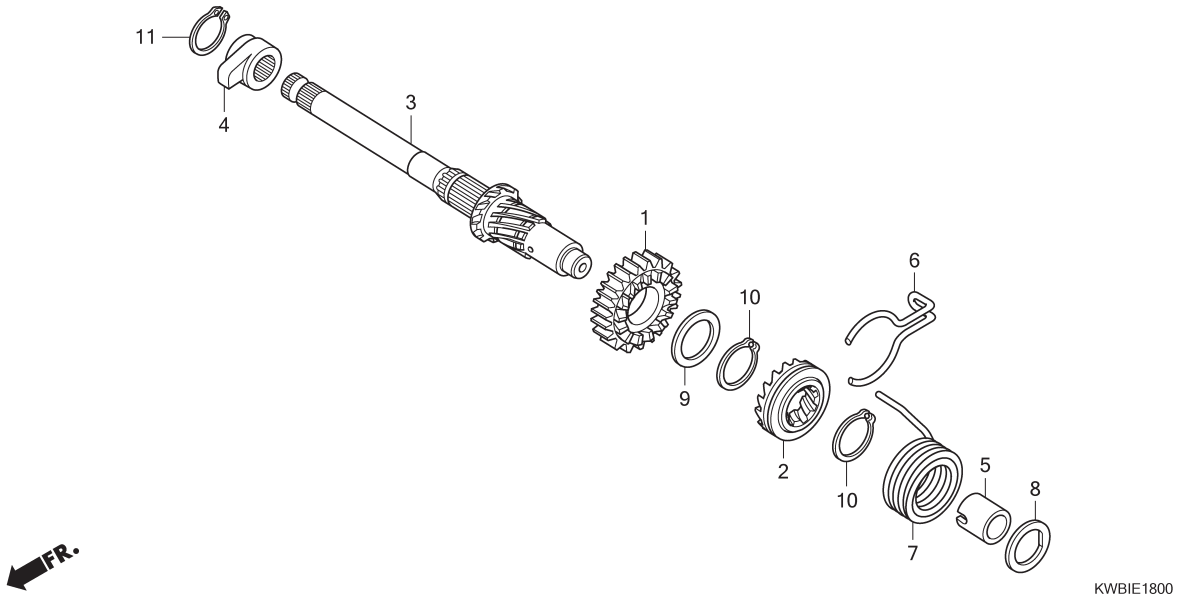

Service item	F.R.T.
1 (2,6) PINION, KICK STARTER	2.7
.INCLUDES: Engine removal and installation	
3 SPINDLE, KICK STARTER.....	2.7
.INCLUDES: Engine removal and installation	
7 SPRING, KICK STARTER RETURN...	2.7
.INCLUDES: Engine removal and installation	

No.	Part Number	Description	QTY	Notes
1	28211-KWB-600	PINION, KICK STARTER (22T)	1	
2	28221-KWB-600	RATCHET, STARTER DRIVE	1	
3	28251-KWB-600	SPINDLE, KICK STARTER	1	
4	28262-KWB-600	RETAINER, KICK SPINDLE	1	
5	28265-KWB-600	COLLAR, KICK SPRING	1	
6	28271-KWB-600	SPRING, FRICTION STARTER GEAR	1	
7	28281-KWB-600	SPRING, KICK RETURN	1	
8	90451-KGH-900	WASHER, SPECIAL, 14MM	1	
9	90454-107-000	WASHER, THRUST, 20MM	1	
10	90605-200-000	SET RING, 20MM	2	
11	94510-16000	CIRCLIP, EXTERNAL, 16MM	1	

E - 19

Carburetor

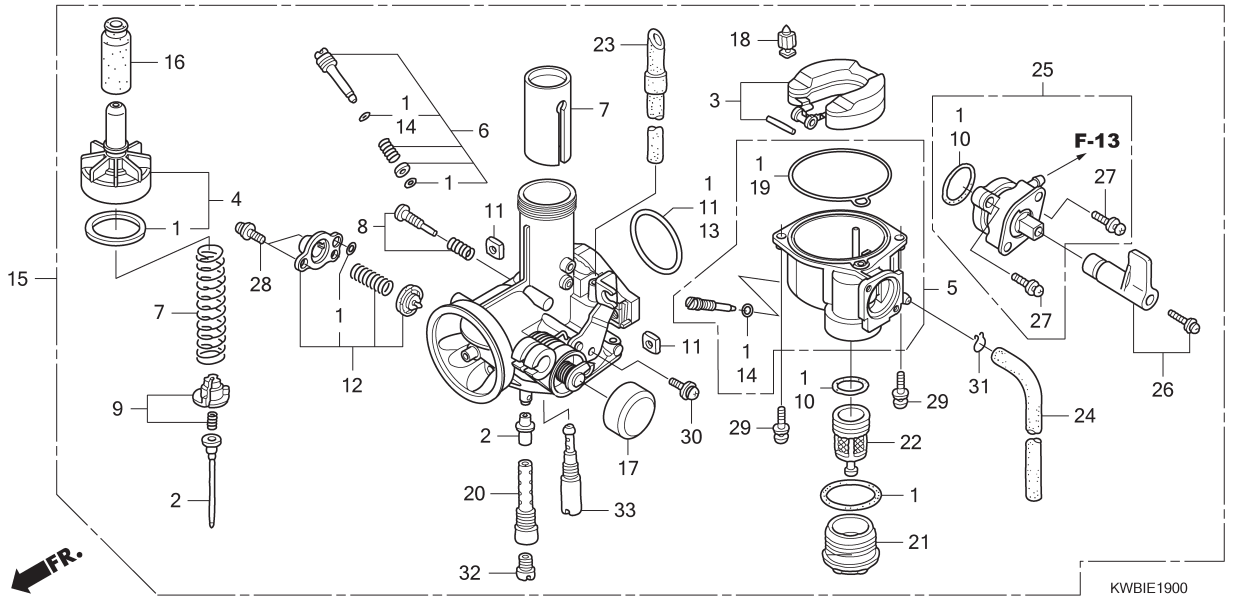

	Service item	F.R.T.
2	NEEDLE, JET	0.7
3	(18) FLOAT OR FLOAT VALVE	0.6
4	TOP SET, CARBURETOR	0.2
5	CHAMBER, FLOAT	0.5
7	VALVE, THROTTLE	0.3
12	VALVE, AIR CUT	0.1
15	CARBURETOR ASSEMBLY	0.6
25	COCK ASSY., FUEL	0.2
32	(20,33) JET, MAIN	0.6

No.	Part Number	Description	QTY	Notes
1	16010-KSS-901	GASKET SET	1	
2	16012-KWB-923	NEEDLE SET, JET	1	
3	16013-KPG-901	FLOAT SET	1	
4	16014-KWB-921	TOP SET	1	
5	16015-KVV-901	CHAMBER SET, FLOAT	1	
6	16016-KPH-651	SCREW SET	1	
7	16022-KWB-921	VALVE SET, THROTTLE	1	
8	16028-KTT-901	SCREW SET	1	
9	16037-KPH-901	PLATE SET, VALVE	1	
10	16040-KEV-900	GASKET SET	1	
11	16041-GB5-D30	NUT SET, SQUARE	1	
12	16048-KPH-901	VALVE SET, AIR CUT	1	
13	16075-GHB-B40	O-RING, 2.4X25	1	
14	16075-GHB-640	O-RING, 1.3X4.3	2	
15	16100-KWB-924	CARBURETOR ASSY. (PB7UA A)	1	
16	16148-KB1-921	CAP, CABLE SEALING	1	
17	16148-141-881	CAP, CHOKE DUST	1	
18	16155-KRS-861	VALVE COMP., FLOAT	1	
19	16163-GFP-901	GASKET, FLOAT CHAMBER	1	
20	16165-KWB-921	HOLDER, NEEDLE JET	1	

E - 19

Carburetor

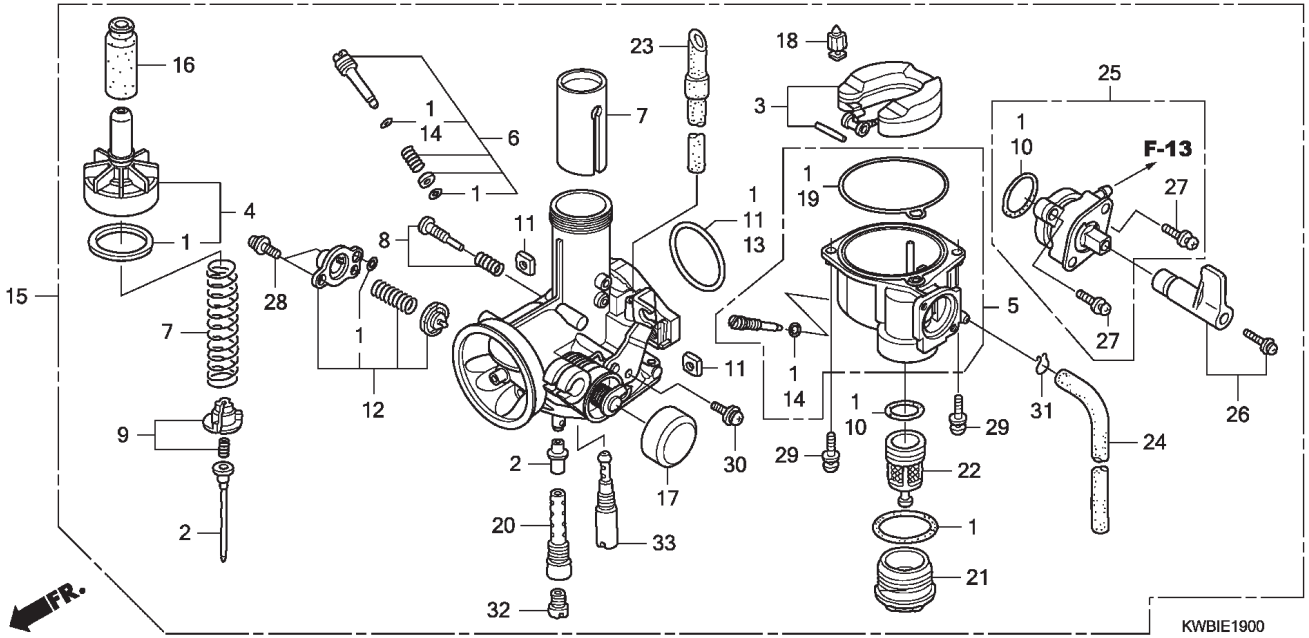

Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
		21	16175-GB0-911	CUP, FUEL STRAINER	1	
		22	16176-GB0-911	SCREEN, FUEL STRAINER	1	
		23	16199-KWB-921	TUBE, AIR VENT	1	
		24	16199-435-771	TUBE, OVERFLOW	1	
		25	16951-KSS-901	BODY SET, COCK	1	
		26	16963-KPH-C01	LEVER SET, COCK	1	
		27	93892-03012-18	SCREW-WASHER, 3X12	2	
		28	93892-04010-18	SCREW-WASHER, 4X10	2	
		29	93892-04014-08	SCREW-WASHER, 4X14	2	
		30	93892-05010-18	SCREW-WASHER, 5X10	1	
		31	95002-02659	CLIP, TUBE (B6.5)	1	
		32	99101-KWB-0920	JET, MAIN, #92	1	
		33	99103-KPH-0350	JET, SLOW, #35	1	

F - 1

Headlight

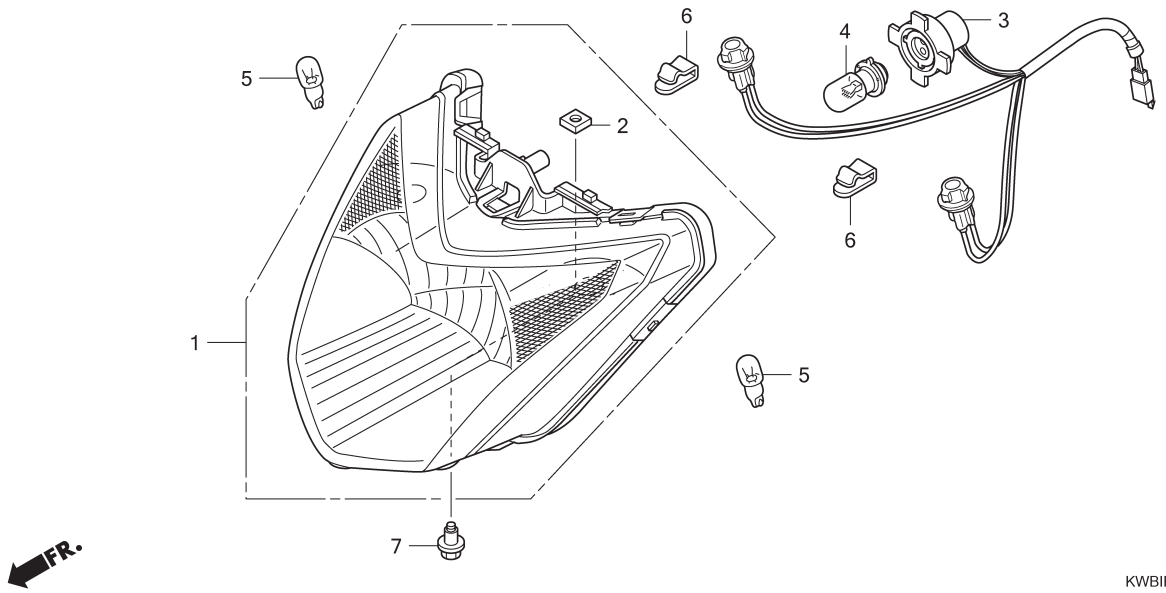

KWBIF0100

	Service item	F.R.T.
1	HEADLIGHT UNIT.....	0.3
3	SOCKET, HEADLIGHT.....	0.2
4	BULB, HEADLIGHT.....	0.2
5	BULB, POSITION LIGHT.....	0.1

No.	Part Number	Description	QTY	Notes
1	33110-KWB-921	HEADLIGHT UNIT	1	
2	33115-KBA-830	NUT, ADJUST	1	
3	33130-KWB-921	SOCKET COMP., HEADLIGHT	1	
4	34901-KPH-881	BULB, HEADLIGHT	1	
5	34908-GA7-701	BULB, WEDGE BASE (T10)	2	
6	53209-GAH-000	CLIP, HEADLIGHT	2	
7	90101-GJ6-000	BOLT, ADJUSTING	1	

F - 2
Meter

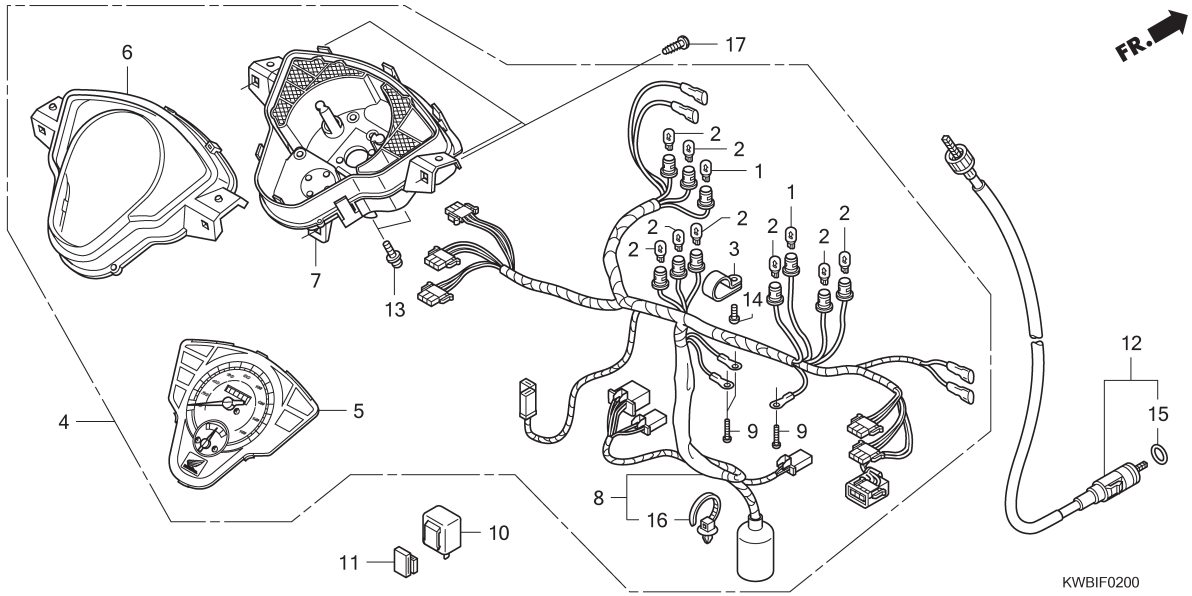

	Service item	F.R.T.
1	(2) BULB, METER	0.5
4	METER ASSY., COMBINATION	0.5
5	METER, COMBINATION	0.7
6	LENS, METER	0.6
7	CASE, METER	0.7
8	SOCKET ASSY., METER BULB	0.6
10	RELAY, WINKER	0.6
12	CABLE, SPEEDOMETER	0.5

No.	Part Number	Description	QTY	Notes
1	34908-GA7-701	BULB, WEDGE BASE (T10)	2	
2	34908-MB9-871	BULB, WEDGE BASE (T10)	8	
3	37121-ML7-671	CLAMP	1	
4	37200-KWB-920	SPEEDOMETER ASSY.	1	
5	37210-KWB-920	METER COMP., SPEED & FUEL	1	
6	37211-KWB-601	GLASS	1	
7	37212-KWB-920	CASE COMP., UNDER	1	
8	37224-KWB-920	SOCKET COMP.	1	
9	37305-KE5-008	SCREW-WASHER, 3X22	3	
10	38301-GBG-911	RELAY COMP., WINKER	1	
11	38306-GE7-000	SUSPENSION, WINKER RELAY	1	
12	44830-KWB-920	CABLE COMP., SPEEDOMETER	1	
13	90035-166-008	SCREW-WASHER, SPECIAL, 4X10	2	
14	90109-MZ5-008	SCREW, TAPPING, 4X14	1	
15	91256-KK3-840	O-RING, 10X1.5	1	
16	91551-SF4-003	BAND, WIRE HARNESS	1	
17	93903-25310	SCREW, TAPPING, 5X16	3	

F - 3

Switch / Cable

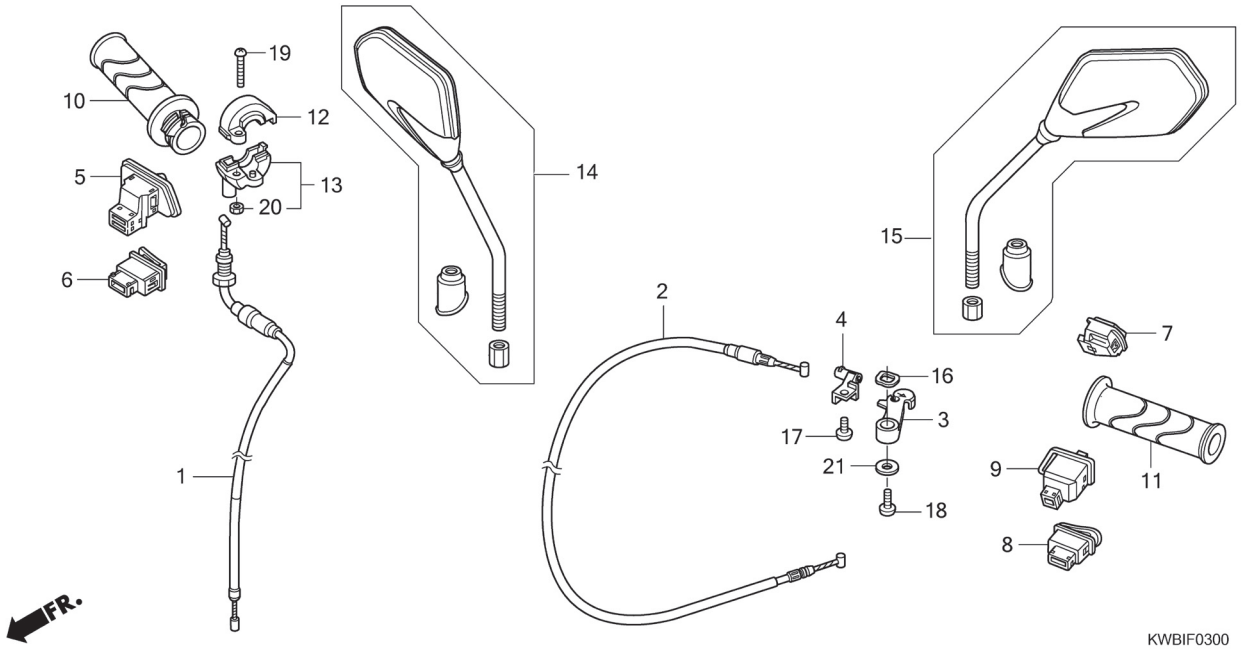

	Service item	F.R.T.
1	CABLE, THROTTLE	0.7
2	CABLE, CHOKE	0.5
5	SWITCH, LIGHTING	0.5
6	SWITCH, STARTER	0.5
7	SWITCH, DIMMER	0.5
8	SWITCH, HORN	0.5
9	SWITCH, WINKER	0.5
10	GRIP, THROTTLE	0.5
11	GRIP, HANDLE :LEFT	0.1
13	HOUSING, THROTTLE	0.5

No.	Part Number	Description	QTY	Notes
1	17910-KWB-920	CABLE COMP., THROTTLE	1	
2	17950-KWB-920	CABLE COMP., CHOKE	1	
3	17961-KFM-900	LEVER, CHOKE	1	
4	17962-KFM-900	STOPPER, CABLE	1	
5	35150-KPH-880	SWITCH UNIT, LIGHTING	1	
6	35160-KPH-881	SWITCH UNIT, STARTING	1	
7	35170-KWB-920	SWITCH UNIT, DIMMER	1	
8	35180-KPH-881	SWITCH UNIT, HORN	1	
9	35200-KVB-900	SWITCH ASSY., WINKER	1	
10	53140-KWB-600	GRIP COMP., THROTTLE	1	
11	53166-KWB-600	GRIP, L. HANDLE	1	
12	53167-KFM-900	HOUSING, UPPER THROTTLE	1	
13	53168-KFM-900	HOUSING, UNDER THROTTLE	1	
14	88110-KTM-780FMB	MIRROR ASSY., R. BLACK	1	
15	88120-KTM-780FMB	MIRROR ASSY., I. BLACK	1	
16	90442-147-000	WASHER, WAVE	1	
17	93500-05010-0G	SCREW, PAN, 5X10	1	
18	93500-05012-0G	SCREW, PAN, 5X12	1	
19	93500-05025-0G	SCREW, PAN, 5X25	1	
20	94001-05070-0S	NUT, HEX., 5MM	1	
21	94103-05700	WASHER, PLAIN, 5MM	1	

F - 4

Fr. Brake Master Cylinder

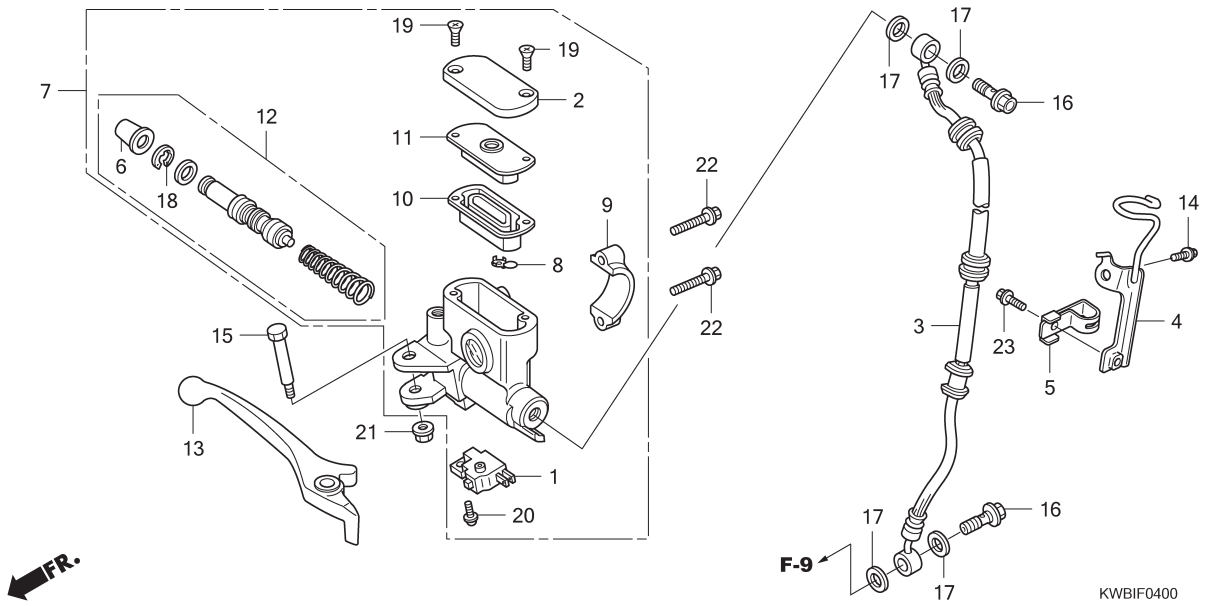

	Service item	F.R.T.
1	SWITCH, FRONT STOP.....	0.5
3	HOSE, FRONT BRAKE.....	0.6
	.TERMASUK: Uji coba pengereman	
7	CYLINDER, FRONT BRAKE MASTER	0.7
	.TERMASUK: Uji coba pengereman	
10	DIAPHRAGM, FRONT BRAKE MASTER CYLINDER	0.1
12	PISTON SET, FRONT BRAKE MASTER	0.7
	.TERMASUK: Uji coba pengereman	
13	LEVER, HANDLE :RIGHT	0.2

No.	Part Number	Description	QTY	Notes
1	35340-KWB-600	SWITCH ASSY., FR. STOP	1	
2	43513-KBP-881	CAP, MASTER CYLINDER	1	
3	45126-KWB-921	HOSE COMP., FR. BRAKE	1	
4	45156-KWB-600	CLAMPER, BRAKE HOSE	1	
5	45157-KWB-600	CLAMPER B, BRAKE HOSE	1	
6	45504-410-003	BOOT COMP.	1	
7	45510-KWB-600	CYLINDER SUB ASSY., FR. BRAKE	1	
8	45512-MA6-006	PROTECTOR	1	
9	45517-GW0-751	HOLDER, MASTER CYLINDER	1	
10	45520-GW0-911	DIAPHRAGM	1	
11	45521-GW0-911	PLATE, DIAPHRAGM	1	
12	45530-KVY-911	CYLINDER SET, MASTER	1	
13	53175-KRS-T80	LEVER, R. STEERING HANDLE	1	
14	90102-KGH-900	BOLT, FLANGE, 6X10	1	
15	90114-KGH-900	BOLT, HANDLE LEVER PIVOT	1	
16	90145-GAZ-981	BOLT, OIL, 10X22	2	
17	90545-300-000	WASHER, OIL BOLT	4	
18	90651-MA5-671	CIRCLIP	1	
19	93600-04012-1G	SCREW, FLAT, 4X12	2	
20	93893-04012-17	SCREW-WASHER, 4X12	1	
21	94050-06000	NUT, FLANGE, 6MM	1	
22	95701-06022-00	BOLT, FLANGE, 6X22	2	
23	96001-06012-00	BOLT, FLANGE, 6X12	1	

F - 5

Handle Pipe / Handle Cover

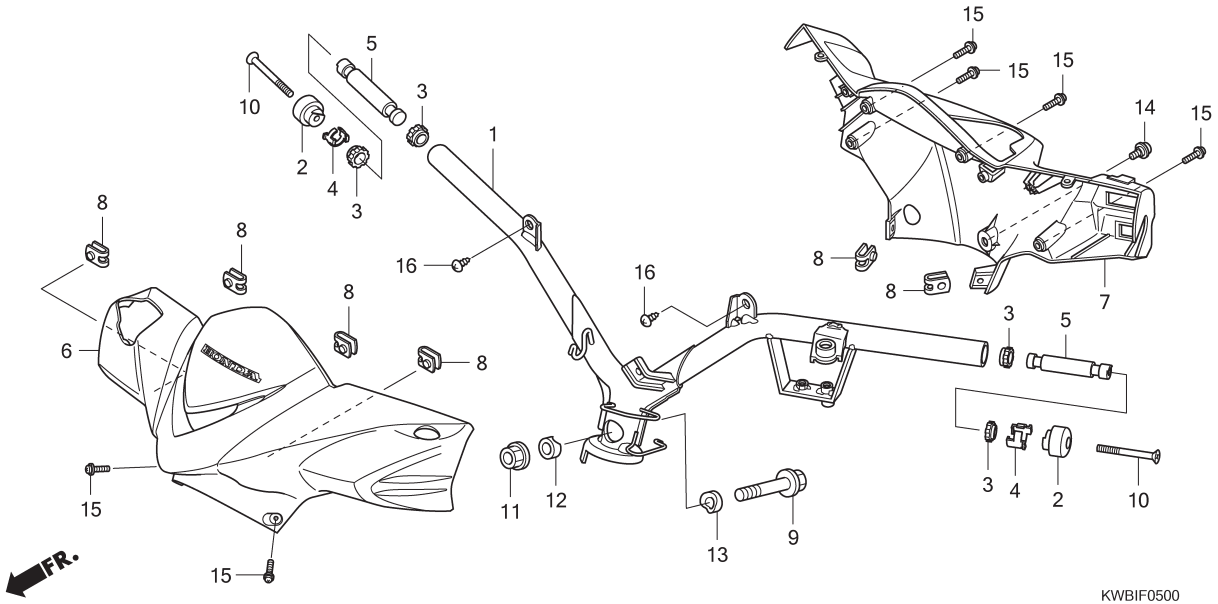

	Service item	F.R.T.
1	PIPE, STEERING HANDLE	1.1
5	WEIGHT B, HANDLE :LEFT	0.2
	WEIGHT B, HANDLE :RIGHT	0.2
	WEIGHT B, HANDLE :BOTH	0.4
6	COVER, HANDLE :FRONT	0.4
	COVER, HANDLE :BOTH	0.6
7	COVER, HANDLE :REAR	0.6
	COVER, HANDLE :BOTH	0.6

No.	Part Number	Description	QTY	Notes
1	53100-KWB-920	PIPE COMP., STEERING HANDLE	1	
2	53105-KWB-600	WEIGHT A, STEERING HANDLE	2	
3	53106-KR3-000	RUBBER A, HANDLE WEIGHT	4	
4	53108-KR3-770	RING, HANDLE WEIGHT SNAP	2	
5	53125-KWB-600	WEIGHT B, STEERING HANDLE	2	
6	53203-KWB-920ZA	COVER, FR. HANDLE (WL) *TYPE1*	1	
7	53206-KWB-920	COVER, RR. HANDLE	1	
8	64521-MN5-000	NUT, CLIP, 4MM	6	
9	90106-GN5-900	BOLT, FLANGE, 10X50	1	
10	90191-KWB-600	SCREW, OVAL, 6X45	2	
11	90304-KGH-901	NUT, U, 10MM	1	
12	90501-KPH-880	COLLAR A, HANDLE SETTING	1	
13	90505-KPH-880	COLLAR B, HANDLE SETTING	1	
14	91509-GE2-760	SCREW, PAN, 5X11.5	1	
15	93891-04016-07	SCREW-WASHER, 4X16	6	
16	93903-24320	SCREW, TAPPING, 4X12	2	

F - 6

Steering Stem

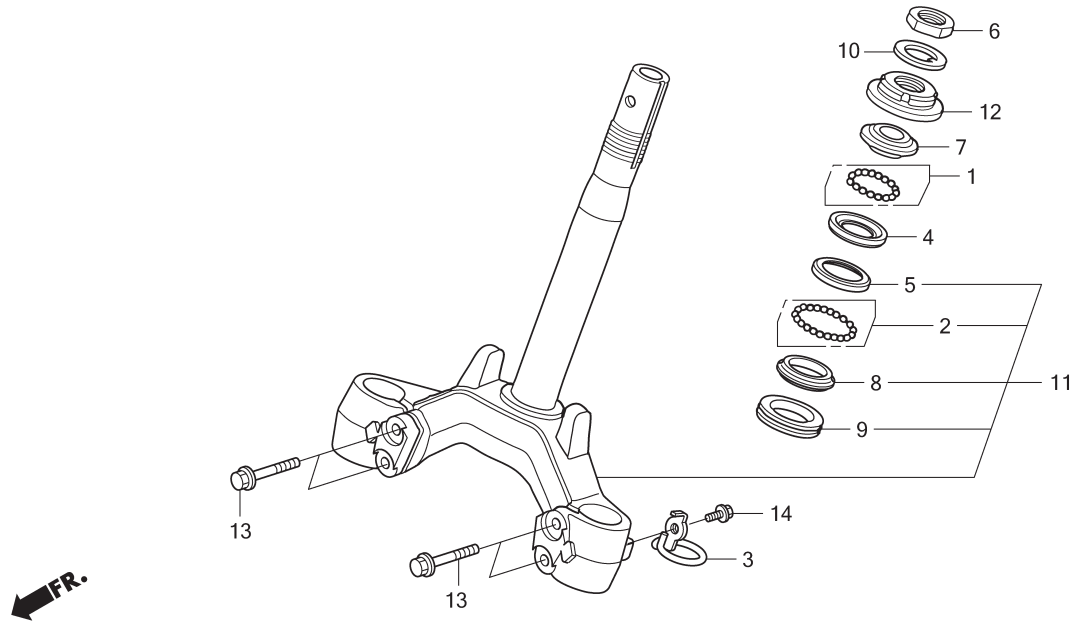

KWBIF0600

	Service item	F.R.T.
4	RACE, STEERING BALL :UPPER.....	1.4
	RACE, STEERING BALL :BOTH	1.4
5	RACE, STEERING BALL :LOWER.....	1.4
	RACE, STEERING BALL :BOTH.....	1.4
7	RACE, STEERING TOP CONE.....	0.8
8	(9) RACE, STEERING BOTTOM CONE.	1.5
11	STEM OR SHAFT ASSY., STEERING..	1.4
12	THREAD, STEERING HEAD TOP.....	0.8

No.	Part Number	Description	QTY	Notes
1	06530-GBG-B20	BALL SET, STEEL, #6X23	1	
2	06531-GBG-B20	BALL SET, STEEL, #6X29	1	
3	45465-KWB-600	GUIDE, FR. BRAKE CABLE	1	
4	50301-GN5-901	RACE, STEERING TOP BALL	1	
5	50302-GN5-900	RACE, STEERING BOTTOM BALL	1	
6	50306-GN5-900	NUT, STEERING STEM LOCK	1	
7	53211-GN5-900	RACE, STEERING TOP CONE	1	
8	53212-GN5-900	RACE, STEERING BOTTOM CONE	1	
9	53214-GN5-900	DUST SEAL, STEERING HEAD	1	
10	53216-GN5-830	WASHER, STEERING STEM NUT	1	
11	53200-KWB-920	STEM SUB ASSY., STEERING	1	
12	53220-GN5-900	THREAD COMP., STEERING HEAD	1	
13	95801-10045-00	BOLT, FLANGE, 10X45	4	
14	96001-06012-00	BOLT, FLANGE, 6X12	1	

F - 7

Front Fender

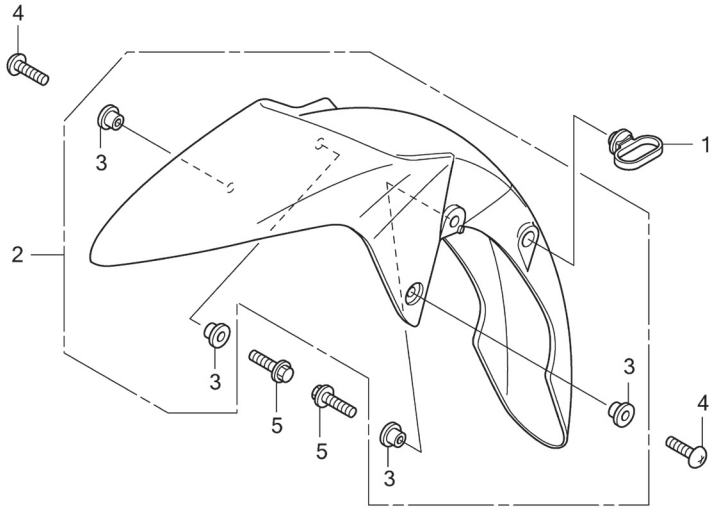

KWBIF0700

	Service item	F.R.T.
2	(3) FENDER, FRONT	0.3

No.	Part Number	Description	QTY	Notes
1	45451-471-000	GROMMET, WIRE	1	
2	61100-KWB-920TBM	FENDER., FR. TECHNO BLUE METALIC	1	
	61100-KWB-920FMB	FENDER., FR. BLACK	(1)	
	61100-KWB-920WRD	FENDER., FR. WINNING RED	(1)	
	61100-KWB-920SBM	FENDER., FR. SPORTY BLUE METALIC	(1)	
	61100-KWB-920PFY	FENDER., FR. PEARL FLASH YELLOW	(1)	
	61100-KWB-920PFW	FENDER., FR. PEARL FADELESS WHITE	(1)	
	61100-KWB-920PTB	FENDER., FR. PEARL TWISTER BLUE	(1)	
3	81312-KW7-900	COLLAR, FR. FENDER	4	
4	90107-KPH-700	BOLT, COWL SETTING	2	
5	95701-06020-00	BOLT, FLANGE, 6X20	2	

F - 8

Front Fork

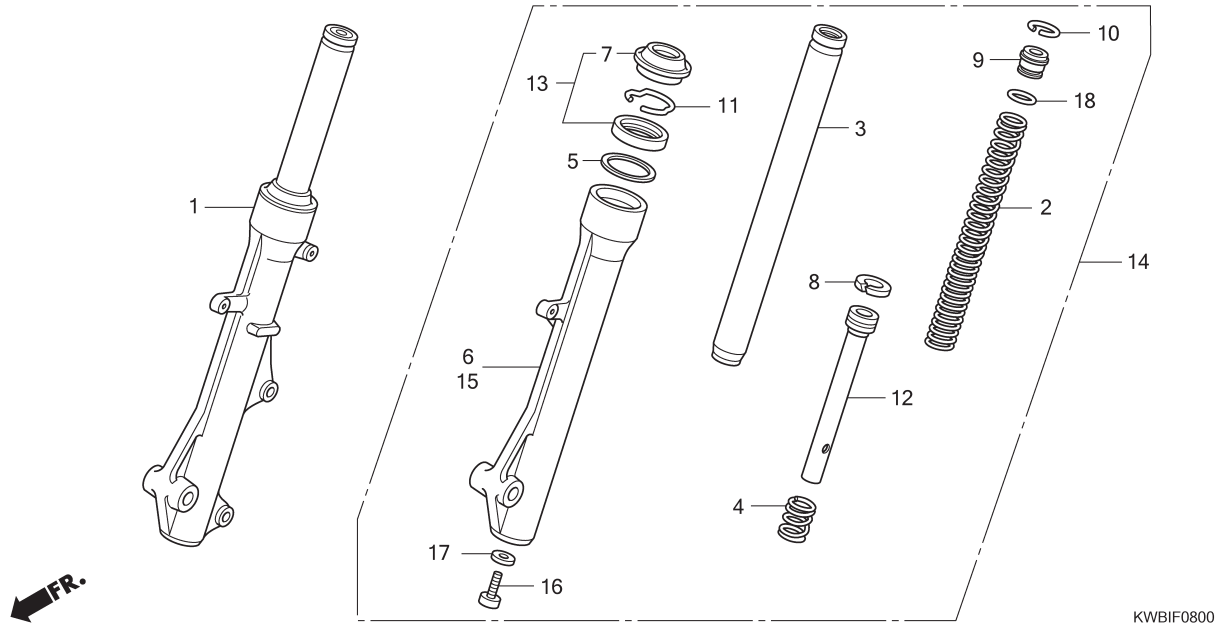

	Service item	F.R.T.
1	FORK ASSY., FRONT :RIGHT	0.5
	FORK ASSY., FRONT :BOTH	0.7
2	SPRING, FRONT FORK :LEFT	0.7
	SPRING, FRONT FORK :RIGHT	0.7
	SPRING, FRONT FORK :BOTH	1
3	PIPE, FRONT FORK :LEFT	0.8
	PIPE, FRONT FORK :RIGHT	0.8
	PIPE, FRONT FORK :BOTH	1.3
6	CASE, BOTTOM :RIGHT	0.9
	CASE, BOTTOM :BOTH	1.5
13	SEAL SET, FRONT FORK :LEFT	0.9
	SEAL SET, FRONT FORK :RIGHT	0.9
	SEAL SET, FRONT FORK :BOTH	1.5
14	FORK ASSY., FRONT :LEFT	0.5
	FORK ASSY., FRONT :BOTH	0.7
15	CASE, BOTTOM :LEFT	0.9
	CASE, BOTTOM :BOTH	1.5

No.	Part Number	Description	QTY	Notes
1	51400-KWB-921	FORK ASSY., R. FR.	1	
2	51401-KWB-921	SPRING, FR. FORK	2	
3	51410-KWB-921	PIPE COMP., FR. FORK	2	
4	51412-GN5-901	SPRING, REBOUND	2	
5	51412-KWB-601	RING, BACK UP	2	
6	51420-KWB-601	CASE COMP., R. FR. BOTTOM	1	
7	51425-GN5-901	DUST SEAL	2	
8	51437-KWB-601	RING, PISTON	2	
9	51454-KEV-881	SEAT B, SPRING	2	
10	51456-KPH-901	RING, STOPPER	2	
11	51466-065-901	RING, OIL SEAL STOPPER	2	
12	51470-KWB-921	PIPE, SEAT	2	
13	51490-KGH-901	SEAL SET, FR. FORK	2	
14	51500-KWB-921	FORK ASSY., L. FR..	1	
15	51520-KWB-601	CASE COMP., L. FR. BOTTOM	1	
16	90116-KV3-701	BOLT, SOCKET, 8MM	2	
17	90544-283-000	WASHER, SPECIAL, 8MM	2	
18	91356-GM0-003	O-RING	2	

F - 9

Front Brake Caliper

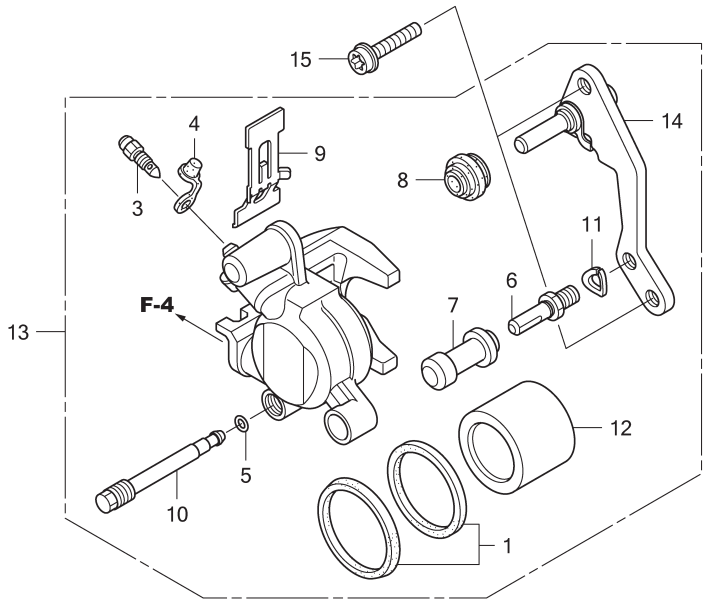

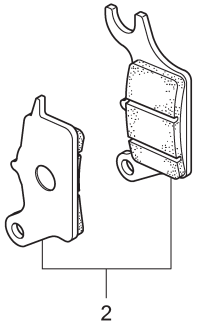

FR.

KWBIF0900

3

	Service item	F.R.T.
2	SHOE(PAD) SET, BRAKE :FRONT.....	0.1
12	(1) PISTON, FRONT BRAKE CALIPER .TERMASUK: Uji coba pengereman	0.5
13	CALIPER, FRONT BRAKE ..... .TERMASUK: Uji coba pengereman	0.4
14	BRACKET, FRONT CALIPER	0.2

No.	Part Number	Description	QTY	Notes
1	06451-961-405	SEAL SET, PISTON	1	
2	06455-KWB-601	PAD SET, FR.	1	
3	43352-568-003	SCREW, BLEEDER.	1	
4	43353-461-771	CAP, BLEEDER	1	
5	45111-MAJ-G41	RING, STOPPER	1	
6	45131-GZ0-006	BOLT, PIN	1	
7	45132-166-016	BOOT, PIN BUSH.	1	
8	45133-MA3-006	BOOT B	1	
9	45208-KWB-601	SPRING, PAD	1	
10	45215-KPH-951	PIN, HANGER	1	
11	45216-166-006	WASHER, WAVE	1	
12	45218-KWB-601	PISTON	1	
13	45250-KWB-921	CALIPER SUB ASSY., R. FR.	1	
14	45290-KWB-601	BRACKET SUB ASSY., FR.	1	
15	90131-KPH-880	BOLT, TORX, 8X25	2	

F - 10

Front Wheel

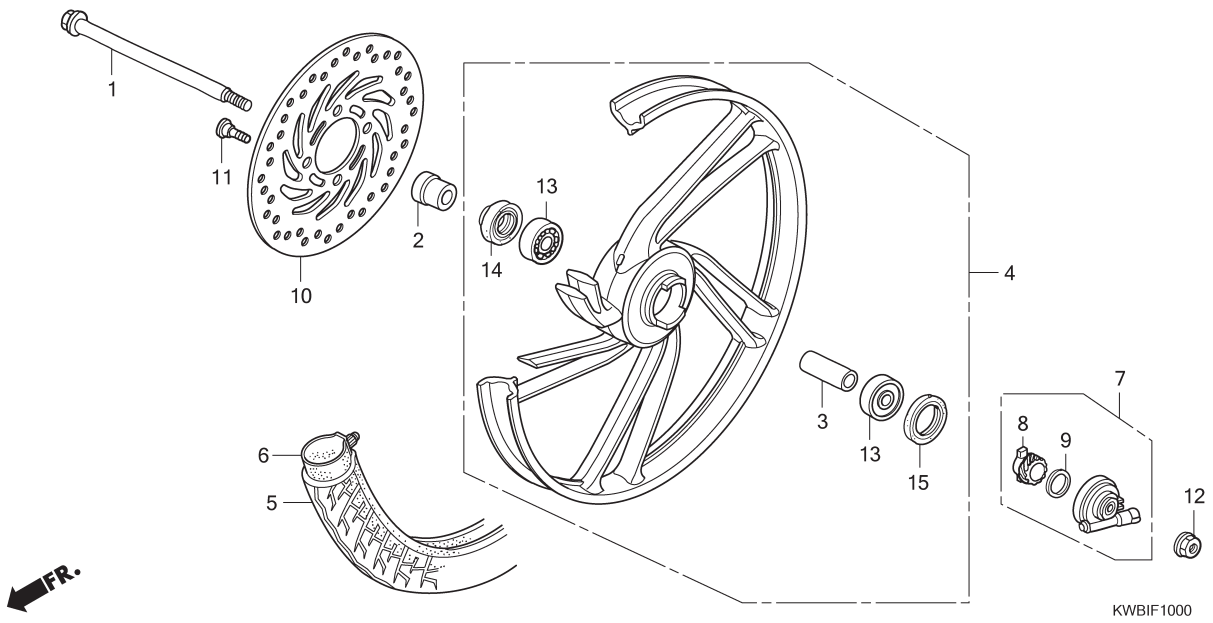

	Service item	F.R.T.
1	AXLE, FRONT WHEEL	0.2
4	FRONT WHEEL	0.8
5	FRONT TIRE(ONE)	0.7
6	TUBE, FRONT TIRE(ONE)	0.7
7	GEARBOX ASSY., SPEEDOMETER..	0.2
10	DISC, FRONT BRAKE	0.3
13	(3) BEARING, FRONT WHEEL(ONE)	0.4
	.Penggantian 1 bearing tambahkan	0.1

No.	Part Number	Description	QTY	Notes
1	44301-KWB-600	AXLE, FR. WHEEL	1	
2	44311-KWB-920	COLLAR, FR. WHEEL SIDE	1	
3	44620-KPH-950	COLLAR, FR. AXLE DISTANCE	1	
4	44601-KWB-920ZA	WHEEL., FR. *NH303M*	1	
5	44711-KWB-922	TIRE, FR.	1	
6	44712-KWB-922	TUBE, TIRE (IRC) (70/90-17M/C)	1	
7	44800-KWB-600	BOX ASSY., SPEEDOMETER GEAR	1	
8	44806-KWB-600	GEAR, SPEEDOMETER (19T)	1	
9	44809-KFM-900	WASHER, SPEEDOMETER GEAR	1	
10	45251-KWB-602	DISK, FR. BRAKE	1	
11	90105-KGH-900	BOLT, BRAKE DISK, 8X24	4	
12	90306-KGH-901	NUT, U, 12MM	1	
13	91052-KWB-601	BEARING, RADIAL BALL, 6201U	2	
	96140-62010-10	BEARING, RADIAL BALL, 6201U	2	
14	91251-KPH-901	DUST SEAL, 21X37X7	1	
15	91251-KWB-601	DUST SEAL, 42X54X7	1	

F - 11

Rear Brake Panel

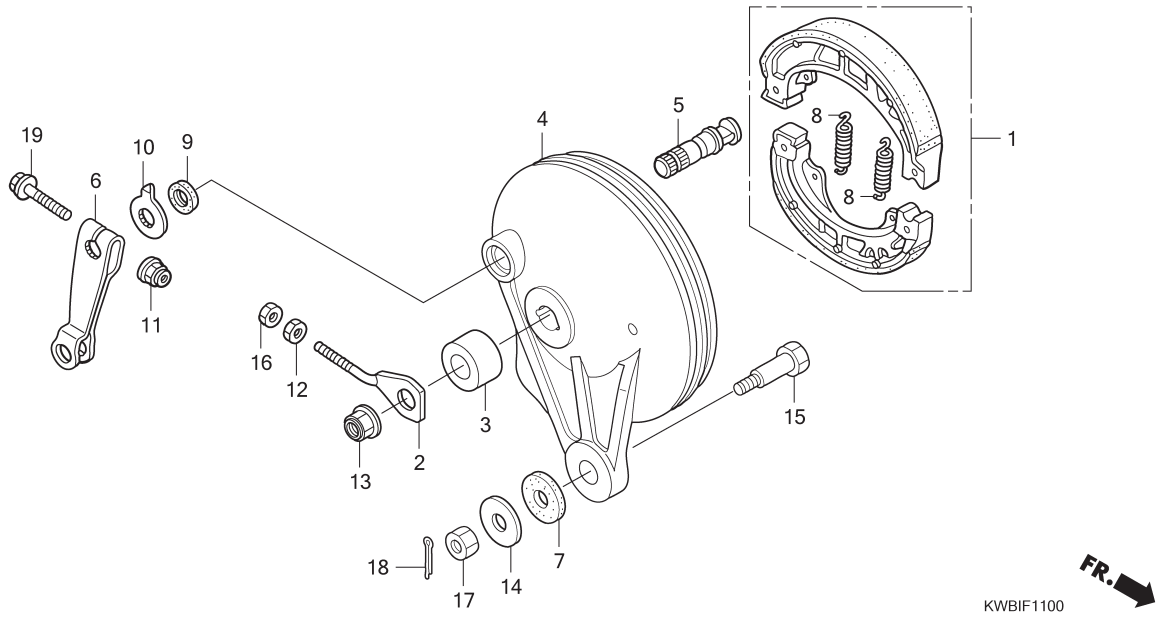

	Service item	F.R.T.
1	SHOE(PAD) SET, BRAKE :REAR	0.4
4	(5) PANEL, REAR BRAKE	0.5
6	ARM, BRAKE :REAR	0.1

No.	Part Number	Description	QTY	Notes
1	43125-KPH-903	SHOE SET, BRAKE	1	
2	40543-KWB-600	ADJUSTER, R. CHAIN	1	
3	42313-GBG-B20	COLLAR, RR. BRAKE PANEL SIDE	1	
4	43100-KPH-700ZC	PANEL COMP., RR. BRAKE *NH303M*	1	
5	43141-KTM-850	CAM, RR. BRAKE	1	
6	43410-KWB-600	ARM, RR. BRAKE	1	
7	43434-ME1-670	RUBBER, STOPPER ARM	1	
8	45133-028-000	SPRING, BRAKE SHOE	2	
9	45134-250-000	DUST SEAL, BRAKE CAM	1	
10	45145-KFM-900	INDICATOR, FR. BRAKE	1	
11	90301-KGH-901	NUT, U, 6MM	1	
12	90302-KBP-900	NUT, SPECIAL, 6MM	1	
13	90306-KGH-901	NUT, U, 12MM	1	
14	90505-425-000	WASHER, 8MM	1	
15	92811-10000	BOLT A, BRAKE STOPPER	1	
16	94001-06000-0S	NUT, HEX., 6MM	1	
17	94001-08000-0S	NUT, HEX., 8MM	1	
18	94201-20150	PIN, SPLIT, 2.0X15	1	
19	95701-06035-00	BOLT, FLANGE, 6X35	1	

F - 12

Rear Wheel

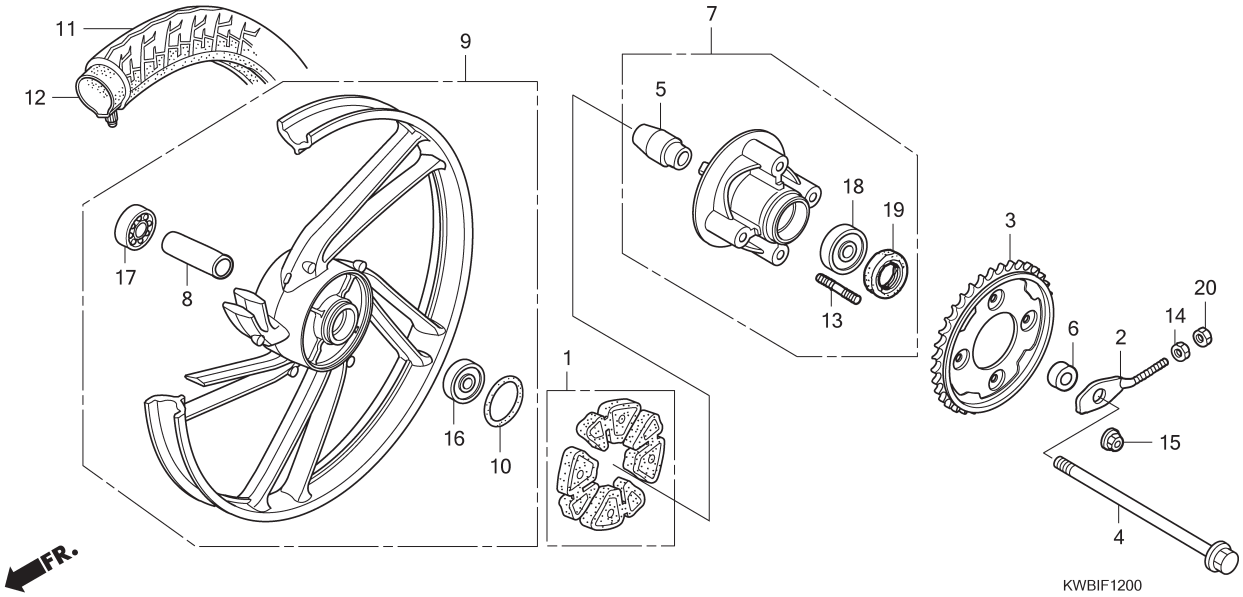

	Service item	F.R.T.
1	DAMPER, REAR WHEEL.....	0.3
3	SPROCKET, FINAL DRIVEN.....	0.4
4	AXLE, REAR WHEEL	0.3
7	FLANGE ASSY., FINAL DRIVEN	0.4
9	REAR WHEEL	0.8
11	REAR TIRE(ONE)	0.8
12	TUBE, REAR TIRE(ONE)	0.8
16	(17) BEARING, REAR WHEEL(ONE).	0.5
	.Replace 1 bearing add	0.1
18	BEARING, FINAL DRIVEN FLANGE..	0.5

No.	Part Number	Description	QTY	Notes
1	41241-KWB-600	DAMPER SET, WHEEL	1	
2	40543-KWB-600	ADJUSTER, R. CHAIN	1	
3	41200-KWB-920	SPROCKET COMP., FINAL DRIVEN	1	
4	42301-KWB-600	AXLE, RR. WHEEL	1	
5	42303-KWB-600	SLEEVE, RR. WHEEL	1	
6	42304-KFM-900	COLLAR, RR. WHEEL SIDE	1	
7	42615-KWB-920	FLANGE SUB ASSY., FINAL DRIVEN	1	
8	42620-KFL-850	COLLAR, RR. AXLE DISTANCE	1	
9	42601-KWB-920ZA	WHEEL., RR. *NH303M*	1	
10	42653-001-004	O-RING, 40.5X3	1	
11	42711-KWB-922	TIRE, RR.	1	
12	42712-KWB-922	TUBE, TIRE	1	
13	90128-KWB-600	BOLT, STUD, 8X18	4	
14	90302-KBP-900	NUT, SPECIAL, 6MM	1	
15	90309-KPH-971	NUT, U, 8MM	4	
16	96140-62010-10	BEARING, RADIAL BALL, 6201U	1	
	91052-KWB-601	BEARING, RADIAL BALL, 6201U	1	
17	91053-KWB-601	BEARING, RADIAL BALL, 6301U	1	
	96140-63010-10	BEARING, RADIAL BALL, 6301U	1	
18	91054-KWB-601	BEARING, RADIAL BALL, 6203U	1	
	96140-62030-10	BEARING, RADIAL BALL, 6203U	1	
19	91251-KPH-881	DUST SEAL, 27X40X4.5	1	
20	94001-06000-0S	NUT, HEX., 6MM	1	

F - 13

Fuel Tank

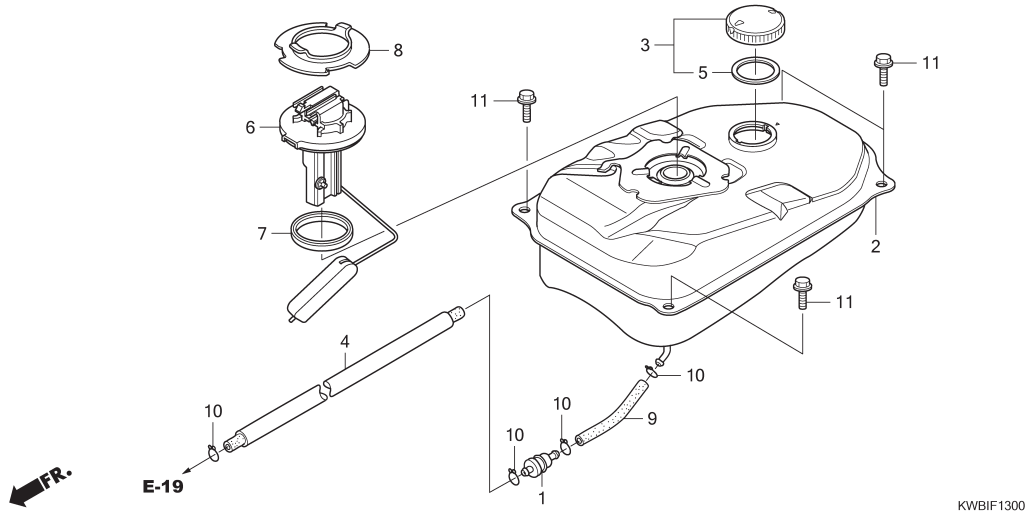

	Service item	F.R.T.
1	STRAINER, FUEL	0.5
2	TANK, FUEL	1
6	FUEL TANK SENDING UNIT	0.2

No.	Part Number	Description	QTY	Notes
1	16910-KFM-902	STRAINER COMP., FUEL	1	
2	17510-KWB-920	TANK COMP., FUEL	1	
3	17620-KGH-600	CAP, FUEL FILLER	1	
4	17630-KWB-920	TUBE, FUEL, 5.3X560	1	
5	17631-KEV-900	PACKING, FUEL FILLER CAP	1	
6	37800-KWB-920	FUEL UNIT	1	
7	37801-GA7-700	PACKING, BASE	1	
8	37802-KTL-740	RETAINER, FUEL UNIT	1	
9	95001-55045-40	TUBE, FUEL, 5.3X45	1	
10	95002-02100	CLIP, TUBE	4	
11	95701-06012-00	BOLT, FLANGE, 6X12	4	

F - 14

Seat / Battery

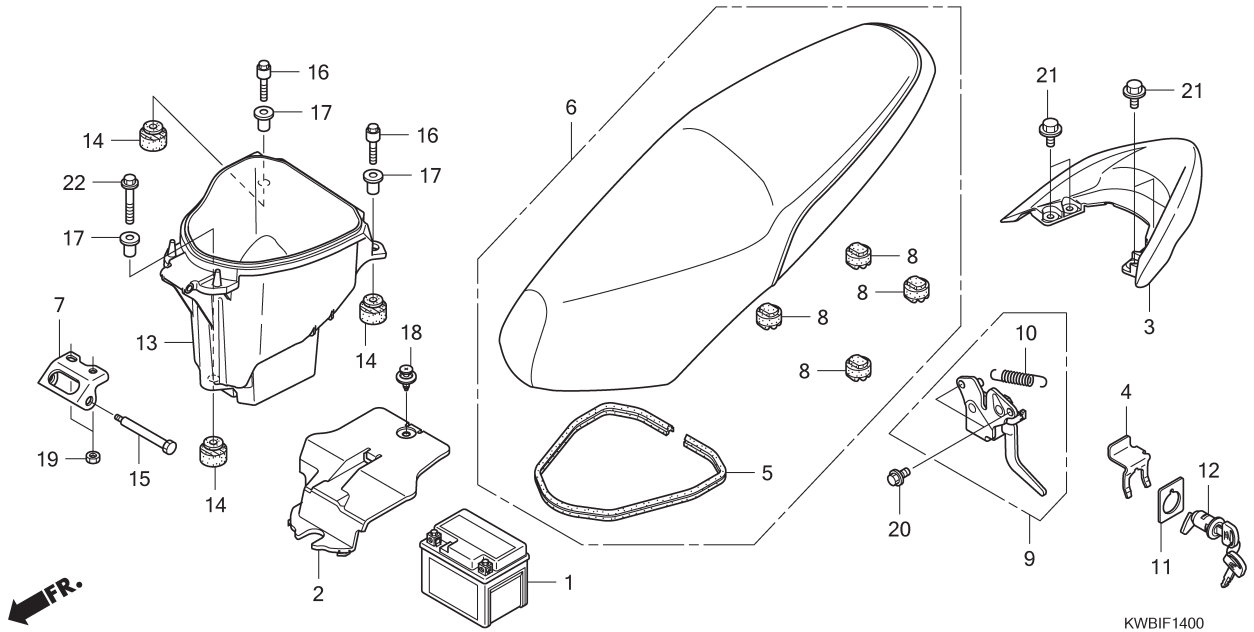

	Service item	F.R.T.
1	BATTERY	0.2
3	RAIL, GRAB :REAR	0.1
6	SEAT :DOUBLE	0.1
7	HINGE, SEAT	0.7
9	CATCH, SEAT :REAR SIDE	0.7
12	KEY, SEAT LOCK	0.8
13	BOX, LUGGAGE	0.9

No.	Part Number	Description	QTY	Notes
1	31500-KPH-881	BATTERY ASSY. (GTZ5S)	1	
2	50381-KWB-920	COVER, BATTERY	1	
3	50400-KWB-600	RAIL, RR. GRAB	1	
4	75581-KWB-600	SPRING, LOCK KEY SETTING	1	
5	77115-KWB-600	RUBBER, SEAL	1	
6	77200-KWB-920	SEAT COMP., DOUBLE	1	
7	77201-KWB-600	HINGE, SEAT	1	
8	77214-KPH-900	RUBBER B, SEAT SETTING	4	
9	77230-KWB-600	CATCH COMP., SEAT	1	
10	77234-GN2-000	SPRING, SEAT LOCK	1	
11	77236-GW0-000	WASHER, SEAT LOCK	1	
12	77240-KPH-691	LOCK ASSY., SEAT	1	
13	81250-KWB-920	BOX COMP., LUGGAGE	1	
14	81253-KPH-900	RUBBER, LUGGAGE BOX MOUNTING	3	
15	90105-KPH-900	BOLT, SEAT HINGE	1	
16	90129-KWB-600	BOLT, SPECIAL, 6X30	2	
17	90502-KPH-900	COLLAR, 6.2X20	3	
18	90634-KPG-900	CLIP, BATTERY COVER	1	
19	94001-06070-0S	NUT, HEX., 6MM	2	
20	95701-06012-00	BOLT, FLANGE, 6X12	2	
21	95701-08014-07	BOLT, FLANGE, 8X14	4	
22	96001-06030-00	BOLT, FLANGE, 6X30	1	

F - 15

Body Cover

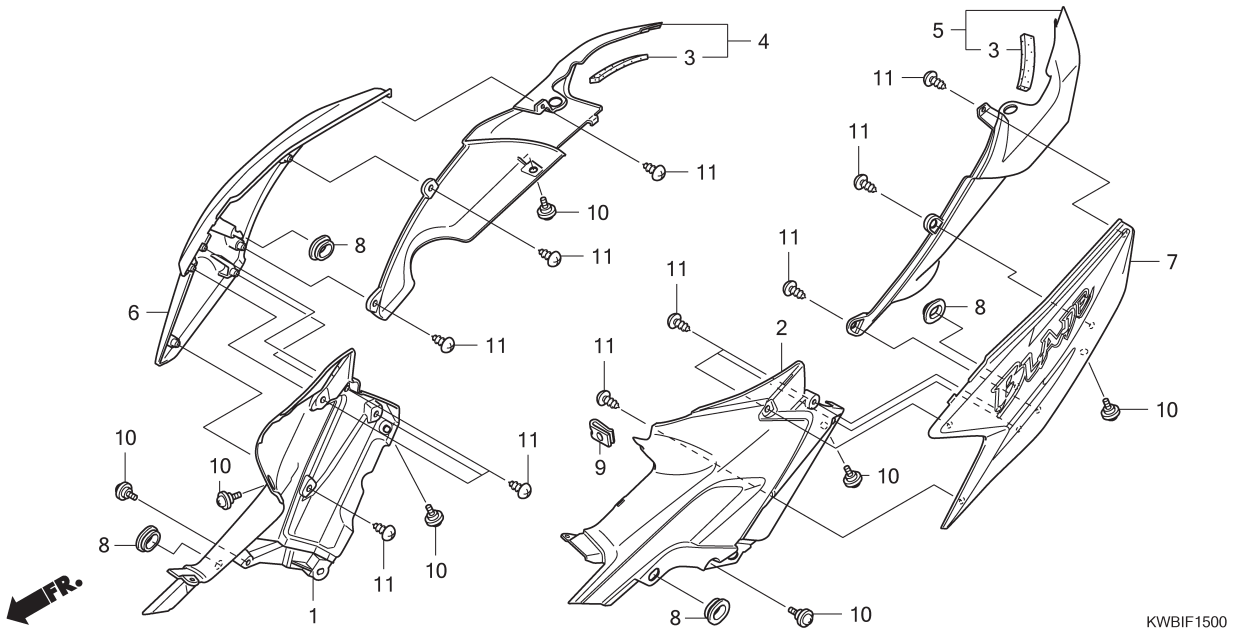

	Service item	F.R.T.
1	COVER, SIDE :RIGHT	0.6
	COVER, SIDE :BOTH	0.6
2	COVER, SIDE :LEFT.....	0.6
	COVER, SIDE :BOTH.....	0.6
4	COVER, BODY :RIGHT	0.6
	COVER, BODY :BOTH	0.6
5	COVER, BODY :LEFT.....	0.6
	COVER, BODY :BOTH.....	0.6
6	COVER, BODY SIDE :RIGHT.....	0.6
	COVER, BODY SIDE :BOTH.....	0.7
7	COVER, BODY SIDE :LEFT.....	0.6
	COVER, BODY SIDE :BOTH.....	0.7

No.	Part Number	Description	QTY	Notes
1	64325-KWB-920	COVER, R. CENTER	1	
2	64330-KWB-920	COVER, L. CENTER	1	
3	64481-KWB-600	MAT, RR. BODY COVER	2	
4	64485-KWB-600	COVER COMP., R. RR. BODY	1	
5	64495-KWB-600	COVER COMP., L. RR. BODY	1	
6	64410-KWB-600DSM	COVER, R. BODY		
		DIGITAL SILVER METALLIC	1	
	64410-KWB-600FMB	BLACK	(1)	
	64410-KWB-600VSM	VOSTOK SILVER METALLIC	(1)	
	64410-KWB-600AGM	ANCHOR GREY METALLIC	(1)	
	64410-KWB-600TBM	TECHNO BLUE METALLIC	(1)	
	64410-KWB-600PFW	PEARL FADELESS WHITE	(1)	
7	64420-KWB-600DSM	COVER, L. BODY		
		DIGITAL SILVER METALLIC	1	
	64420-KWB-600FMB	BLACK	(1)	
	64420-KWB-600VSM	VOSTOK SILVER METALLIC	(1)	
	64420-KWB-600AGM	ANCHOR GREY METALLIC	(1)	
	64420-KWB-600TBM	TECHNO BLUE METALLIC	(1)	
	64420-KWB-600PFW	PEARL FADELESS WHITE	(1)	

F - 15

Body Cover

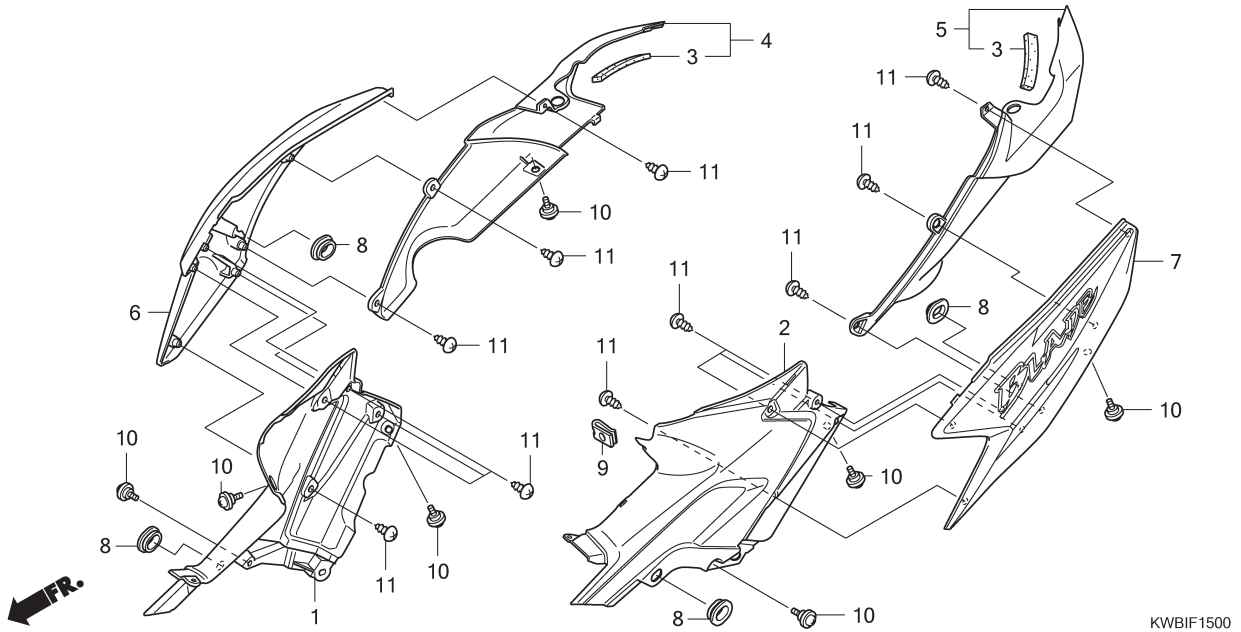

Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
		8	83551-GE2-000	GROMMET, AIR CLEANER CASE	4	
		9	90677-KAN-T00	NUT, CLIP, 5MM	1	
		10	91509-GE2-760	SCREW, PAN, 5X11.5	7	
		11	93903-25210	SCREW, TAPPING, 5X12	14	

F - 16

Air Cleaner

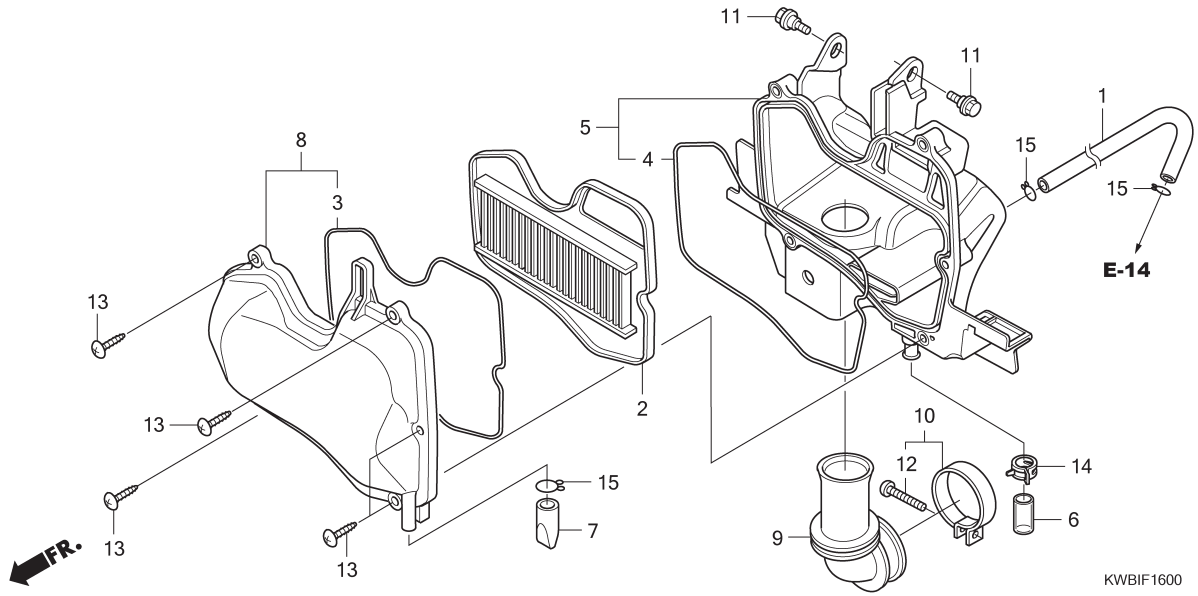

	Service item	F.R.T.
2	ELEMENT, AIR CLEANER.....	0.1
5	CASE, AIR CLEANER.....	0.5
8	COVER, AIR CLEANER CASE.....	0.1
9	TUBE, AIR CLEANER CONNECTING	0.5

No.	Part Number	Description	QTY	Notes
1	15761-KWB-600	HOSE, BREATHER	1	
2	17210-KWB-920	ELEMENT COMP., AIR CLEANER	1	
3	17213-KWB-600	SEAL, AIR CLEANER COVER	1	
4	17214-KWB-920	SEAL, AIR CLEANER CASE	1	
5	17225-KWB-920	CASE SUB ASSY., AIR CLEANER	1	
6	17227-KPK-900	TUBE, VINYL, 11X15X35	1	
7	17234-KCW-871	TUBE, AIR CLEANER DRAIN	1	
8	17235-KWB-920	COVER SUB ASSY., AIR CLEANER	1	
9	17253-KWB-920	TUBE, AIR CLEANER CONNECTING	1	
10	17255-329-000	BAND A, AIR CLEANER CONNECTING	1	
11	90116-KVB-900	BOLT, FLANGE, 6MM	2	
12	93500-05025-0G	SCREW, PAN, 5X25	1	
13	93903-25510	SCREW, TAPPING, 5X25	5	
14	95002-41300-08	CLAMP, TUBE (D13)	1	
15	95002-80000	CLIP, TUBE (C12)	3	

F - 16 - 1

Air Suction Valve

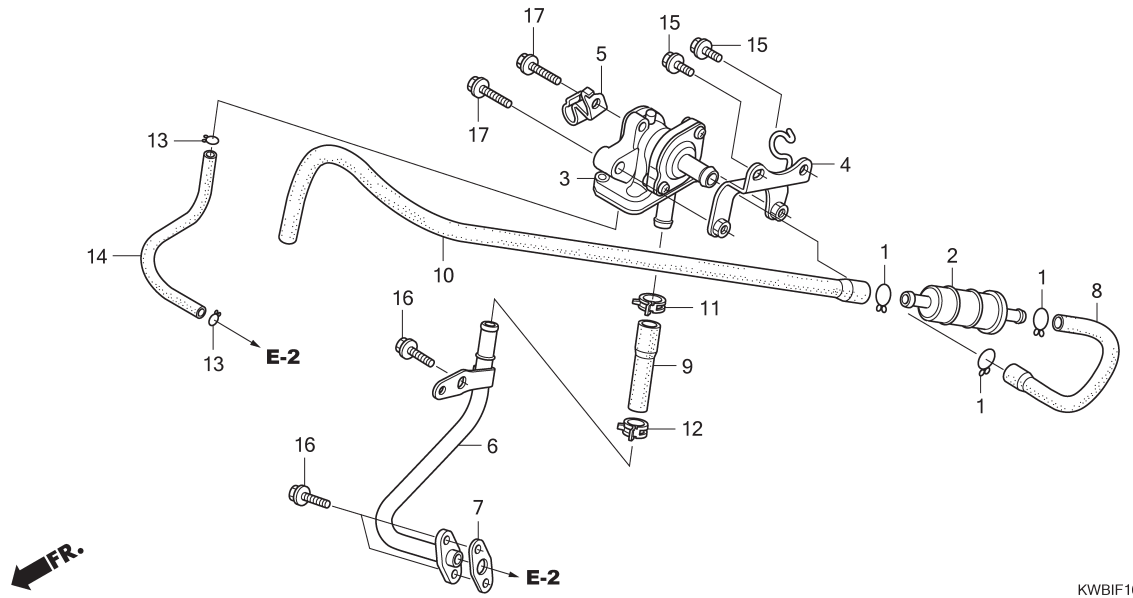

	Service item	F.R.T.
2	FILTER, SECONDARY AIR SUPPLY..	0.4
3	VALVE, SECONDARY AIR CONTROL	0.3
6	PIPE, SECONDARY AIR.....	0.2
10	(8) TUBE, SECONDARY AIR CONTROLVALVE.....	0.4

No.	Part Number	Description	QTY	Notes
1	15771-KV6-000	CLIP, OIL DRAIN TUBE	3	
2	17260-KFL-D00	FILTER COMP., AIR	1	
3	18600-KWB-921	VALVE ASSY., AIR SUCTION	1	
4	18620-KWB-920	STAY, AIR SUCTION VALVE	1	
5	18627-KWB-920	CLAMPER, HIGH TENSION CORD	1	
6	18640-KWB-920	PIPE COMP., AIR FEED	1	
7	18645-MT4-730	GASKET, AIR FEED PIPE	1	
8	18652-KWB-920	TUBE A, AIR INTAKE	1	
9	18653-KWB-920	TUBE B, AIR INTAKE	1	
10	18654-KWB-920	TUBE C, AIR SUCTION VALVE	1	
11	19509-KPH-900	CLAMP, TUBE (D19)	1	
12	90678-MN5-000	CLIP, FUEL HOSE	1	
13	95002-02070	CLIP, TUBE (B7)	2	
14	95005-35110-20	TUBE, 3.5X110	1	
15	95701-06008-00	BOLT, FLANGE, 6X8	2	
16	96001-06016-00	BOLT, FLANGE, 6X16	3	
17	96001-06018-00	BOLT, FLANGE, 6X18	2	

F - 17

Exhaust Muffler

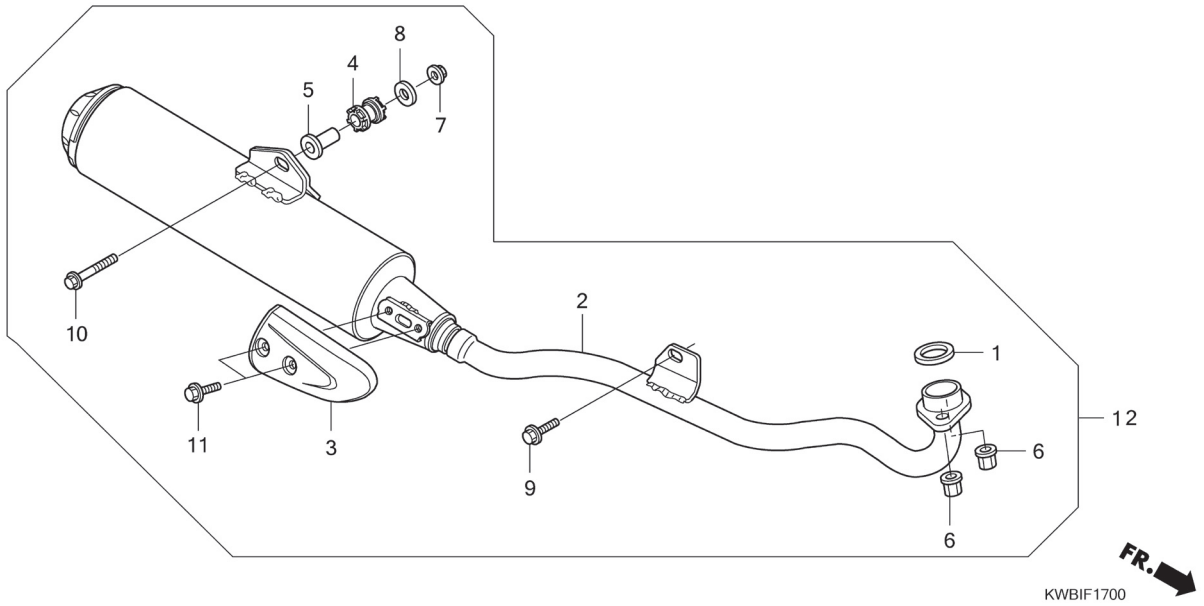

	Service item	F.R.T.
1	GASKET, EXHAUST PIPE.....	0.2
2	MUFFLER.....	0.2

No.	Part Number	Description	QTY	Notes
1	18291-GE2-920	GASKET, EX. PIPE	1	
2	18350-KWB-920	MUFFLER COMP., EX.	1	
3	18355-KWB-922	COVER, MUFFLER	1	
4	18421-KBA-900	RUBBER, MUFFLER MOUNTING	1	
5	18422-KBA-900	COLLAR, MUFFLER MOUNTING	1	
6	90301-KWB-600	NUT, FLANGE, 8MM	2	
7	94050-08000	NUT, FLANGE, 8MM	1	
8	94103-08000	WASHER, PLAIN, 8MM	1	
9	95701-08012-00	BOLT, FLANGE, 8X12	1	
10	95701-08045-00	BOLT, FLANGE, 8X45	1	
11	96001-06008-00	BOLT, FLANGE, 6X8	2	
12	18300-KWB-920	MUFFLER ASSY, EXHAUST	1	

F - 18

Pedal / Kick Arm

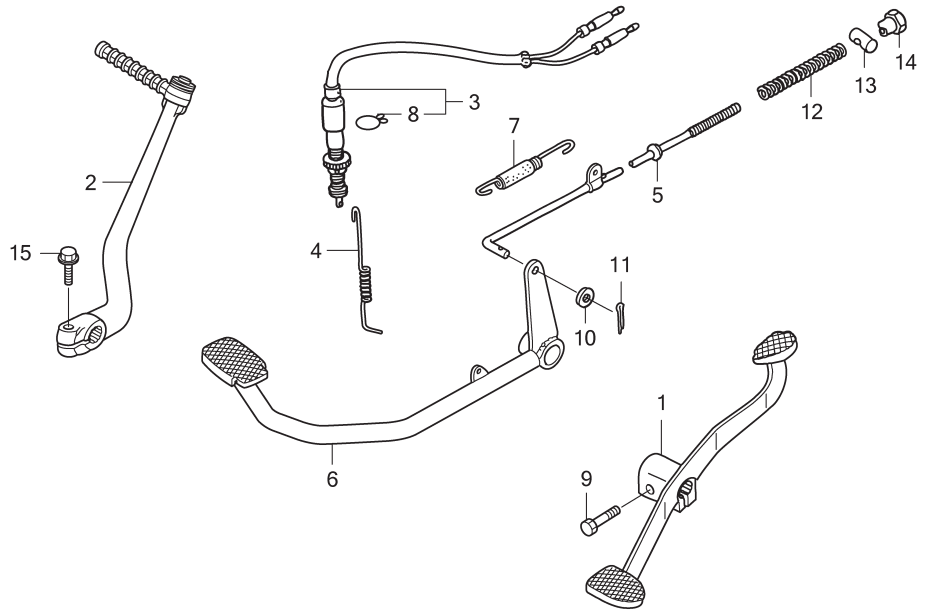

KWBIF1800

	Service item	F.R.T.
1	PEDAL, GEAR CHANGE	0.1
2	ARM, KICK STARTER	0.1
3	SWITCH, REAR STOP :PEDAL SIDE.	0.6
5	ROD, REAR BRAKE.....	0.5
6	PEDAL, REAR BRAKE.....	0.5

No.	Part Number	Description	QTY	Notes
1	24701-KWB-600	PEDAL, GEAR CHANGE	1	
2	28300-KWY-710	ARM ASSY., KICK STARTER	1	
3	35350-KWB-920	SWITCH ASSY., RR. STOP	1	
4	35357-KCC-900	SPRING, STOP SWITCH	1	
5	43451-KWB-920	ROD COMP., RR. BRAKE	1	
6	46500-KWB-920	PEDAL COMP., BRAKE	1	
7	46513-KBP-900	SPRING ASSY., RR. BRAKE RETURN	1	
8	90601-KAF-003	CLIP, SWITCH COVER	1	
9	92101-06020-0A	BOLT, HEX., 6X20	1	
10	94101-05000	WASHER, PLAIN, 5MM	1	
11	94201-20150	PIN, SPLIT, 2.0X15	1	
12	95014-73100	SPRING A, BRAKE ROD	1	
13	95015-32001	JOINT B, BRAKE ARM	1	
14	95015-42000	NUT B, BRAKE ROD ADJUSTING	1	
15	95701-06025-00	BOLT, FLANGE, 6X25	1	

F - 19

Step

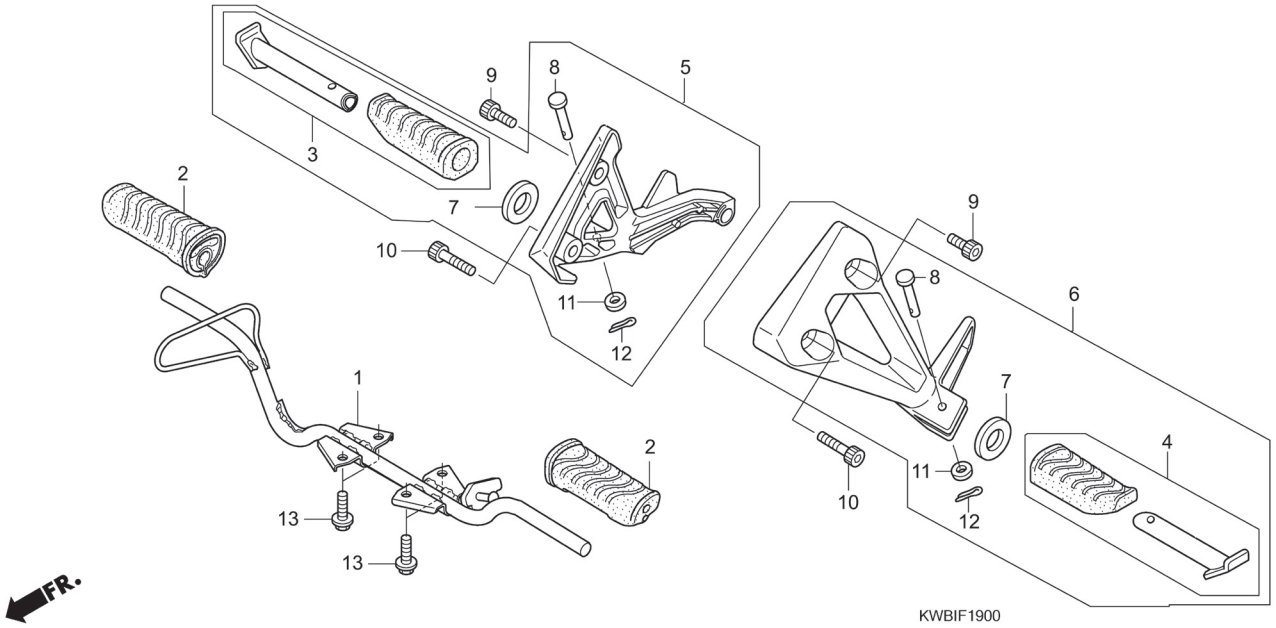

	Service item	F.R.T.
1	BAR, STEP.....	0.4
2	RUBBER, STEP :LEFT.....	0.1
	RUBBER, STEP :RIGHT	0.1
	RUBBER, STEP :BOTH	0.1
4	(3) BAR, PILLION STEP :RIGHT.....	0.1
	BAR, PILLION STEP :BOTH.....	0.2
5	(3) BAR, PILLION STEP :LEFT.....	0.1
	BAR, PILLION STEP :BOTH.....	0.2
7	BRACKET, PILLION STEP :RIGHT.....	0.2
	BRACKET, PILLION STEP :BOTH.....	0.4
8	BRACKET, PILLION STEP :LEFT.....	0.2
	BRACKET, PILLION STEP :BOTH.....	0.4

No.	Part Number	Description	QTY	Notes
1	50610-KWB-920	BAR COMP., STEP	1	
2	50661-KWB-600	RUBBER, STEP	2	
3	50711-KBP-900	BAR ASSY, R. PILLION STEP	1	
4	50712-KBP-900	BAR ASSY, L. PILLION STEP	1	
5	50700-KWB-900	STEP ASSY, R PILLION	1	
6	50705-KWB-900	STEP ASSY, L PILLION	1	
7	50715-KE8-000	PLATE, PILLION STEP SIDE	2	
8	90131-KWB-600	PIN, PILLION STEP	2	
9	90135-KWB-600	BOLT, SOCKET, 8X16	2	
10	90136-KWB-600	BOLT, SOCKET, 8X32	2	
11	94101-06000	WASHER, PLAIN, 6MM	2	
12	94201-16150	PIN, SPLIT, 1.6X15	2	
13	95701-08018-00	BOLT, FLANGE, 8X18	4	

F - 20

Stand

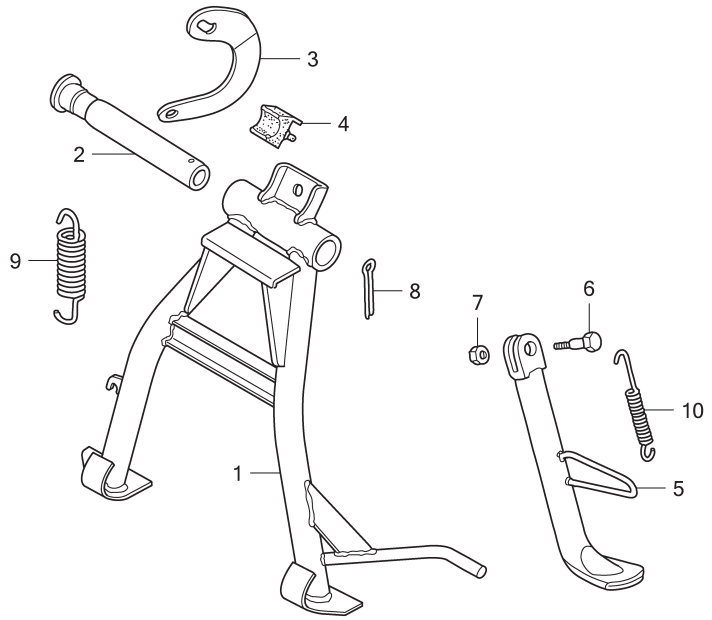

KWBIF2000

	Service item	F.R.T.
1	(2) STAND, MAIN	0.5
5	BAR, SIDE STAND	0.2
9	(3) SPRING, MAIN STAND	0.2
10	SPRING, SIDE STAND	0.1

No.	Part Number	Description	QTY	Notes
1	50500-KWB-920	STAND COMP., MAIN	1	
2	50512-KWB-600	SHAFT, RR. BRAKE PIVOT	1	
3	50523-KWB-920	HOOK, MAIN STAND SPRING	1	
4	50524-397-000	RUBBER, STAND STOPPER	1	
5	50530-KWB-920	BAR COMP., SIDE STAND	1	
6	90108-223-000	SCREW, SIDE STAND PIVOT	1	
7	94002-10000-0S	NUT, HEX., 10MM	1	
8	94201-30300	PIN, SPLIT, 3.0X30	1	
9	95014-71102	SPRING A, MAIN STAND	1	
10	95014-72102	SPRING A, SIDE STAND	1	

F - 21

Swingarm

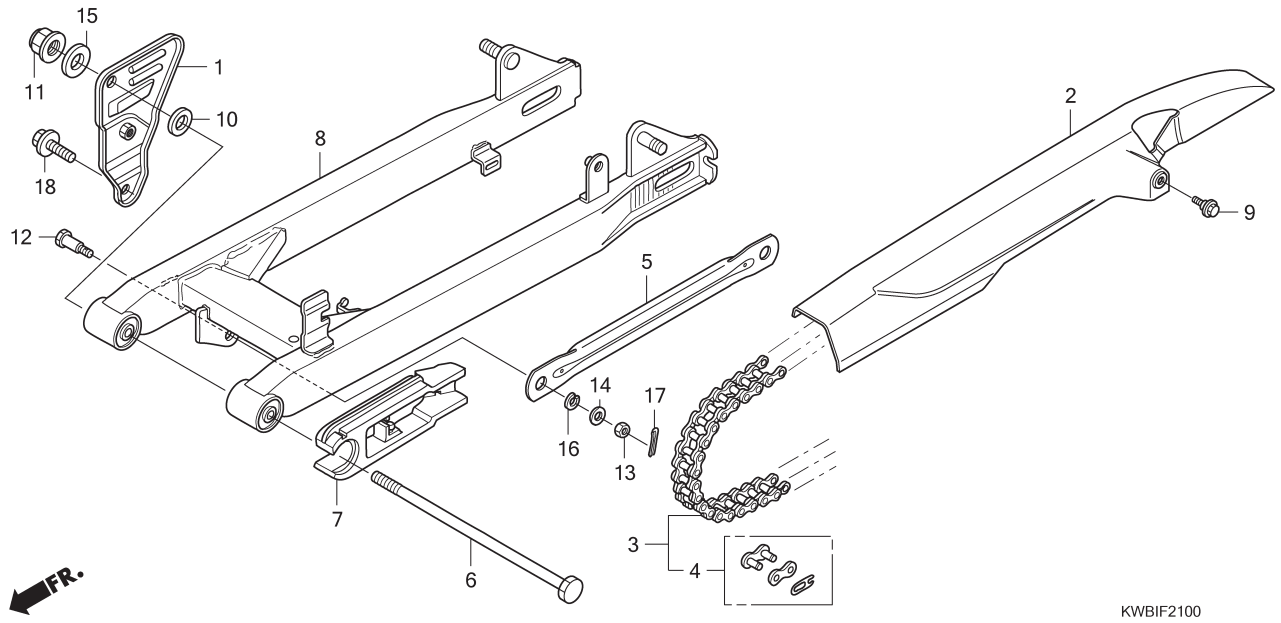

	Service item	F.R.T.
2	CASE, DRIVE CHAIN	0.1
3	CHAIN, DRIVE	0.2
5	ARM, REAR BRAKE STOPPER	0.3
7	SLIDER, CHAIN	0.3
8	SWINGARM ASSEMBLY	0.8

No.	Part Number	Description	QTY	Notes
1	18315-KWB-920	BRACKET, MUFFLER	1	
2	40510-KWB-600	CASE, DRIVE CHAIN	1	
3	40530-KWB-602	CHAIN, DRIVE (RK420SL-102RJ)	1	
4	40531-KPH-901	JOINT, DRIVE CHAIN	1	
5	43431-KWB-600	ARM, RR. BRAKE STOPPER	1	
6	52101-KWB-920	BOLT, SWINGARM PIVOT	1	
7	52170-KWB-600	SLIDER, CHAIN	1	
8	52200-KWB-920	SWINGARM SET, RR.	1	
9	90111-187-000	BOLT, FLANGE, 6MM	1	
10	90122-KWB-600	WASHER, PIVOT BOLT	1	
11	90306-KGH-901	NUT, U, 12MM	1	
12	92812-10000	BOLT A, STOPPER ARM	1	
13	94001-08000-0S	NUT, HEX., 8MM	1	
14	94101-08000	WASHER, PLAIN, 8MM	1	
15	94101-12000	WASHER, PLAIN, 12MM	1	
16	94111-10000	WASHER, SPRING, 10MM	1	
17	94201-20150	PIN, SPLIT, 2.0X15	1	
18	95701-08012-00	BOLT, FLANGE, 8X12	1	

F - 22

Rear Cushion

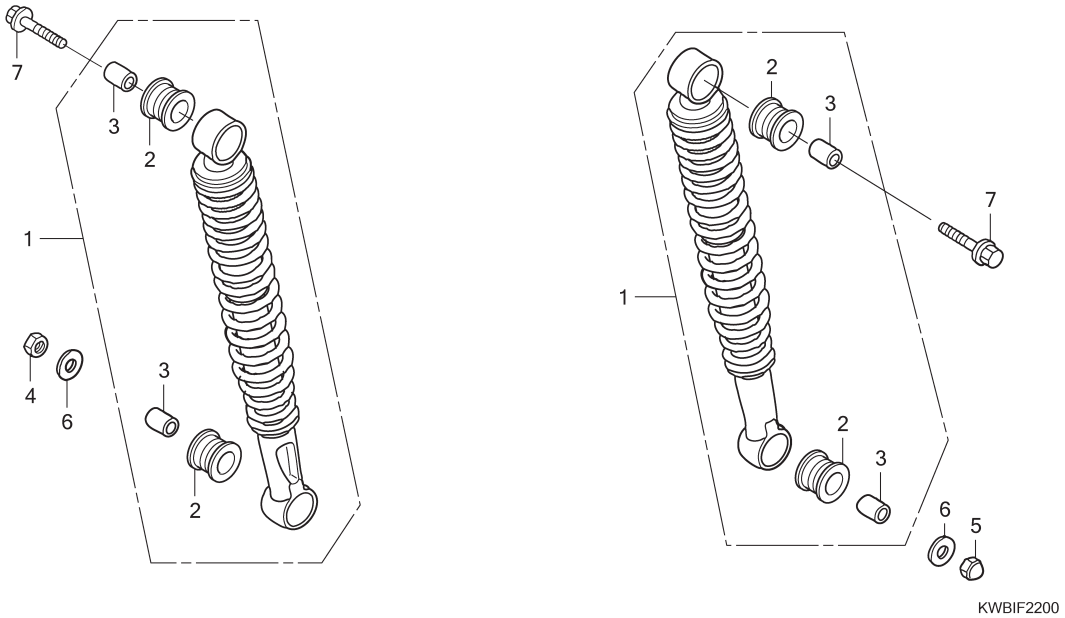

KWBIF2200

	Service item	F.R.T.
1	CUSHION ASSY., REAR :LEFT	0.6
	CUSHION ASSY., REAR :RIGHT	0.6
	CUSHION ASSY., REAR :BOTH	0.7

No.	Part Number	Description	QTY	Notes
1	52400-KWB-921	CUSHION ASSY., RR.	2	
2	52485-KVY-901	BUSH, RUBBER	4	
3	52486-GA7-003	COLLAR, RUBBER BUSH	4	
4	94001-10000-0S	NUT, HEX., 10MM	1	
5	94021-10000-0S	NUT, CAP, 10MM	1	
6	94101-10000	WASHER, PLAIN, 10MM	2	
7	95801-10035-00	BOLT, FLANGE, 10X35	2	

F - 23

Rear Fender

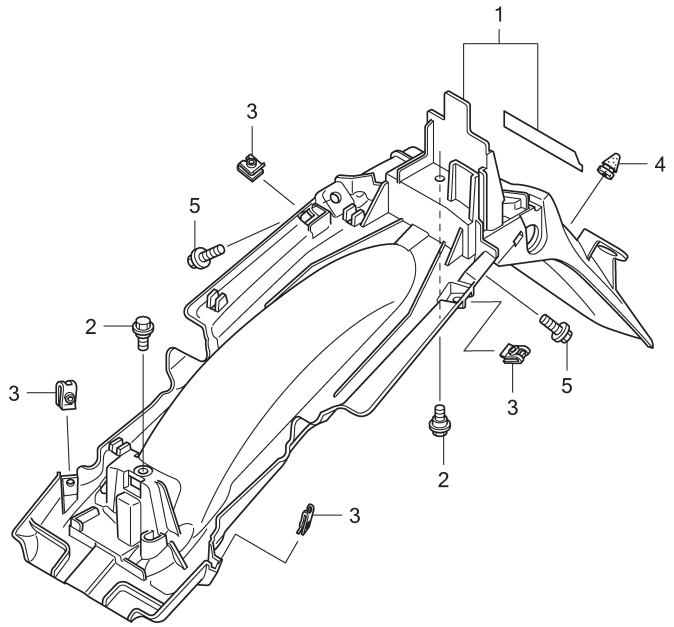

KWBIF2300

	Service item	F.R.T.
1	FENDER, REAR.....	1.1

No.	Part Number	Description	QTY	Notes
1	80200-KWB-920	FENDER, RR.	1	
2	90116-KVB-900	BOLT, FLANGE, 6MM	2	
3	90677-KAN-T00	NUT, CLIP, 5MM	4	
4	90899-422-610	PLUG, CONE TYPE	1	
5	95701-06012-00	BOLT, FLANGE, 6X12	2	

F - 24

Front Winker

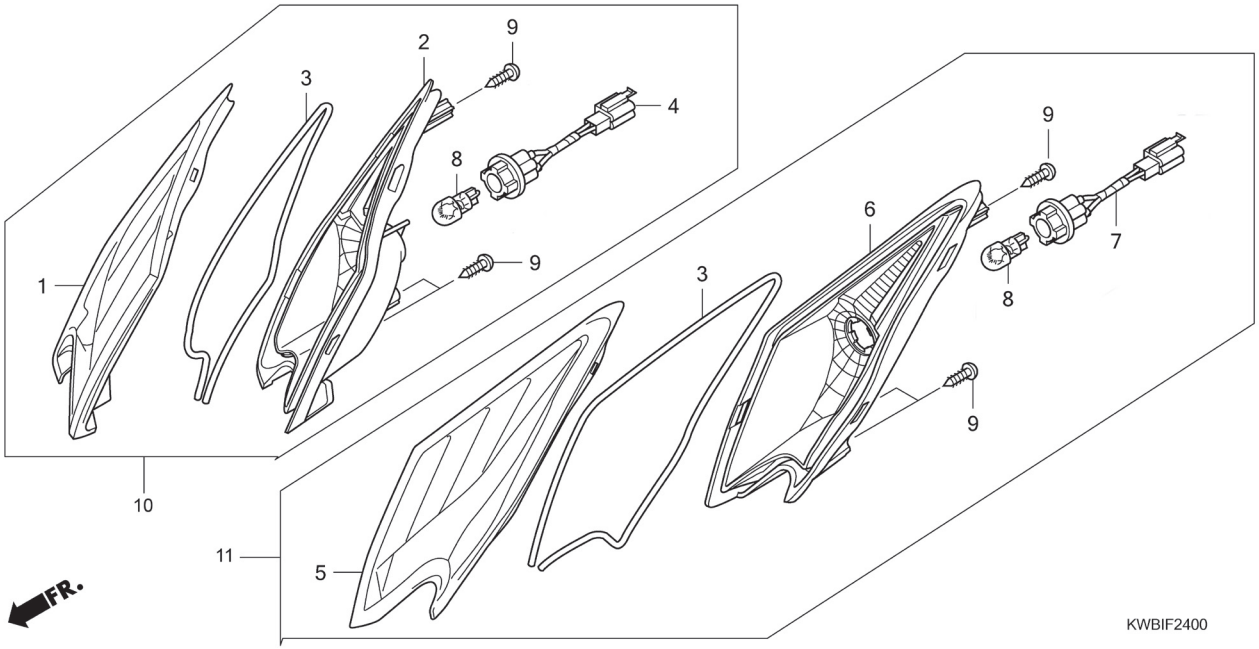

	Service item	F.R.T.
2	(1,3) BASE, WINKER :RIGHT FRONT	0.3
	BASE, WINKER :BOTH FRONT.....	0.4
4	SOCKET, WINKER :RIGHT FRONT.....	0.2
	SOCKET, WINKER :BOTH FRONT.....	0.2
6	(3,5) BASE, WINKER :LEFT FRONT...	0.3
	BASE, WINKER :BOTH FRONT.....	0.4
7	SOCKET, WINKER :LEFT FRONT.....	0.2
	SOCKET, WINKER :BOTH FRONT.....	0.2
8	BULB, WINKER :FRONT.....	0.2
	BULB, WINKER :FOR 1 VEHICLE.....	0.3

No.	Part Number	Description	QTY	Notes
1	33402-KWB-921	LENS, R. FR. WINKER	1	
2	33403-KWB-921	BASE, R. FR. WINKER	1	
3	33404-KWB-921	GASKET	2	
4	33407-KWB-921	SOCKET COMP., R. WINKER	1	
5	33452-KWB-921	LENS, L. FR. WINKER	1	
6	33453-KWB-921	BASE, L. FR. WINKER	1	
7	33457-KWB-921	SOCKET COMP., L. WINKER	1	
8	34905-KAN-W01	BULB, WINKER (12V 10W)	2	
9	93903-25210	SCREW, TAPPING, 5X12	6	
10	33400-KWB-921	WINKER ASSY, R FR	1	
11	33450-KWB-921	WINKER ASSY, L FR	1	

F - 25

Rear Combination Light

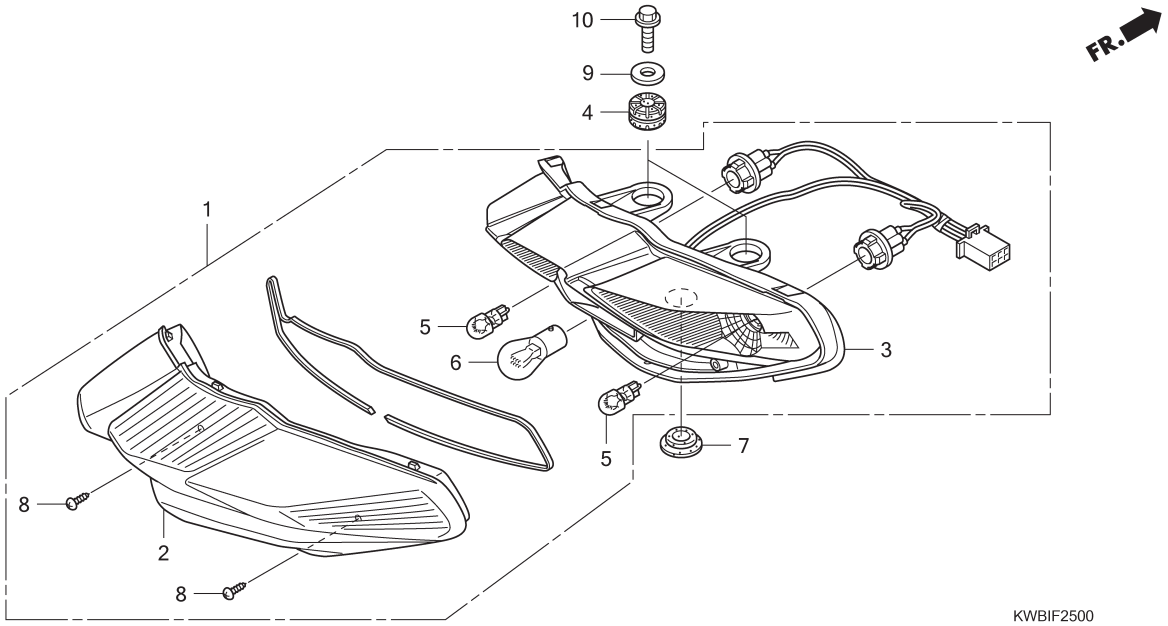

KWBIF2500

	Service item	F.R.T.
1	TAILLIGHT UNIT.....	0.2
3	BASE, TAILLIGHT	0.3
5	(2) BULB, WINKER :REAR	0.1
	.NOTE: Same time for two units	
	BULB, WINKER :FOR 1 VEHICLE.....	0.3
6	(2) BULB, TAILLIGHT	0.1

No.	Part Number	Description	QTY	Notes
1	33700-KWB-921	LIGHT ASSY., RR. COMBINATION	1	
2	33704-KWB-921	LENS COMP., TAILLIGHT	1	
3	33705-KWB-921	BASE COMP., TAILLIGHT	1	
4	33705-KW7-900	RUBBER A, TAILLIGHT MOUNTING	2	
5	34905-KAN-W01	BULB, WINKER (12V 10W)	2	
6	34906-GB6-921	BULB, TAILLIGHT (12V 18/5W)	1	
7	83601-MN5-000	GROMMET, SIDE COVER	1	
8	93901-24480	SCREW, TAPPING, 4X16	2	
9	94103-06000	WASHER, PLAIN, 6MM	2	
10	95701-06012-00	BOLT, FLANGE, 6X12	2	

F - 26

Wire Harness

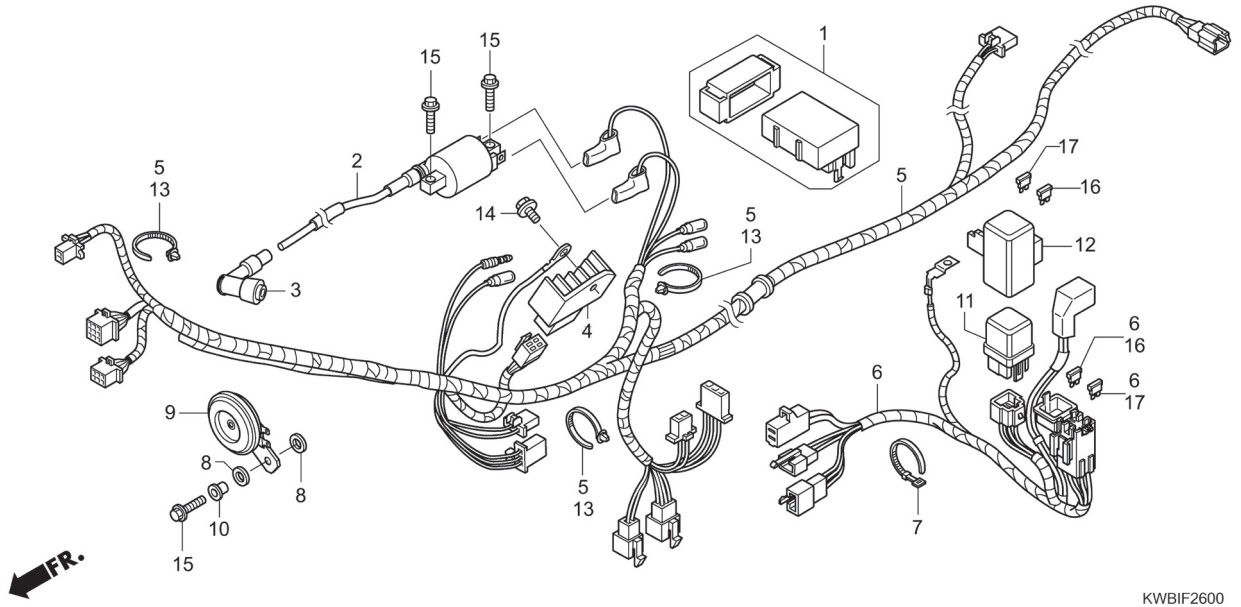

KWBIF2600

	Service item	F.R.T.
2	IGNITION CONTROL MODULE.....	0.7
3	COIL, IGNITION	0.8
5	RECTIFIER, REGULATE	0.8
6	HARNESS, WIRE	1.2
7	SUB HARNESS, BATTERY	0.8
10	HORN(S)	0.4
12	RELAY, STARTER	0.2

No.	Part Number	Description	QTY	Notes
1	30400-KWB-921	ASSY UNIT ASSY CDI	1	
2	30500-KWB-920	COIL ASSY., IGNITION	1	
3	30700-KPH-881	CAP ASSY., NOISE SUPPRESSOR	1	
4	31600-KVB-901	RECTIFIER COMP., REGULATOR	1	
5	32100-KWB-920	HARNESS, WIRE	1	
6	32103-KWB-920	SUB HARNESS, BATTERY	1	
7	32161-KRS-600	BAND B1, WIRE	1	
8	33714-KL3-620	RUBBER, TAILLIGHT BRACKET	2	
9	38110-KWB-921	HORN COMP. (HIGH)	1	
10	38117-KPH-880	COLLAR, HORN SETTING	1	
11	38501-KVB-901	RELAY COMP., STARTER	1	
12	38506-KVB-931	SUSPENSION, STARTER RELAY	1	
13	91540-KPH-902	CLIP, HARNESS BAND	3	
14	95701-06014-00	BOLT, FLANGE, 6X14	1	
15	95701-06020-00	BOLT, FLANGE, 6X20	3	
16	98200-30750	FUSE, BLADE (7.5A)	2	
17	98200-31000	FUSE, BLADE (10A)	2	

F - 27

Frame Body

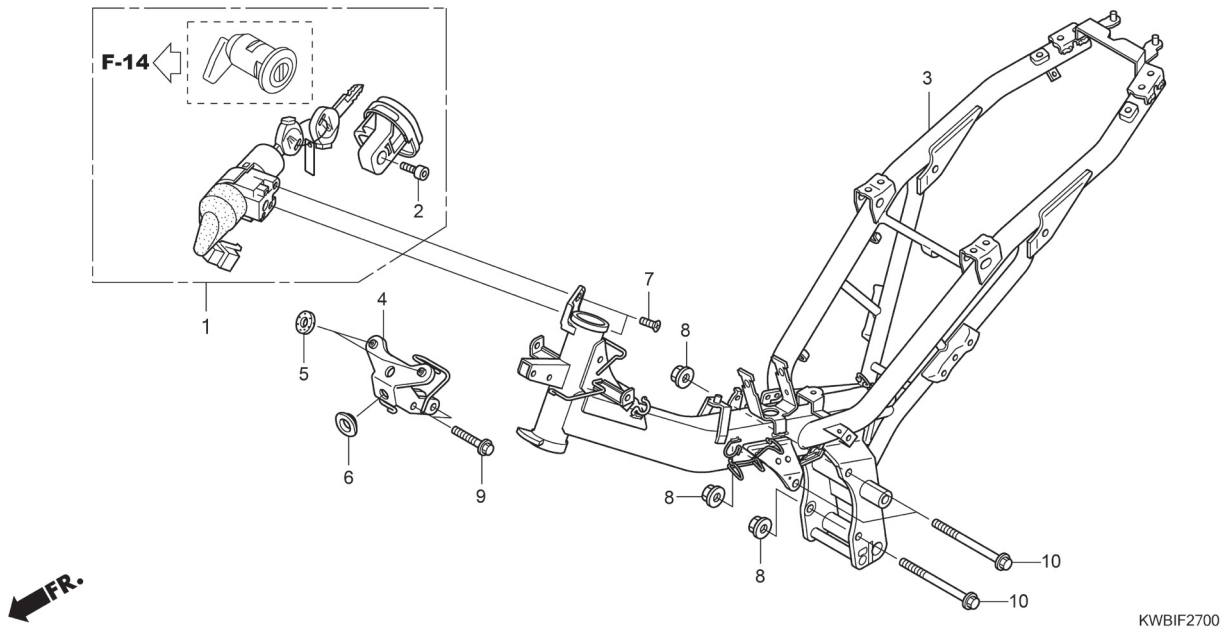

	Service item	F.R.T.
1	KEY SET	2.1
3	BODY, FRAME	6.0
	.TERMASUK: Pelepasan dan pemasangan mesin	
4	STAY, FRONT COVER	0.3

No.	Part Number	Description	QTY	Notes
1	35010-KWB-920	KEY SET	1	
2	35109-KWB-920	BOLT, SOCKET, 5X8	1	
3	50100-KWB-920	BODY COMP., FRAME	1	
4	64221-KWB-600	STAY, FR. TOP COVER	1	
5	64510-KEV-900	CUSHION, FR. TOP COVER	2	
6	83601-MN5-000	GROMMET, SIDE COVER	1	
7	90164-028-000	SCREW, U-LOCK FLAT, 6X12	2	
8	94050-10080	NUT, FLANGE, 10MM	3	
9	95701-08032-00	BOLT, FLANGE, 8X32	2	
10	95801-10110-08	BOLT, FLANGE, 10X110	3	

F - 28

Front Cover

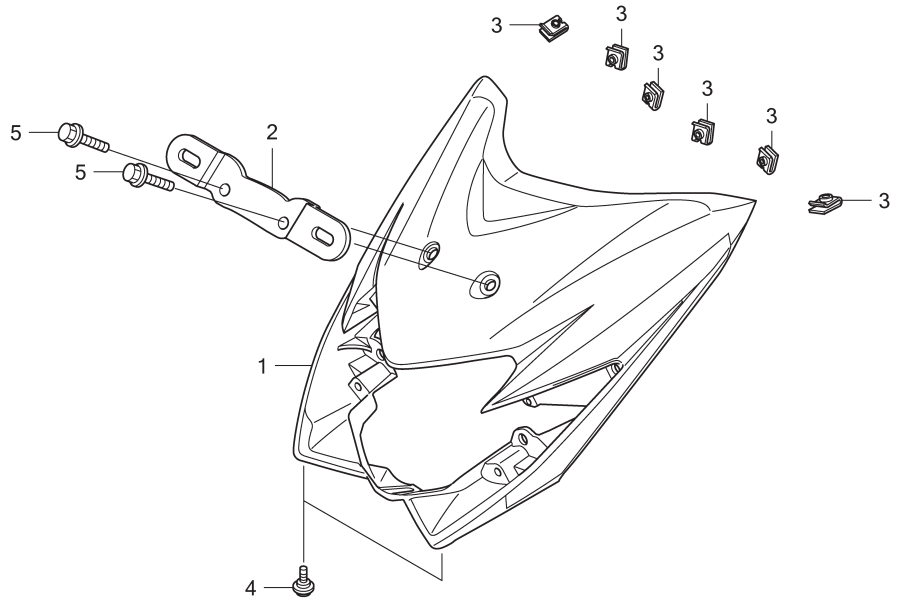

KWBIF2800

Service item	F.R.T.
1 COVER, FRONT.....	0.4

No.	Part Number	Description	QTY	Notes
1	64500-KWB-920FMB	COVER, FR. TOP BLACK	1	
	64500-KWB-920WRD	COVER, FR. TOP WINNING RED	(1)	
2	81110-KTM-850	BRACKET, FR. NUMBER PLATE	1	
3	90677-KAN-T00	NUT, CLIP, 5MM	6	
4	91509-GE2-760	SCREW, PAN, 5X11.5	2	
5	95701-06025-00	BOLT, FLANGE, 6X25	2	

F - 29

Main Pipe Cover

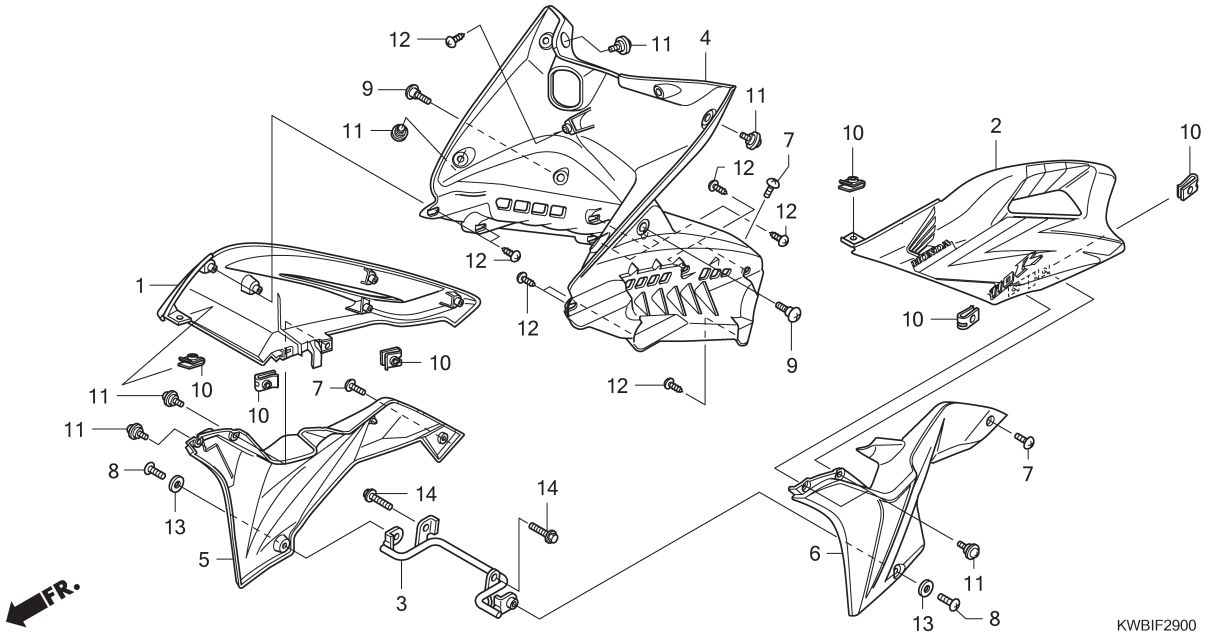

	Service item	F.R.T.
1	COVER, MAIN PIPE SIDE :RIGHT.....	0.5
	COVER, MAIN PIPE SIDE :BOTH	0.6
2	COVER, MAIN PIPE SIDE :LEFT	0.5
	COVER, MAIN PIPE SIDE :BOTH	0.6
4	COVER, MAIN PIPE UPPER	0.6
5	COVER, FRONT SIDE :RIGHT	0.1
	COVER, FRONT SIDE :BOTH	0.2
6	COVER, FRONT SIDE :LEFT	0.1
	COVER, FRONT SIDE :BOTH	0.2

No.	Part Number	Description	QTY	Notes
1	64400-KWB-920FMB	COVER, R. MAIN PIPE SIDE		
		BLACK	1	
	64400-KWB-920WRD	WINNING RED	(1)	
	64400-KWB-920SBM	SPORTY BLUE METALLIC	(1)	
	64400-KWB-920PFY	PEARL FLASH YELLOW	(1)	
	64400-KWB-920PFW	PEARL FEDELESS WHITE	(1)	
	64400-KWB-920PTB	PEARL TWISTER BLUE	(1)	
	64400-KWB-920CBO	CANDY BLITZ ORANGE	(1)	
2	64450-KWB-920FMB	COVER, L. MAIN PIPE SIDE		
		BLACK	1	
	64450-KWB-920WRD	WINNING RED	(1)	
	64450-KWB-920SBM	SPORTY BLUE METALLIC	(1)	
	64450-KWB-920PFY	PEARL FLASH YELLOW	(1)	
	64450-KWB-920PFW	PEARL FEDELESS WHITE	(1)	
	64450-KWB-920PTB	PEARL TWISTER BLUE	(1)	
	64450-KWB-920CBO	CANDY BLITZ ORANGE	(1)	
3	64311-KWB-920	STAY, LOWER COVER	1	
4	64320-KWB-920	COVER, MAIN PIPE	1	
5	64460-KWB-920VSM	COVER, R. LOWER (WL)		
		VOSTOK SILVER METALLIC	1	
	64460-KWB-920DSM	DIGITAL SILVER METALLIC	(1)	
	64460-KWB-920AGM	ANCHOR GREY METALLIC	(1)	
	64460-KWB-920PFW	PEARL FEDELESS WHITE	(1)	
	64460-KWB-920TBM	TECHNO BLUE METALLIC	(1)	

F - 29

Main Pipe Cover

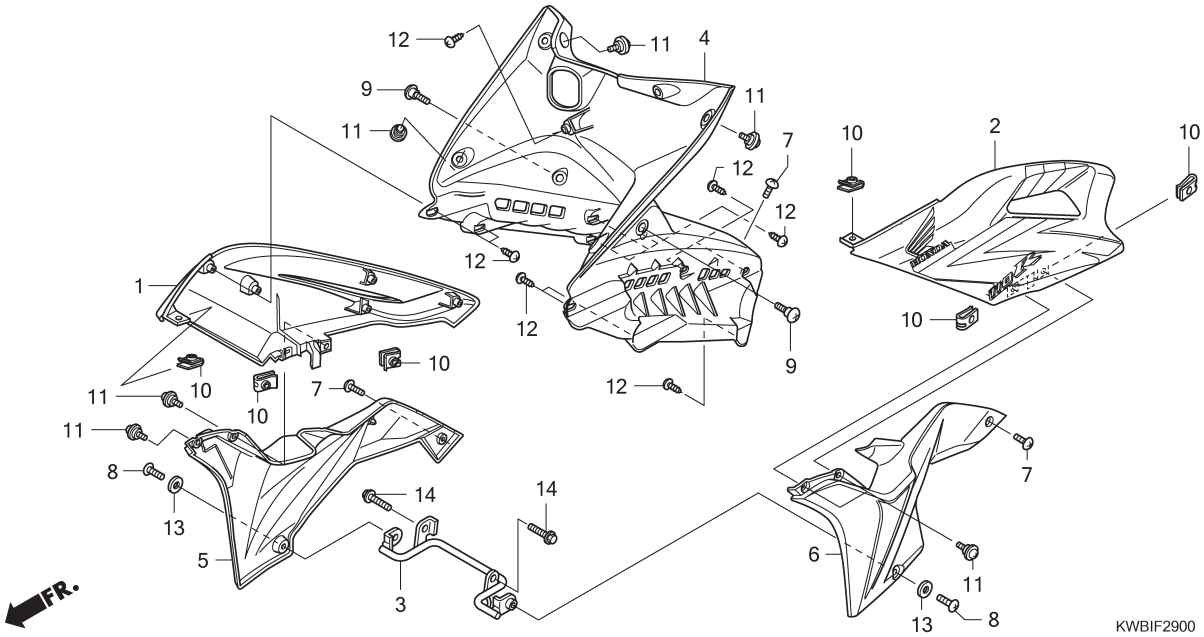

Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
		6	64470-KWB-920VSM	COVER, L. LOWER (WL)		
				VOSTOK SILVER METALLIC	1	
			64470-KWB-920DSM	DIGITAL SILVER METALLIC	(1)	
			64470-KWB-920AGM	ANCHOR GREY METALLIC	(1)	
			64470-KWB-920PFW	PEARL FEDELESS WHITE	(1)	
			64470-KWB-920TBM	TECHNO BLUE METALLIC	(1)	
		7	90107-KGH-600	SCREW, 6X12	3	
		8	90107-KTL-740	SCREW, COWL SETTING (A)	2	
		9	90380-GM9-740	SCREW, SPECIAL, 6X15	2	
		10	90677-KAN-T00	NUT, CLIP, 5MM	6	
		11	91509-GE2-760	SCREW, PAN, 5X11.5	10	
		12	93903-25210	SCREW, TAPPING, 5X12	11	
		13	94101-10000	WASHER, PLAIN, 10MM	2	
		14	96001-06020-00	BOLT, FLANGE, 6X20	2	

F - 30

Caution Label

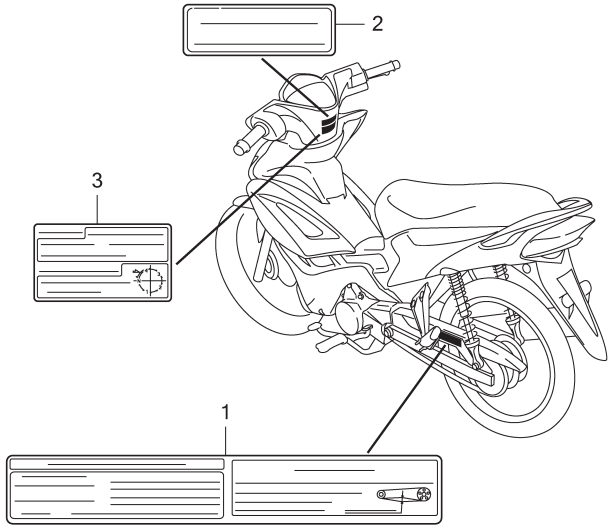

KWBIF3000

Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
		1	87505-KWB-920	LABEL, TIRE & DRIVE CHAIN	1	
		2	87513-KPH-880ZB	LABEL, ENGINE STARTER *TWHITE*	1	
		3	87560-KPH-880ZA	MARK, DRIVE CAUTION *TWHITE*	1	

F - 31

Mark / Stripe

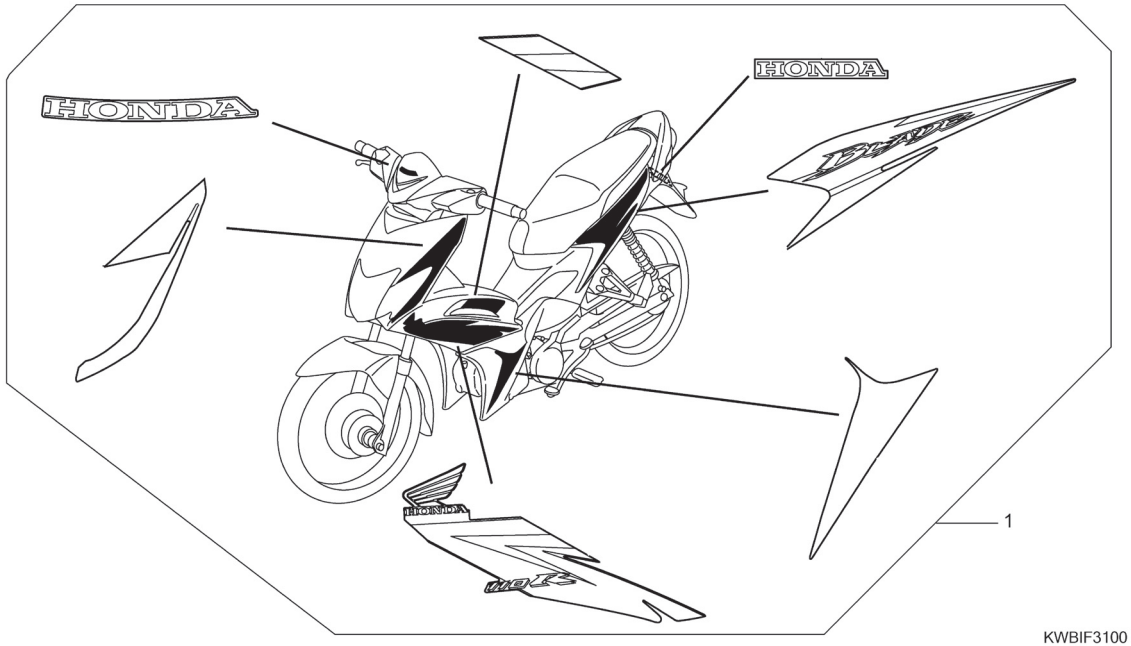

KWBIF3100

Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
		1	871X0-KWB-920ZA	STRIPE SET ..... SPEED BLACK	1	
			871X0-KWB-920ZB	STRIPE SET ..... WINNING RED	(1)	
			871X0-KWB-920ZC	STRIPE SET ..... SPORTY BLUE	(1)	
			871X0-KWB-920ZD	STRIPE SET ..... FLASH YELLOW	(1)	
			871X0-KWB-920ZE	STRIPE SET ..... VICTORY WHITE	(1)	
			871X0-KWB-920ZF	STRIPE SET ..... CHAMPION BLUE	(1)	
			871X0-KWB-920RP	STRIPE SET ..... REPSOL HONDA	(1)	

F - 32

Tools

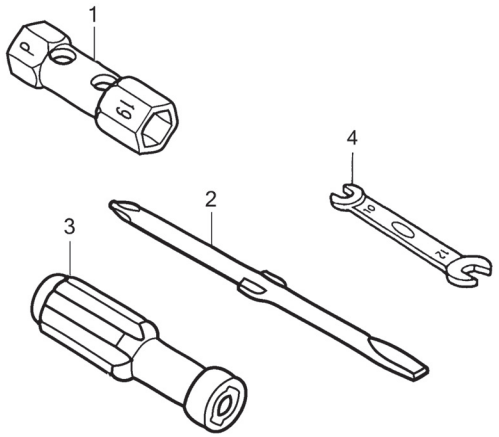

KWC8F3200

Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
		1	89216-KPH-900	WRENCH, SPARK PLUG	1	
		2	89102-538-000	DRIVER SCREW (+/-)	1	
		3	89103-538-000	GRIP	1	
		4	89211-KGH-900	SPANNER, 10X12	1	

INDEKS PART NUMBER

Part Number	Block No.
(00000)	
06451-961-405	F9
06455-KWB-601	F9
06530-GBG-B20	F6
06531-GBG-B20	F6
(10000)	
11100-KWB-600	E14
11200-KWB-921	E14
11218-KWB-600	E14
11330-KWB-600	E6
11341-KWB-600	E10
11360-KWB-921	E10
11394-KWB-920	E6
11395-KWB-920	E10
12100-KWB-921	E5
12191-KWB-921	E5
12200-KWB-921	E2
12204-KVY-901	E2
12206-KPL-900	E2
12209-GB4-682	E3
12251-KWB-601	E2
12310-KWB-600	E1
12391-KWB-600	E1
13000-KWB-600	E15
13011-KWB-305	E15
13021-KWB-305	E15
13031-KWB-305	E15
13041-KWB-305	E15
13051-KWB-305	E15
13101-KWB-920	E15
13102-KWB-306	E15
13103-KWB-306	E15
13104-KWB-306	E15
13105-KWB-306	E15
13111-087-000	E15
13115-GN5-910	E15
13115-GN5-910	E6
14100-KWB-920	E3
14321-KWB-600	E4
14401-KWB-920	E4
14430-KVY-900	E3
14440-KVY-900	E3
14451-KWB-600	E3
14500-KWB-600	E4
14502-086-000	E4
14531-KWB-600	E4
14541-GB4-681	E4
14550-GB0-911	E4
14566-086-030	E4
14610-KWB-600	E4
14615-KFL-850	E4
14670-KWB-600	E4
14675-KWB-600	E4
14711-KWB-600	E3
14721-KVY-900	E3
14751-KWB-600	E3
14771-GB4-680	E3
14775-KVY-900	E3
14781-MA6-000	E3
15100-KWB-920	E9
15119-KWB-600	E9
15331-GF6-000	E9
15332-GF6-000	E9
15421-035-010	E9
15431-HF7-010	E7
15439-KWB-920	E7
15651-KPH-900	E6
15661-GN5-910	E8
15761-KWB-600	F16
15771-KV6-000	F16-1
16010-KSS-901	E19
16012-KWB-923	E19
16013-KPG-901	E19
16014-KWB-921	E19
16015-KVV-901	E19
16016-KPH-651	E19
16022-KWB-921	E19
16028-KTT-901	E19
16037-KPH-901	E19
16040-KEV-900	E19
16041-GB5-D30	E19
16048-KPH-901	E19
16075-GHB-640	E19
16075-GHB-B40	E19
16100-KWB-924	E19
16148-141-881	E19
16148-KB1-921	E19
16155-KRS-861	E19
16163-GFP-901	E19
16165-KWB-921	E19
16175-GB0-911	E19
16176-GB0-911	E19
16199-435-771	E19
16199-KWB-921	E19
16201-KWB-920	E2
16211-KPH-900	E2
16910-KFM-902	F13
16951-KSS-901	E19
16963-KPH-C01	E19
17110-KWB-921	E2
17210-KWB-920	F16
17213-KWB-600	F16
17214-KWB-920	F16
17225-KWB-920	F16
17227-KPK-900	F16
17234-KCW-871	F16
17235-KWB-920	F16
17253-KWB-920	F16
17255-329-000	F16
17260-KFL-D00	F16-1
17510-KWB-920	F13
17620-KGH-600	F13
17630-KWB-920	F13
17631-KEV-900	F13
17910-KWB-920	F3
17950-KWB-920	F3
17961-KFM-900	F3
17962-KFM-900	F3
18291-GE2-920	F17
18300-KWB-920	F17
18315-KWB-920	F21
18350-KWB-920	F17
18355-KWB-922	F17
18421-KBA-900	F17
18422-KBA-900	F17
18600-KWB-921	F16-1
18620-KWB-920	F16-1
18627-KWB-920	F16-1
18640-KWB-920	F16-1
18645-MT4-730	F16-1
18652-KWB-920	F16-1
18653-KWB-920	F16-1
18654-KWB-920	F16-1
19509-KPH-900	F16-1
(20000)	
22110-KWB-931	E8
22115-KPH-900	E8
22116-KWB-600	E8
22121-KWB-600	E8
22201-KWB-600	E8
22204-KWB-600	E8
22321-KWB-600	E8
22351-KWB-600	E8
22361-KWB-600	E8
22401-KWB-600	E8
22402-KWB-600	E8
22535-KWB-305	E7
22606-GN5-910	E7
22610-KWB-600	E7
22630-KWB-600	E7
22641-KWB-600	E7
22642-KFL-850	E7
22643-KFL-D00	E7
22644-KFL-851	E7
22660-KWB-600	E7
22804-GB2-000	E7
22810-KTL-740	E6
22823-KWB-600	E6
22825-KWB-600	E6
22830-KWB-600	E6
22846-KPH-901	E6
22860-KWB-600	E6
23120-KTL-740	E7
23122-KTL-740	E7
23123-KFL-850	E7
23124-GCE-900	E7
23125-GN5-910	E7
23126-KWB-600	E7
23211-KWB-600	E16
23221-KWB-600	E16
23415-KPH-900	E16
23421-KWB-600	E16
23431-KWB-600	E16
23451-KWB-600	E16
23461-KWB-600	E16
23471-KWB-600	E16
23481-KWB-600	E16
23801-KWB-600	E16
23802-GN5-910	E16
23911-KPH-900	E16
24211-KWB-600	E17
24261-KWB-600	E17
24263-028-000	E17
24301-KWB-600	E17
24305-KWB-600	E16
24306-KWB-600	E16
24411-KWB-600	E17
24421-200-000	E17
24430-GB4-772	E17
24435-GB4-772	E17
24610-KWB-600	E17
24630-KWB-600	E17
24641-041-000	E17
24651-041-000	E17
24652-KPH-900	E17
24701-KWB-600	F18
28110-KWB-920	E12
28111-KWB-920	E12
28120-KPH-701	E12
28120-KWB-921	E12
28130-KWB-920	E12
28132-KPH-900	E12
28211-KWB-600	E18
28221-KWB-600	E18
28251-KWB-600	E18
28262-KWB-600	E18
28265-KWB-600	E18
28271-KWB-600	E18
28281-KWB-600	E18
28300-KWY-710	F18
(30000)	
30400-KWB-921	F26
30500-KWB-920	F26
30700-KPH-881	F26
31110-KWB-921	E11
31120-KWB-921	E11
31204-KG8-004	E13
31206-GW3-004	E13
31210-KWB-921	E13
31500-KPH-881	F14
31600-KVB-901	F26
31916-KWB-601	E2
31926-KWB-601	E2

INDEKS PART NUMBER

Part Number	Block No.
32100-KWB-920	F26
32101-GW3-780	E13
32103-KWB-920	F26
32105-KWB-921	E13
32161-KRS-600	F26
33110-KWB-921	F1
33115-KBA-830	F1
33130-KWB-921	F1
33400-KWB-921	F24
33402-KWB-921	F24
33403-KWB-921	F24
33404-KWB-921	F24
33407-KWB-921	F24
33450-KWB-921	F24
33452-KWB-921	F24
33453-KWB-921	F24
33457-KWB-921	F24
33700-KWB-921	F25
33704-KWB-921	F25
33705-KW7-900	F25
33705-KWB-921	F25
33714-KL3-620	F26
34901-KPH-881	F1
34905-KAN-W01	F24
34905-KAN-W01	F25
34906-GB6-921	F25
34908-GA7-701	F1
34908-GA7-701	F2
34908-MB9-871	F2
35010-KWB-920	F27
35109-KWB-920	F27
35150-KPH-880	F3
35160-KPH-881	F3
35170-KWB-920	F3
35180-KPH-881	F3
35200-KVB-900	F3
35340-KWB-600	F4
35350-KWB-920	F18
35357-KCC-900	F18
35751-KPH-900	E17
35752-KPH-900	E17
35759-KWB-921	E14
37121-ML7-671	F2
37200-KWB-920	F2
37210-KWB-920	F2
37211-KWB-601	F2
37212-KWB-920	F2
37224-KWB-920	F2
37305-KE5-008	F2
37800-KWB-920	F13
37801-GA7-700	F13
37802-KTL-740	F13
38110-KWB-921	F26
38117-KPH-880	F26
38301-GBG-911	F2
38306-GE7-000	F2
38501-KVB-901	F26
38506-KVB-931	F26
(40000)	
40510-KWB-600	F21
40530-KWB-602	F21
40531-KPH-901	F21
40543-KWB-600	F11
40543-KWB-600	F12
41200-KWB-920	F12
41241-KWB-600	F12
42301-KWB-600	F12
42303-KWB-600	F12
42304-KFM-900	F12
42313-GBG-B20	F11
42601-KWB-920ZA	F12
42615-KWB-920	F12
42620-KFL-850	F12
42653-001-004	F12
42711-KWB-922	F12
42712-KWB-922	F12
43100-KPH-700ZC	F11
43125-KPH-903	F11
43141-KTM-850	F11
43352-568-003	F9
43353-461-771	F9
43410-KWB-600	F11
43431-KWB-600	F21
43434-ME1-670	F11
43451-KWB-920	F18
43513-KBP-881	F4
44301-KWB-600	F10
44311-KWB-920	F10
44601-KWB-920ZA	F10
44620-KPH-950	F10
44711-KWB-922	F10
44712-KWB-922	F10
44800-KWB-600	F10
44806-KWB-600	F10
44809-KFM-900	F10
44830-KWB-920	F2
45111-MAJ-G41	F9
45126-KWB-921	F4
45131-GZ0-006	F9
45132-166-016	F9
45133-028-000	F11
45133-MA3-006	F9
45134-250-000	F11
45145-KFM-900	F11
45156-KWB-600	F4
45157-KWB-600	F4
45208-KWB-601	F9
45215-KPH-951	F9
45216-166-006	F9
45218-KWB-601	F9
45250-KWB-921	F9
45251-KWB-602	F10
45290-KWB-601	F9
45451-471-000	F7
45465-KWB-600	F6
45504-410-003	F4
45510-KWB-600	F4
45512-MA6-006	F4
45517-GW0-751	F4
45520-GW0-911	F4
45521-GW0-911	F4
45530-KVY-911	F4
46500-KWB-920	F18
46513-KBP-900	F18
(50000)	
50100-KWB-920	F27
50301-GN5-901	F6
50302-GN5-900	F6
50306-GN5-900	F6
50381-KWB-920	F14
50400-KWB-600	F14
50500-KWB-920	F20
50512-KWB-600	F20
50523-KWB-920	F20
50524-397-000	F20
50530-KWB-920	F20
50610-KWB-920	F19
50661-KWB-600	F19
50700-KWB-900	F19
50705-KWB-900	F19
50711-KBP-900	F19
50712-KBP-900	F19
50715-KE8-000	F19
51400-KWB-921	F8
51401-KWB-921	F8
51410-KWB-921	F8
51412-GN5-901	F8
51412-KWB-601	F8
51420-KWB-601	F8
51425-GN5-901	F8
51437-KWB-601	F8
51454-KEV-881	F8
51456-KPH-901	F8
51466-065-901	F8
51470-KWB-921	F8
51490-KGH-901	F8
51500-KWB-921	F8
51520-KWB-601	F8
52101-KWB-920	F21
52170-KWB-600	F21
52200-KWB-920	F21
52400-KWB-921	F22
52485-KVY-901	F22
52486-GA7-003	F22
53100-KWB-920	F5
53105-KWB-600	F5
53106-KR3-000	F5
53108-KR3-770	F5
53125-KWB-600	F5
53140-KWB-600	F3
53166-KWB-600	F3
53167-KFM-900	F3
53168-KFM-900	F3
53175-KRS-T80	F4
53200-KWB-920	F6
53203-KWB-920ZA	F5
53206-KWB-920	F5
53209-GAH-000	F1
53211-GN5-900	F6
53212-GN5-900	F6
53214-GN5-900	F6
53216-GN5-830	F6
53220-GN5-900	F6
(60000)	
61100-KWB-920	F7
64200-KWB-920	F29
64221-KWB-600	F27
64250-KWB-920	F29
64300-KWB-920	F28
64311-KWB-920	F29
64320-KWB-920	F29
64325-KWB-920	F15
64330-KWB-920	F15
64430-KWB-920	F29
64440-KWB-920	F29
64481-KWB-600	F15
64485-KWB-600	F15
64495-KWB-600	F15
64510-KEV-900	F27
64521-MN5-000	F5
64600-KWB-920	F15
64650-KWB-920	F15
(70000)	
75581-KWB-600	F14
77115-KWB-600	F14
77200-KWB-920	F14
77201-KWB-600	F14
77214-KPH-900	F14
77230-KWB-600	F14
77234-GN2-000	F14
77236-GW0-000	F14
77240-KPH-691	F14
(80000)	
80200-KWB-920	F23
81110-KTM-850	F28
81250-KWB-920	F14
81253-KPH-900	F14
81312-KW7-900	F7
83551-GE2-000	F15

INDEKS PART NUMBER

Part Number	Block No.
83601-MN5-000	F25
83601-MN5-000	F27
871X0-KWB-920	F31
87505-KWB-920	F30
87513-KPH-880ZB	F30
87560-KPH-880ZA	F30
88110-KTM-780FMB	F3
88120-KTM-780FMB	F3
89102-538-0000	F32
89103-538-000	F32
89211-KGH-900	F32
89216-KPH-9000	F32
(90000)	
90002-KWB-600	E2
90004-GHB-690	E2
90012-KWB-600	E3
90017-GCC-000	E1
90031-KWB-600	E14
90035-166-008	F2
90050-KWB-600	E8
90071-171-010	E17
90081-035-000	E4
90083-GB6-911	E4
90083-KFL-850	E7
90084-GN5-640	E10
90085-KTC-920	E12
90101-GJ6-000	F1
90102-KGH-900	F4
90105-KGH-900	F10
90105-KPH-900	F14
90106-GN5-900	F5
90107-KGH-600	F29
90107-KPH-700	F7
90107-KTL-740	F29
90108-223-000	F20
90109-MZ5-008	F2
90111-187-000	F21
90114-KGH-900	F4
90116-KV3-701	F8
90116-KVB-900	F16
90116-KVB-900	F23
90122-KWB-600	F21
90128-KWB-600	F12
90129-KWB-600	F14
90131-KPH-880	F9
90131-KWB-600	F19
90135-KWB-600	F19
90136-KWB-600	F19
90145-GAZ-981	F4
90164-028-000	F27
90191-KWB-600	F5
90201-GCC-000	E2
90206-001-000	E3
90231-087-010	E7
90231-198-000	E8
90301-KGH-901	F11
90301-KWB-600	F17
90302-KBP-900	F11
90302-KBP-900	F12
90304-KGH-901	F5
90306-KGH-901	F10
90306-KGH-901	F11
90306-KGH-901	F21
90309-KPH-971	F12
90380-GM9-740	F29
90401-GB2-000	E7
90401-KVY-900	E2
90402-KWB-600	E2
90403-KM9-000	E11
90403-KPH-900	E8
90403-KWB-600	E16
90403-KWB-600	E16
90404-KWB-600	E4
90407-259-000	E14
90412-187-000	E16
90412-KPH-900	E16
90431-GN5-910	E7
90432-086-000	E7
90433-KWB-600	E7
90442-147-000	F3
90451-KGH-900	E18
90452-413-000	E16
90452-GB4-770	E16
90454-107-000	E18
90455-GB2-000	E7
90461-035-000	E16
90461-459-010	E16
90461-KWB-600	E16
90463-ML7-000	E4
90465-KWB-600	E16
90475-KWB-600	E4
90485-040-000	E6
90501-GBL-730	E8
90501-KPH-880	F5
90502-KPH-900	F14
90505-425-000	F11
90505-KPH-880	F5
90543-MV9-670	E1
90544-283-000	F8
90544-KF0-000	E4
90545-300-000	F4
90601-001-000	E16
90601-459-000	E16
90601-KAF-003	F18
90603-P0X-000	E7
90605-166-720	E7
90605-200-000	E18
90634-KPG-900	F14
90651-MA5-671	F4
90677-KAN-T00	F15
90677-KAN-T00	F23
90677-KAN-T00	F28
90677-KAN-T00	F29
90678-MN5-000	F16-1
90701-KFM-900	E2
90701-KFM-900	E5
90701-KFM-901	E1
90703-HC4-000	E14
90741-003-010	E15
90899-422-610	F23
91001-KPH-901	E15
91001-KWB-601	E15
91005-KWB-921	E12
91052-KWB-601	F10
91052-KWB-601	F12
91053-KWB-601	F12
91054-KWB-601	F12
91101-GB2-000	E7
91202-KRS-971	E6
91204-KWB-601	E16
91208-KWB-601	E14
91251-KPH-881	F12
91251-KPH-901	F10
91251-KWB-601	F10
91256-KK3-840	F2
91303-001-000	E6
91303-377-000	E10
91304-GB1-900	E2
91307-035-000	E6
91309-KEE-630	E13
91356-GM0-003	F8
91509-GE2-760	F15
91509-GE2-760	F28
91509-GE2-760	F29
91509-GE2-760	F5
91540-KPH-902	F26
91551-SF4-003	F2
92101-06010-0A	E16
92101-06020-0A	F18
92800-12000	E14
92811-10000	F11
92812-10000	F21
92900-08032-0E	E2
93101-06014-0A	E14
93404-06012-00	E2
93500-05010-0A	E9
93500-05010-0G	F3
93500-05012-0G	F3
93500-05025-0G	F16
93500-05025-0G	F3
93600-04012-1G	F4
93891-04016-07	F5
93892-03012-18	E19
93892-04006-08	E13
93892-04010-18	E19
93892-04014-08	E19
93892-05010-18	E19
93892-05016-08	E13
93893-04012-17	F4
93901-24480	F25
93903-24320	F5
93903-25210	F15
93903-25210	F24
93903-25210	F29
93903-25310	F2
93903-25510	F16
94001-05070-0S	F3
94001-06000-0S	F11
94001-06000-0S	F12
94001-06070-0S	F14
94001-08000-0S	F11
94001-08000-0S	F21
94001-10000-0S	F22
94002-10000-0S	F20
94021-10000-0S	F22
94030-08000	E6
94050-06000	F4
94050-08000	F17
94050-10000	E11
94050-10080	F27
94101-05000	F18
94101-06000	F19
94101-08000	F21
94101-10000	F22
94101-10000	F29
94101-12000	F21
94103-05700	F3
94103-06000	F25
94103-08000	F17
94111-10000	F21
94201-16150	F19
94201-20150	F11
94201-20150	F18
94201-20150	F21
94201-30300	F20
94301-08140	E10
94301-08140	E6
94510-16000	E18
95001-55045-40	F13
95002-02070	F16-1
95002-02100	F13
95002-02659	E19
95002-41300-08	F16
95002-80000	F16
95005-35110-20	F16-1
95014-71102	F20
95014-72102	F20
95014-73100	F18
95015-32001	F18
95015-42000	F18

INDEKS PART NUMBER

Part Number	Block No.
95701-06008-00	F16-1
95701-06012-00	E16
95701-06012-00	F13
95701-06012-00	F14
95701-06012-00	F23
95701-06012-00	F25
95701-06014-00	F26
95701-06018-00	E14
95701-06018-00	E4
95701-06020-00	E8
95701-06020-00	F26
95701-06020-00	F7
95701-06022-00	F4
95701-06025-00	F18
95701-06025-00	F28
95701-06035-00	F11
95701-08012-00	F17
95701-08012-00	F21
95701-08014-07	F14
95701-08018-00	F19
95701-08018-00	F19
95701-08025-00	E4
95701-08032-00	F27
95701-08045-00	F17
95801-10035-00	F22
95801-10045-00	F6
95801-10110-08	F27
96001-06008-00	F17
96001-06012-00	F4
96001-06012-00	F6
96001-06016-00	E11
96001-06016-00	E9
96001-06016-00	F16-1
96001-06018-00	F16-1
96001-06020-00	E11
96001-06020-00	F29
96001-06022-00	E2
96001-06022-00	E9
96001-06025-00	E10
96001-06030-00	F14
96001-06032-00	E13
96001-06035-00	E10
96001-06040-00	E6
96001-06060-00	E14
96001-06075-00	E14
96001-06100-00	E2
96100-60010-00	E16
96100-62000-00	E8
96100-62010-00	E16
96100-62030-00	E16
96140-62010-10	F10
96140-62010-10	F12
96140-62030-10	F12
96140-63010-10	F12
96220-30100	E17
98200-30750	F26
98200-31000	F26
99101-KWB-0920	E19
99103-KPH-0350	E19

INDEKS DESCRIPTION

Description	Block No.
(A)	
ADJUSTER, R. CHAIN	F11
ADJUSTER, R. CHAIN	F12
ARM ASSY., KICK STARTER	F18
ARM COMP., CAM CHAIN TENSIONER	E4
ARM COMP., EX. VALVE ROCKER	E3
ARM COMP., GEARSHIFT	E17
ARM COMP., IN. VALVE ROCKER	E3
ARM COMP., SHIFT DRUM STOPPER	E17
ARM, RR. BRAKE	F11
ARM, RR. BRAKE STOPPER	F21
ASSY UNIT ASSY CDI	F26
AXLE, FR. WHEEL	F10
AXLE, RR. WHEEL	F12
(B)	
BALL SET, STEEL, #6X23	F6
BALL SET, STEEL, #6X29	F6
BAND A, AIR CLEANER CONNECTING	F16
BAND B1, WIRE	F26
BAND, WIRE HARNESS	F2
BAR ASSY, L. PILLION STEP	F19
BAR ASSY, R. PILLION STEP	F19
BAR COMP., SIDE STAND	F20
BAR COMP., STEP	F19
BASE COMP., TAILLIGHT	F25
BASE, L. FR. WINKER	F24
BASE, R. FR. WINKER	F24
BATTERY ASSY. (GTZ5S)	F14
BEARING, NEEDLE, 19X23X17	E12
BEARING, RADIAL BALL, 6001	E16
BEARING, RADIAL BALL, 6200	E8
BEARING, RADIAL BALL, 6201	E16
BEARING, RADIAL BALL, 6201U	F10
BEARING, RADIAL BALL, 6201U	F10
BEARING, RADIAL BALL, 6201U	F12
BEARING, RADIAL BALL, 6201U	F12
BEARING, RADIAL BALL, 6203	E16
BEARING, RADIAL BALL, 6203U	F12
BEARING, RADIAL BALL, 6203U	F12
BEARING, RADIAL BALL, 63/22	E15
BEARING, RADIAL BALL, 63/22	E15
BEARING, RADIAL BALL, 6301U	F12
BEARING, RADIAL BALL, 6301U	F12
BLACK	F29
BLACK	F29
BODY COMP., FRAME	F27
BODY SET, COCK	E19
BOLT A, BRAKE STOPPER	F11
BOLT A, STOPPER ARM	F21
BOLT, ADJUSTING	F1
BOLT, BRAKE DISK, 8X24	F10
BOLT, CLUTCH ADJUSTING	E6
BOLT, COWL SETTING	F7
BOLT, DRAIN PLUG, 12MM	E14
BOLT, FLANGE, 10X110	F27
BOLT, FLANGE, 10X35	F22
BOLT, FLANGE, 10X45	F6
BOLT, FLANGE, 10X50	F5
BOLT, FLANGE, 5X12	E2
BOLT, FLANGE, 6MM	F16
BOLT, FLANGE, 6MM	F21
BOLT, FLANGE, 6MM	F23
BOLT, FLANGE, 6X10	F4
BOLT, FLANGE, 6X100	E2
BOLT, FLANGE, 6X12	E16
BOLT, FLANGE, 6X12	F4
BOLT, FLANGE, 6X12	F6
BOLT, FLANGE, 6X12	F13
BOLT, FLANGE, 6X12	F14
BOLT, FLANGE, 6X12	F23
BOLT, FLANGE, 6X12	F25
BOLT, FLANGE, 6X14	F26
BOLT, FLANGE, 6X16	E9
BOLT, FLANGE, 6X16	E11
BOLT, FLANGE, 6X16	F16-1
BOLT, FLANGE, 6X18	E4
BOLT, FLANGE, 6X18	E14
BOLT, FLANGE, 6X18	F16-1
BOLT, FLANGE, 6X20	E8
BOLT, FLANGE, 6X20	E11
BOLT, FLANGE, 6X20	F7
BOLT, FLANGE, 6X20	F26
BOLT, FLANGE, 6X20	F29
BOLT, FLANGE, 6X22	E2
BOLT, FLANGE, 6X22	E9
BOLT, FLANGE, 6X22	F4
BOLT, FLANGE, 6X25	E10
BOLT, FLANGE, 6X25	F18
BOLT, FLANGE, 6X25	F28
BOLT, FLANGE, 6X30	F14
BOLT, FLANGE, 6X32	E2
BOLT, FLANGE, 6X32	E13
BOLT, FLANGE, 6X35	E10
BOLT, FLANGE, 6X35	F11
BOLT, FLANGE, 6X40	E6
BOLT, FLANGE, 6X60	E14
BOLT, FLANGE, 6X75	E14
BOLT, FLANGE, 6X8	F16-1
BOLT, FLANGE, 6X8	F17
BOLT, FLANGE, 8X12	F17
BOLT, FLANGE, 8X12	F21
BOLT, FLANGE, 8X14	F14
BOLT, FLANGE, 8X18	F19
BOLT, FLANGE, 8X18	F19
BOLT, FLANGE, 8X25	E4
BOLT, FLANGE, 8X32	F27
BOLT, FLANGE, 8X45	F17
BOLT, HANDLE LEVER PIVOT	F4
BOLT, HEAD COVER	E1
BOLT, HEX., 6X10	E16
BOLT, HEX., 6X14	E14
BOLT, HEX., 6X20	F18
BOLT, KNOCK, 5MM	E4
BOLT, KNOCK, 6MM	E17
BOLT, OIL, 10X22	F4
BOLT, PIN	F9
BOLT, SEALING, 14MM	E4
BOLT, SEAT HINGE	F14
BOLT, SOCKET, 5X8	F27
BOLT, SOCKET, 6X14	E12
BOLT, SOCKET, 8MM	F8
BOLT, SOCKET, 8X16	F19
BOLT, SOCKET, 8X32	F19
BOLT, SPECIAL FLANGE, 5X8	E7
BOLT, SPECIAL FLANGE, 6X16	E8
BOLT, SPECIAL, 6X30	F14
BOLT, STUD, 7X180.5	E14
BOLT, STUD, 8X18	F12
BOLT, STUD, 8X32	E2
BOLT, SWINGARM PIVOT	F21
BOLT, TORX, 8X25	F9
BOLT-WASHER, 6X12	E2

INDEKS DESCRIPTION

Description	Block No.
BOOT B	F9
BOOT COMP.	F4
BOOT, PIN BUSH.	F9
BOX ASSY., SPEEDOMETER GEAR	F10
BOX COMP., LUGGAGE	F14
BRACKET SUB ASSY., FR.	F9
BRACKET, FR. NUMBER PLATE	F28
BRACKET, MUFFLER	F21
BRUSH SET	E13
BULB, HEADLIGHT	F1
BULB, TAILLIGHT (12V 18/5W)	F25
BULB, WEDGE BASE (T10)	F1
BULB, WEDGE BASE (T10)	F2
BULB, WEDGE BASE (T10)	F2
BULB, WINKER (12V 10W)	F24
BULB, WINKER (12V 10W)	F25
BUSH, 15MM	E16
BUSH, RUBBER	F22
(C)	
CABLE COMP., CHOKE	F3
CABLE COMP., SPEEDOMETER	F2
CABLE COMP., THROTTLE	F3
CALIPER SUB ASSY., R. FR.	F9
CAM, RR. BRAKE	F11
CAMSHAFT COMP.	E3
CAP ASSY., NOISE SUPPRESSOR	F26
CAP, A.C. GENERATOR	E10
CAP, BLEEDER	F9
CAP, CABLE SEALING	E19
CAP, CHANGE SWITCH CONTACT	E17
CAP, CHOKE DUST	E19
CAP, FUEL FILLER	F13
CAP, MASTER CYLINDER	F4
CARBURETOR ASSY. (PB7UA A)	E19
CASE COMP., L. FR. BOTTOM	F8
CASE COMP., R. FR. BOTTOM	F8
CASE COMP., UNDER	F2
CASE SUB ASSY., AIR CLEANER	F16
CASE, DRIVE CHAIN	F21
CATCH COMP., SEAT	F14
CENTER, CLUTCH	E8
CHAIN, CAM (90L)	E4
CHAIN, DRIVE (RK420SL-102RJ)	F21
CHAMBER SET, FLOAT	E19

Description	Block No.
CIRCLIP	F4
CIRCLIP, 20MM	E16
CIRCLIP, 7MM	E7
CIRCLIP, EXTERNAL, 16MM	E18
CIRCLIP, EXTERNAL, 17MM	E16
CIRCLIP, INTERNAL, 45MM	E7
CLAMP	F2
CLAMP, TUBE (D13)	F16
CLAMP, TUBE (D19)	F16-1
CLAMPER B, BRAKE HOSE	F4
CLAMPER, BRAKE HOSE	F4
CLAMPER, HIGH TENSION CORD	F16-1
CLIP, BATTERY COVER	F14
CLIP, FUEL HOSE	F16-1
CLIP, GEARSHIFT FORK GUIDE PIN	E17
CLIP, HARNESS BAND	F26
CLIP, HEADLIGHT	F1
CLIP, OIL DRAIN TUBE	F16-1
CLIP, PISTON PIN, 13MM	E6
CLIP, PISTON PIN, 13MM	E15
CLIP, SWITCH COVER	F18
CLIP, TUBE	F13
CLIP, TUBE (B6.5)	E19
CLIP, TUBE (B7)	F16-1
CLIP, TUBE (C12)	F16
CLIP, VALVE GUIDE	E2
CLUTCH ASSY., ONE WAY	E12
CLUTCH ASSY., ONE WAY	E12
COIL ASSY., IGNITION	F26
COLLAR A, HANDLE SETTING	F5
COLLAR B, HANDLE SETTING	F5
COLLAR, 19X28X4	E7
COLLAR, 6.2X20	F14
COLLAR, CAM CHAIN TENSIONER	E4
COLLAR, CLUTCH OUTER	E8
COLLAR, FR. AXLE DISTANCE	F10
COLLAR, FR. FENDER	F7
COLLAR, FR. WHEEL SIDE	F10
COLLAR, HORN SETTING	F26
COLLAR, KICK SPRING	E18
COLLAR, LOCK PLATE	E16
COLLAR, MUFFLER MOUNTING	F17
COLLAR, RR. AXLE DISTANCE	F12
COLLAR, RR. BRAKE PANEL SIDE	F11
COLLAR, RR. WHEEL SIDE	F12

Description	Block No.
COLLAR, RUBBER BUSH	F22
CONTACT ASSY., CHANGE SWITCH	E14
COTTER, VALVE	E3
COUNTERSHAFT	E16
COVER COMP., CYLINDER HEAD	E1
COVER COMP., L. RR. BODY	F15
COVER COMP., L. RR. CRANKCASE	E10
COVER COMP., R. CRANKCASE	E6
COVER COMP., R. RR. BODY	F15
COVER SUB ASSY., AIR CLEANER	F16
COVER, BATTERY	F14
COVER, FR. HANDLE (WL) *TYPE1*	F5
COVER, FR. TOP BLACK	F28
COVER, FR. TOP WINNING RED	F28
COVER, L. BODY	F15
COVER, L. CENTER	F15
COVER, L. CRANKCASE	E10
COVER, L. LOWER (WL)	F29
COVER, L. MAIN PIPE SIDE	F29
COVER, MAIN PIPE	F29
COVER, MUFFLER	F17
COVER, OIL FILTER	E7
COVER, R. BODY	F15
COVER, R. CENTER	F15
COVER, R. LOWER (WL)	F29
COVER, R. MAIN PIPE SIDE	F29
COVER, RR. HANDLE	F5
CRANKCASE COMP., L.	E14
CRANKCASE COMP., R.	E14
CRANKSHAFT COMP.	E15
CUP, FUEL STRAINER	E19
CUSHION ASSY., RR.	F22
CUSHION, FR. TOP COVER	F27
CYLINDER COMP.	E5
CYLINDER SET, MASTER	F4
CYLINDER SUB ASSY., FR. BRAKE	F4
(D)	
DAMPER SET, WHEEL	F12
DIAPHRAGM	F4
DIGITAL SILVER METALLIC	F15
DIGITAL SILVER METALLIC	F15
DISK B, CLUTCH FRICTION	E8
DISK, CLUTCH FRICTION	E8
DISK, FR. BRAKE	F10

INDEKS DESCRIPTION

Description	Block No.
DOWEL PIN, 10X14	E14
DOWEL PIN, 8X14	E6
DOWEL PIN, 8X14	E10
DOWEL PIN, SPECIAL, 8X14	E1
DOWEL PIN, SPECIAL, 8X14	E2
DOWEL PIN, SPECIAL, 8X14	E5
DRIVER SCREW (+/-)	F32
DRUM, GEARSHIFT	E17
DUST SEAL	F8
DUST SEAL, 21X37X7	F10
DUST SEAL, 27X40X4.5	F12
DUST SEAL, 42X54X7	F10
DUST SEAL, BRAKE CAM	F11
DUST SEAL, STEERING HEAD	F6
(E)	
ELEMENT COMP., AIR CLEANER	F16
(F)	
FENDER, RR.	F23
FENDER., FR. BLACK	F7
FENDER., FR. PEARL FADELESS WHITE	F7
FENDER., FR. PEARL FLASH YELLOW	F7
FENDER., FR. PEARL TWISTER BLUE	F7
FENDER., FR. SPORTY BLUE METALIC	F7
FENDER., FR. TECHNO BLUE METALIC	F7
FENDER., FR. WINNING RED	F7
FILTER COMP., AIR	F16-1
FLANGE SUB ASSY., FINAL DRIVEN	F12
FLOAT SET	E19
FLYWHEEL COMP.	E11
FORK ASSY., L. FR..	F8
FORK ASSY., R. FR.	F8
FORK, GEARSHIFT	E17
FUEL UNIT	F13
FUSE, BLADE (10A)	F26
FUSE, BLADE (7.5A)	F26
(G)	
GASKET	F24
GASKET SET	E19
GASKET SET	E19
GASKET, AIR FEED PIPE	F16-1
GASKET, CARBURETOR INSULATOR	E2
GASKET, CYLINDER	E5
GASKET, CYLINDER HEAD	E2
GASKET, EX. PIPE	F17
GASKET, FLOAT CHAMBER	E19
GASKET, HEAD COVER	E1
GASKET, L. CRANKCASE COVER	E10
GASKET, OIL FILTER	E7
GASKET, OIL PUMP BODY	E9
GASKET, R. CRANKCASE COVER	E6
GAUGE, OIL LEVEL	E6
GEAR COMP., PRIMARY DRIVE	E7
GEAR COMP., STARTER DRIVEN	E12
GEAR COMP., STARTER REDUCTION	E12
GEAR, COUNTERSHAFT FOURTH	E16
GEAR, COUNTERSHAFT LOW (34T)	E16
GEAR, COUNTERSHAFT THIRD (26T)	E16
GEAR, MAINSHAFT FOURTH (24T)	E16
GEAR, MAINSHAFT SECOND (17T)	E16
GEAR, MAINSHAFT THIRD (21T)	E16
GEAR, SPEEDOMETER (19T)	F10
GEAR, STARTER DRIVEN (55T)	E12
GLASS	F2
GRIP	F32
GRIP COMP., THROTTLE	F3
GRIP, L. HANDLE	F3
GROMMET, AIR CLEANER CASE	F15
GROMMET, SIDE COVER	F25
GROMMET, SIDE COVER	F27
GROMMET, WIRE	F7
GUIDE, CLUTCH OUTER	E8
GUIDE, FR. BRAKE CABLE	F6
GUIDE, VALVE	E2
(H)	
HARNESS, WIRE	F26
HEAD COMP., CYLINDER	E2
HEAD, CAM CHAIN TENSIONER PUSH	E4
HEADLIGHT UNIT	F1
HINGE, SEAT	F14
HOLDER, MASTER CYLINDER	F4
HOLDER, NEEDLE JET	E19
HOOK, MAIN STAND SPRING	F20
HORN COMP. (HIGH)	F26
HOSE COMP., FR. BRAKE	F4
HOSE, BREATHER	F16
HOUSING, UNDER THROTTLE	F3
HOUSING, UPPER THROTTLE	F3
(I)	
INDICATOR, FR. BRAKE	F11
INNER COMP., ONE-WAY CLUTCH	E7
INSULATOR, CARBURETOR	E2
(J)	
JET, MAIN, #92	E19
JET, SLOW, #35	E19
JOINT B, BRAKE ARM	F18
JOINT, DRIVE CHAIN	F21
(K)	
KEY SET	F27
KEY, WOODRUFF, 4MM	E15
(L)	
LABEL, ENGINE STARTER *TWHITE*	F30
LABEL, TIRE & DRIVE CHAIN	F30
LENS COMP., TAILLIGHT	F25
LENS, L. FR. WINKER	F24
LENS, R. FR. WINKER	F24
LEVER COMP., CLUTCH	E6
LEVER SET, COCK	E19
LEVER, CHOKE	F3
LEVER, R. STEERING HANDLE	F4
LIGHT ASSY., RR. COMBINATION	F25
LOCK ASSY., SEAT	F14
(M)	
MAINSHAFT (12T)	E16
MARK, DRIVE CAUTION *TWHITE*	F30
MAT, RR. BODY COVER	F15
METER COMP., SPEED & FUEL	F2
MIRROR ASSY., I. BLACK	F3
MIRROR ASSY., R. BLACK	F3
MOTOR UNIT, STARTER	E13
MUFFLER ASSY, EXHAUST	F17
MUFFLER COMP., EX.	F17
(N)	
NEEDLE SET, JET	E19
NUT B, BRAKE ROD ADJUSTING	F18
NUT B, LOCK, 14MM	E8
NUT SET, SQUARE	E19
NUT, ADJUST	F1
NUT, CAP, 10MM	F22
NUT, CLIP, 4MM	F5
NUT, CLIP, 5MM	F15

INDEKS DESCRIPTION

Description	Block No.
NUT, CLIP, 5MM	F23
NUT, CLIP, 5MM	F28
NUT, CLIP, 5MM	F29
NUT, FLANGE, 10MM	E11
NUT, FLANGE, 10MM	F27
NUT, FLANGE, 6MM	F4
NUT, FLANGE, 8MM	F17
NUT, FLANGE, 8MM	F17
NUT, HEX., 10MM	F20
NUT, HEX., 10MM	F22
NUT, HEX., 5MM	F3
NUT, HEX., 6MM	F11
NUT, HEX., 6MM	F12
NUT, HEX., 6MM	F14
NUT, HEX., 7MM	E2
NUT, HEX., 8MM	E6
NUT, HEX., 8MM	F11
NUT, HEX., 8MM	F21
NUT, LOCK, 14MM	E7
NUT, SPECIAL, 6MM	F11
NUT, SPECIAL, 6MM	F12
NUT, STEERING STEM LOCK	F6
NUT, TAPPET ADJUSTING	E3
NUT, U, 10MM	F5
NUT, U, 12MM	F10
NUT, U, 12MM	F11
NUT, U, 12MM	F21
NUT, U, 6MM	F11
NUT, U, 8MM	F12
(O)	
OIL SEAL, 11.6X22X7	E14
OIL SEAL, 13.8X24X5	E6
OIL SEAL, 17X29X5	E16
O-RING	E13
O-RING	F8
O-RING, 1.3X4.3	E19
O-RING, 10X1.5	F2
O-RING, 13.8X2.5	E10
O-RING, 18X3	E6
O-RING, 2.4X25	E19
O-RING, 25X2.4	E2
O-RING, 40.5X3	F12
O-RING, 8MM	E6
OUTER ASSY., PRIMARY CLUTCH	E7
OUTER COMP., CLUTCH	E8
(P)	
PACKING	E13
PACKING, BASE	F13
PACKING, DRAIN COCK, 12.5X20	E14
PACKING, FUEL FILLER CAP	F13
PAD SET, FR.	F9
PANEL COMP., RR. BRAKE *NH303M*	F11
PEDAL COMP., BRAKE	F18
PEDAL, GEAR CHANGE	F18
PIN	E7
PIN, GEARSHIFT DRUM	E17
PIN, GEARSHIFT FORK GUIDE	E17
PIN, GUIDE ROLLER	E4
PIN, HANGER	F9
PIN, PILLION STEP	F19
PIN, PISTON	E15
PIN, SHIFT RETURN SPRING	E17
PIN, SPLIT, 1.6X15	F19
PIN, SPLIT, 2.0X15	F11
PIN, SPLIT, 2.0X15	F18
PIN, SPLIT, 2.0X15	F21
PIN, SPLIT, 3.0X30	F20
PINION, KICK STARTER (22T)	E18
PIPE COMP., AIR FEED	F16-1
PIPE COMP., FR. FORK	F8
PIPE COMP., INLET	E2
PIPE COMP., STEERING HANDLE	F5
PIPE, SEAT	F8
PISTON	F9
PISTON (0.25)	E15
PISTON (0.50)	E15
PISTON (0.75)	E15
PISTON (1.00)	E15
PISTON (STD.)	E15
PLATE COMP., CLUTCH LIFTER	E6
PLATE COMP., PRIMARY DRIVE	E7
PLATE SET, VALVE	E19
PLATE, CLUTCH	E8
PLATE, CLUTCH LIFTER	E8
PLATE, CLUTCH LIFTER CAM	E6
PLATE, CLUTCH PRESSURE	E8
PLATE, CLUTCH SIDE	E7
PLATE, DIAPHRAGM	F4
PLATE, DRUM LOCK	E16
PLATE, FIXING	E16
PLATE, GEARSHIFT DRUM STOPPER	E17
PLATE, OIL SEPARATOR	E8
PLATE, OIL STOPPER	E14
PLATE, PILLION STEP SIDE	F19
PLATE, PLUNGER	E2
PLUG, CONE TYPE	F23
PLUG, SPARK (CPR6EA-9S)	E2
PLUG, SPARK (U20EPR9S)	E2
PROTECTOR	F4
PUMP ASSY., OIL	E9
(R)	
RACE, STEERING BOTTOM BALL	F6
RACE, STEERING BOTTOM CONE	F6
RACE, STEERING TOP BALL	F6
RACE, STEERING TOP CONE	F6
RAIL, RR. GRAB	F14
RATCHET, STARTER DRIVE	E18
RECTIFIER COMP., REGULATOR	F26
RELAY COMP., STARTER	F26
RELAY COMP., WINKER	F2
RETAINER COMP., BALL	E6
RETAINER, FUEL UNIT	F13
RETAINER, KICK SPINDLE	E18
RETAINER, SPRING	E7
RETAINER, VALVE SPRING	E3
RING SET, PISTON (0.25)	E15
RING SET, PISTON (0.50)	E15
RING SET, PISTON (0.75)	E15
RING SET, PISTON (1.00)	E15
RING SET, PISTON (STD.)	E15
RING, BACK UP	F8
RING, HANDLE WEIGHT SNAP	F5
RING, OIL SEAL STOPPER	F8
RING, PISTON	F8
RING, STOPPER	F8
RING, STOPPER	F9
ROD COMP., CAM CHAIN TENSIONER	E4
ROD COMP., RR. BRAKE	F18
ROLLER COMP., CAM CHAIN GUIDE	E4
ROLLER, 3X10	E17
ROLLER, 5X8	E7
ROLLER, CAM CHAIN TENSIONER	E4

INDEKS DESCRIPTION

Description	Block No.
ROTOR, OIL PUMP INNER	E9
ROTOR, OIL PUMP OUTER	E9
RUBBER A, HANDLE WEIGHT	F5
RUBBER A, TAILLIGHT MOUNTING	F25
RUBBER B, SEAT SETTING	F14
RUBBER, CLUTCH DAMPER	E7
RUBBER, LUGGAGE BOX MOUNTING	F14
RUBBER, MOUNTING	E1
RUBBER, MUFFLER MOUNTING	F17
RUBBER, SEAL	F14
RUBBER, STAND STOPPER	F20
RUBBER, STEP	F19
RUBBER, STOPPER ARM	F11
RUBBER, TAILLIGHT BRACKET	F26
(S)	
SCREEN, FUEL STRAINER	E19
SCREEN, OIL FILTER	E9
SCREW SET	E19
SCREW SET	E19
SCREW, 6X12	F29
SCREW, BLEEDER.	F9
SCREW, COWL SETTING (A)	F29
SCREW, FLAT, 4X12	F4
SCREW, OVAL, 6X45	F5
SCREW, PAN, 5X10	E9
SCREW, PAN, 5X10	F3
SCREW, PAN, 5X11.5	F5
SCREW, PAN, 5X11.5	F15
SCREW, PAN, 5X11.5	F28
SCREW, PAN, 5X11.5	F29
SCREW, PAN, 5X12	F3
SCREW, PAN, 5X25	F3
SCREW, PAN, 5X25	F16
SCREW, SIDE STAND PIVOT	F20
SCREW, SPECIAL, 6X15	F29
SCREW, TAPPET ADJUSTING	E3
SCREW, TAPPING, 4X12	F5
SCREW, TAPPING, 4X14	F2
SCREW, TAPPING, 4X16	F25
SCREW, TAPPING, 5X12	F15
SCREW, TAPPING, 5X12	F24
SCREW, TAPPING, 5X12	F29
SCREW, TAPPING, 5X16	F2
SCREW, TAPPING, 5X25	F16
SCREW, U-LOCK FLAT, 6X12	F27
SCREW-WASHER, 3X12	E19
SCREW-WASHER, 3X22	F2
SCREW-WASHER, 4X10	E19
SCREW-WASHER, 4X12	F4
SCREW-WASHER, 4X14	E19
SCREW-WASHER, 4X16	F5
SCREW-WASHER, 4X6	E13
SCREW-WASHER, 5X10	E19
SCREW-WASHER, 5X16	E13
SCREW-WASHER, SPECIAL, 4X10	F2
SEAL SET, FR. FORK	F8
SEAL SET, PISTON	F9
SEAL, AIR CLEANER CASE	F16
SEAL, AIR CLEANER COVER	F16
SEAL, VALVE STEM	E3
SEAT B, SPRING	F8
SEAT COMP., DOUBLE	F14
SEAT, CLUTCH SPRING	E8
SEAT, VALVE SPRING	E3
SET RING, 20MM	E18
SET RING, 23MM	E7
SHAFT, REDUCTION GEAR	E12
SHAFT, ROCKER ARM	E3
SHAFT, RR. BRAKE PIVOT	F20
SHOE SET, BRAKE	F11
SLEEVE, RR. WHEEL	F12
SLIDER, CHAIN	F21
SOCKET COMP.	F2
SOCKET COMP., HEADLIGHT	F1
SOCKET COMP., L. WINKER	F24
SOCKET COMP., R. WINKER	F24
SPANNER, 10X12	F32
SPEEDOMETER ASSY.	F2
SPINDLE COMP., GEARSHIFT	E17
SPINDLE, CAM CHAIN GUIDE	E4
SPINDLE, KICK STARTER	E18
SPRING A, BRAKE ROD	F18
SPRING A, MAIN STAND	F20
SPRING A, SIDE STAND	F20
SPRING ASSY., RR. BRAKE RETURN	F18
SPRING, BRAKE SHOE	F11
SPRING, CAM CHAIN TENSIONER	E4
SPRING, CAM PLATE SIDE	E6
SPRING, CARBON BRUSH	E13
SPRING, CHANGE FRICTION	E16
SPRING, CHANGE SWITCH CONTACT	E17
SPRING, CLUTCH	E8
SPRING, FR. FORK	F8
SPRING, FRICTION STARTER GEAR	E18
SPRING, GEARSHIFT ARM	E17
SPRING, GEARSHIFT DRUM STOPPER	E17
SPRING, GEARSHIFT RETURN	E17
SPRING, KICK RETURN	E18
SPRING, LOCK KEY SETTING	F14
SPRING, ONE WAY RETAINER	E7
SPRING, PAD	F9
SPRING, PRIMARY CLUTCH	E7
SPRING, REBOUND	F8
SPRING, SEAT LOCK	F14
SPRING, SIDE FRICTION	E7
SPRING, STOP SWITCH	F18
SPRING, SUB GEAR	E7
SPRING, VALVE	E3
SPROCKET COMP., CAM CHAIN	E4
SPROCKET COMP., FINAL DRIVEN	F12
SPROCKET, CAM (32T)	E4
SPROCKET, DRIVE (14T)	E16
STAND COMP., MAIN	F20
STATOR COMP.	E11
STAY, AIR SUCTION VALVE	F16-1
STAY, FR. TOP COVER	F27
STAY, LOWER COVER	F29
STEM SUB ASSY., STEERING	F6
STEP ASSY, L PILLION	F19
STEP ASSY, R PILLION	F19
STOPPER, CABLE	F3
STRAINER COMP., FUEL	F13
STRIPE SET	F31
SUB CORD, STARTER MOTOR	E13
SUB GEAR (17T)	E7
SUB HARNESS, BATTERY	F26
SUSPENSION, STARTER RELAY	F26
SUSPENSION, WINKER RELAY	F2
SWINGARM SET, RR.	F21
SWITCH ASSY., FR. STOP	F4
SWITCH ASSY., RR. STOP	F18
SWITCH ASSY., WINKER	F3
SWITCH UNIT, DIMMER	F3

INDEKS DESCRIPTION

Description	Block No.
SWITCH UNIT, HORN	F3
SWITCH UNIT, LIGHTING	F3
SWITCH UNIT, STARTING	F3
(T)	
TANK COMP., FUEL	F13
THREAD COMP., STEERING HEAD	F6
TIRE, FR.	F10
TIRE, RR.	F12
TOP SET	E19
TUBE A, AIR INTAKE	F16-1
TUBE B, AIR INTAKE	F16-1
TUBE C, AIR SUCTION VALVE	F16-1
TUBE, 3.5X110	F16-1
TUBE, AIR CLEANER CONNECTING	F16
TUBE, AIR CLEANER DRAIN	F16
TUBE, AIR VENT	E19
TUBE, FUEL, 5.3X45	F13
TUBE, FUEL, 5.3X560	F13
TUBE, OVERFLOW	E19
TUBE, TIRE	F12
TUBE, TIRE (IRC) (70/90-17M/C)	F10
TUBE, VINYL, 11X15X35	F16
(V)	
VALVE ASSY., AIR SUCTION	F16-1
VALVE COMP., FLOAT	E19
VALVE SET, AIR CUT	E19
VALVE SET, THROTTLE	E19
VALVE, EX.	E3
VALVE, IN.	E3
VOSTOK SILVER METALLIC	F29
VOSTOK SILVER METALLIC	F29
(W)	
WASHER B, LOCK	E7
WASHER, 10X24	E11
WASHER, 14MM	E8
WASHER, 17X23X1.5	E7
WASHER, 30X45X0.8	E7
WASHER, 6X19X2.3	E16
WASHER, 6X19X2.3	E16
WASHER, 7.2X16X2.5	E2
WASHER, 8.5X26X2.3	E4
WASHER, 8MM	E4
WASHER, 8MM	E6
WASHER, 8MM	F11
WASHER, CLUTCH SIDE	E7
WASHER, LOCK	E7
WASHER, LOCK, 20MM	E16
WASHER, OIL BOLT	F4
WASHER, PIVOT BOLT	F21
WASHER, PLAIN, 10MM	F22
WASHER, PLAIN, 10MM	F29
WASHER, PLAIN, 12MM	F21
WASHER, PLAIN, 5MM	F3
WASHER, PLAIN, 5MM	F18
WASHER, PLAIN, 6MM	F19
WASHER, PLAIN, 6MM	F25
WASHER, PLAIN, 8MM	F17
WASHER, PLAIN, 8MM	F21
WASHER, SEALING, 14MM	E4
WASHER, SEALING, 6.5MM	E4
WASHER, SEAT LOCK	F14
WASHER, SPECIAL, 12X23	E16
WASHER, SPECIAL, 14MM	E18
WASHER, SPECIAL, 8MM	F8
WASHER, SPEEDOMETER GEAR	F10
WASHER, SPLINE, 17MM	E16
WASHER, SPLINE, 20MM	E16
WASHER, SPLINE, 20MM	E16
WASHER, SPRING, 10MM	F21
WASHER, STEERING STEM NUT	F6
WASHER, THRUST, 15MM	E16
WASHER, THRUST, 17MM	E8
WASHER, THRUST, 17MM	E16
WASHER, THRUST, 20MM	E16
WASHER, THRUST, 20MM	E18
WASHER, WAVE	F3
WASHER, WAVE	F9
WEIGHT A, STEERING HANDLE	F5
WEIGHT B, STEERING HANDLE	F5
WEIGHT SET, PRIMARY CLUTCH	E7
WHEEL SUB ASSY., RR. *NH303M*	F12
WHEEL., FR. *NH303M*	F10
WINKER ASSY, L FR	F24
WINKER ASSY, R FR	F24
WRENCH, SPARK PLUG	F32

PT Astra Honda Motor
TECHNICAL SERVICE DIVISION

1 8 KWB 9 I 1
Printed by GOP-2008